



CAN DISPLAY DASH & LOGGER SYSTEM QUICK START GUIDE



CD-7	
30-5500	Non-Logging Display
30-5501	Logging Display
30-5502	Non-Logging Display w/Vehicle Dynamics Module
30-5503	Logging Display w/Vehicle Dynamics Module
30-5700	Carbon Non-Logging Display
30-5701	Carbon Logging Display
30-5702	Carbon Non-Logging Display w/Internal GPS
30-5703	Carbon Logging Display w/Internal GPS

CD-5	
30-5600	Non-Logging Display
30-5601	Logging Display
30-5602	Non-Logging Display w/Internal GPS
30-5603	Logging Display w/Internal GPS

AEM Performance Electronics
 2205 126th Street Unit A, Hawthorne, CA 90250
 Phone: (310) 484-2322 Fax: (310) 484-0152
<http://www.aemelectronics.com>
 Instruction Part Number: 10-5500-B
 Document Build 6/18/2018

Introducing The AEM CAN Dash

The AEM Color Dash Display and CAN Logger includes the AEM Dash color display and AEM DashDesign editing software. Screen pages are designed graphically. The screen layout displayed in AEM DashDesign is identical to the layout displayed on the AEM Dash.

In addition to the graphical display editor, AEM DashDesign also provides a comprehensive setup editor to program the input, output and mathematical functionality of the AEM Dash.

Once created, setups are uploaded to the AEM Dash via a USB link.

Kit Contents

30-5500 Contents:

- 1 x CD-7
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- documentation



30-5501 Contents:

- 1 x CD-7L
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- documentation

**30-5502 Contents:**

- 1 x CD-7
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x Vehicle Dynamics Module
- 1 x GPS Antenna
- 1 x Velcro
- documentation



30-5503 Contents:

- 1 x CD-7L
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- 1 x Vehicle Dynamics Module
- 1 x GPS Antenna
- 1 x Velcro
- documentation

**30-5600 Contents:**

- 1 x CD-5
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- documentation



30-5601 Contents:

- 1 x CD-5L
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- documentation

**30-5602 Contents:**

- 1 x CD-5G
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x GPS Antenna
- 1 x Velcro
- documentation



30-5603 Contents:

- 1 x CD-5GL
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- 1 x GPS Antenna
- 1 x Velcro
- documentation

**30-5700 Contents:**

- 1 x CD-7 Carbon
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- documentation



30-5701 Contents:

- 1 x CD-7L Carbon
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- documentation

**30-5702 Contents:**

- 1 x CD-7G Carbon
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x GPS Antenna
- 1 x Velcro
- documentation



30-5703 Contents:


- 1 x CD-7GL Carbon
- 4 x AV Mount Hardware (attached to dash)
- 1 x I/O harness
- 1 x power harness
- 1 x USB communication cable
- 1 x USB bulkhead extension cable
- 1 x GPS Antenna
- 1 x Velcro
- documentation

**Dash Features**




- Full color CAN display and logger (logging versions only)
- Completely user definable CAN receive
- Dual CAN bus
- Full graphics display with up to 6 different pages
- Unit ships with 6 display pages for the AEMNet data stream as the default setup
- Completely user definable graphical layouts
- Stand-alone PC program to create and customize layouts
- Water resistant enclosure with rear facing DTM 12 pin connector
- 7" or 5" (diag) 800x480 super bright color display
- Night mode input
- 7 shift lights and 2 alarm LEDs
- 200mb onboard logging memory (logging versions only)
- Up to 1000hz sample rate (logging versions only)
- Onboard 5Hz GPS/GLONASS receiver (GPS versions only)
- Log data downloaded and viewed with AEMdata via USB port with sealed bulkhead extension cable (logging versions only)
- Beacon input

Dash Mechanical and Mounting


CD-7 Mechanical

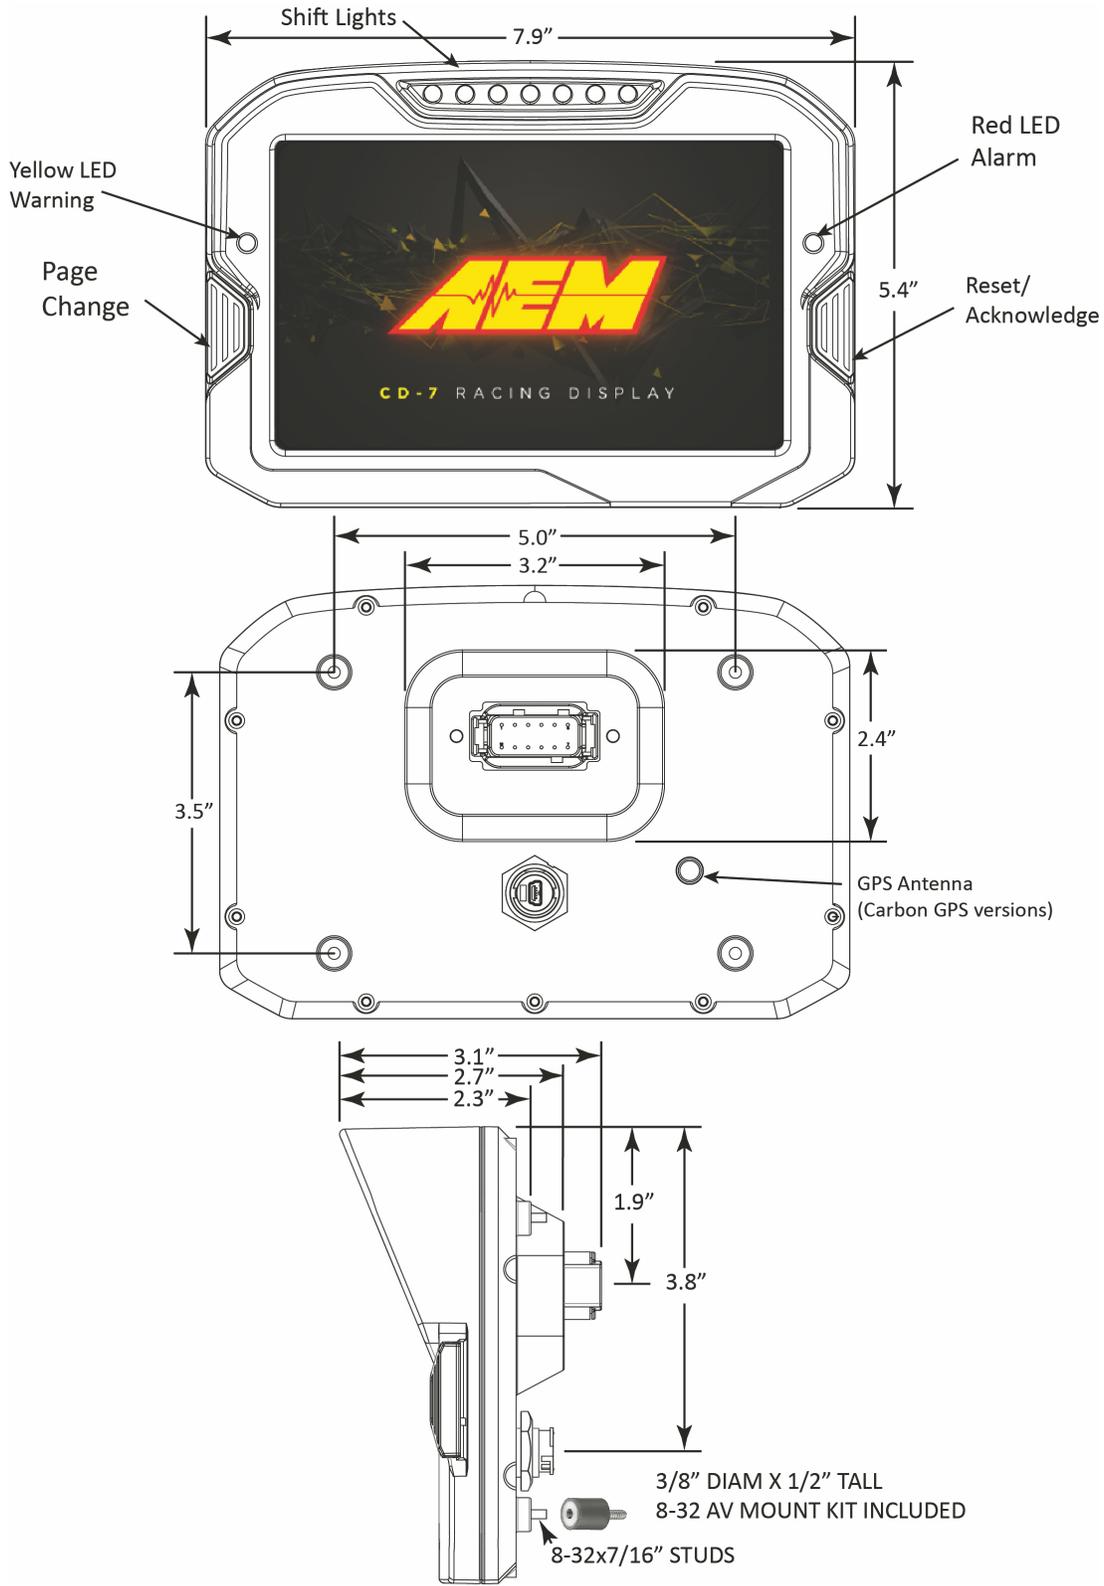

CD-5 Mechanical

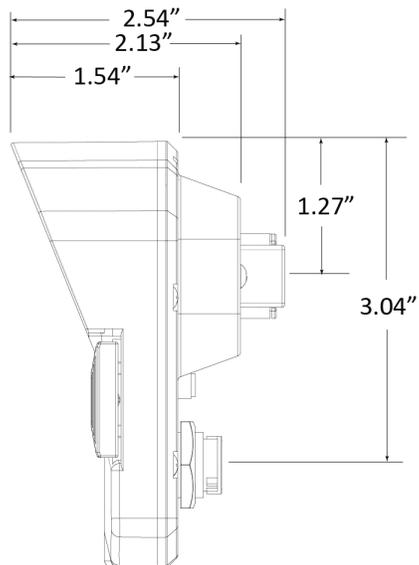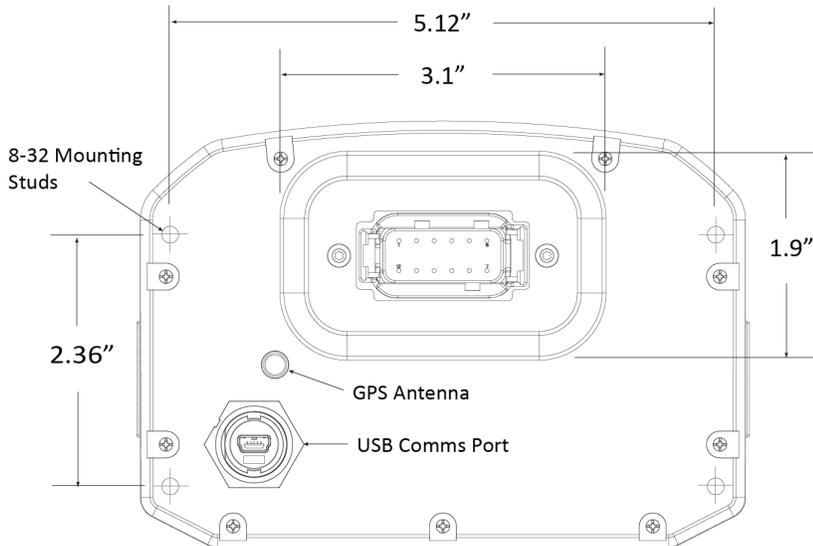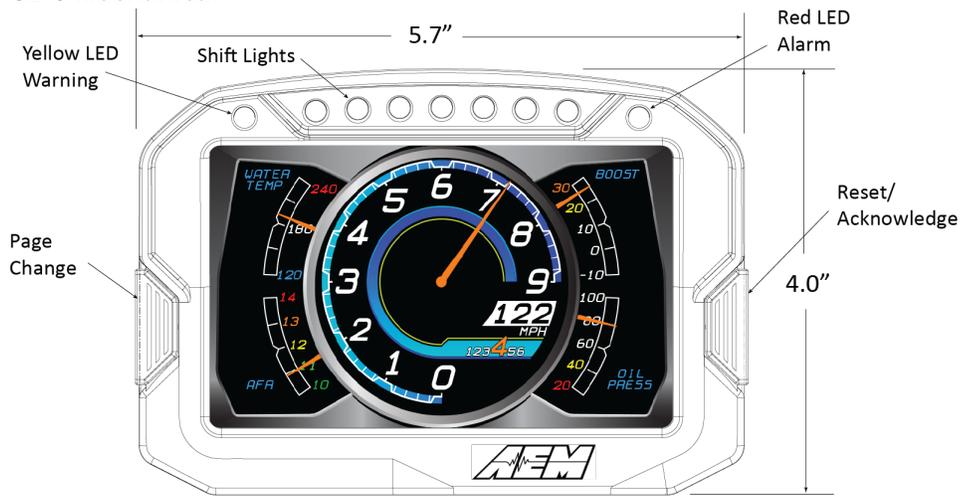

Dash Harness and Basic Wiring

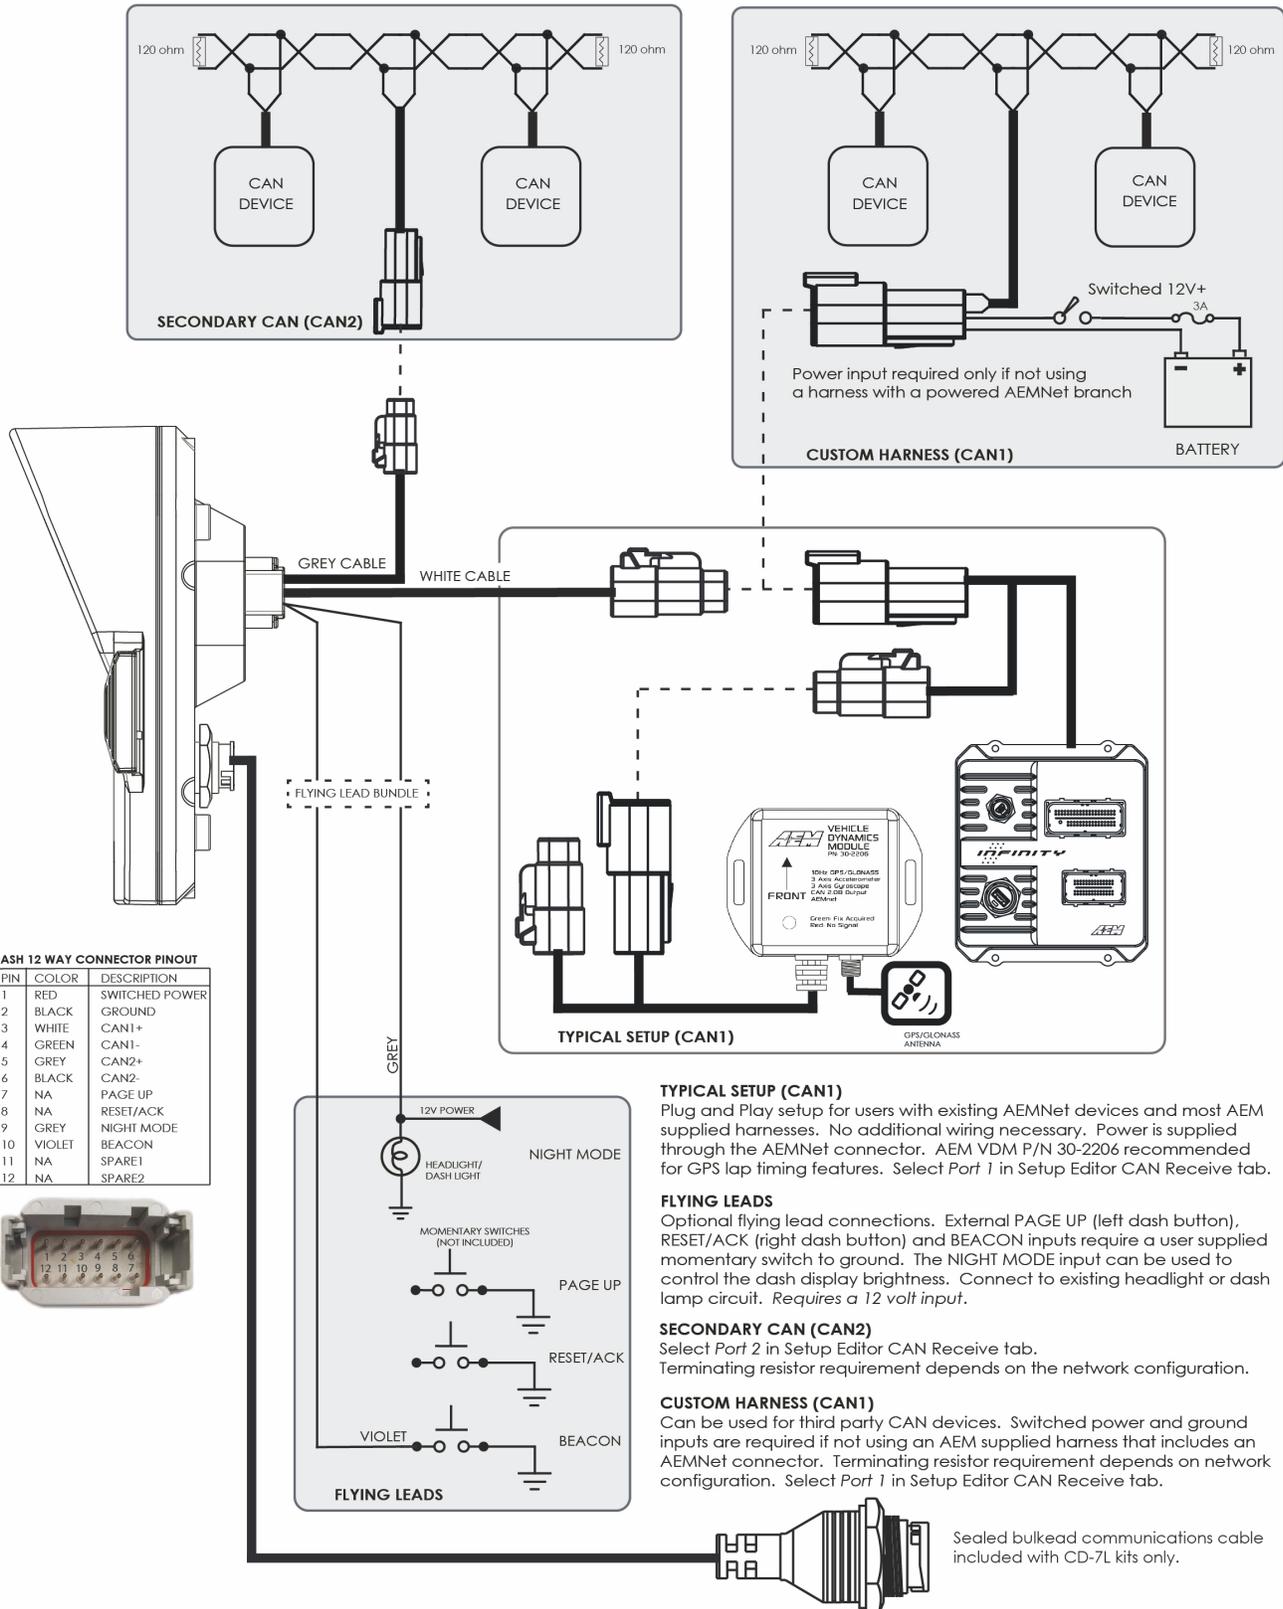

DASH 12 WAY CONNECTOR PINOUT

PIN	COLOR	DESCRIPTION
1	RED	SWITCHED POWER
2	BLACK	GROUND
3	WHITE	CAN1+
4	GREEN	CAN1-
5	GREY	CAN2+
6	BLACK	CAN2-
7	NA	PAGE UP
8	NA	RESET/ACK
9	GREY	NIGHT MODE
10	VIOLET	BEACON
11	NA	SPARE1
12	NA	SPARE2



TYPICAL SETUP (CAN1)

Plug and Play setup for users with existing AEMNet devices and most AEM supplied harnesses. No additional wiring necessary. Power is supplied through the AEMNet connector. AEM VDM P/N 30-2206 recommended for GPS lap timing features. Select Port 1 in Setup Editor CAN Receive tab.

FLYING LEADS

Optional flying lead connections. External PAGE UP (left dash button), RESET/ACK (right dash button) and BEACON inputs require a user supplied momentary switch to ground. The NIGHT MODE input can be used to control the dash display brightness. Connect to existing headlight or dash lamp circuit. Requires a 12 volt input.

SECONDARY CAN (CAN2)

Select Port 2 in Setup Editor CAN Receive tab. Terminating resistor requirement depends on the network configuration.

CUSTOM HARNESS (CAN1)

Can be used for third party CAN devices. Switched power and ground inputs are required if not using an AEM supplied harness that includes an AEMNet connector. Terminating resistor requirement depends on network configuration. Select Port 1 in Setup Editor CAN Receive tab.

Drawing: BASIC HARNESS WIRING




PRODUCT: AEM CD-7/CD-7L
AEM CD-5/CD-5L

Date: 11/29/2017

Rev: E

Engineer:

Optional OBDII and Power Cable Kits

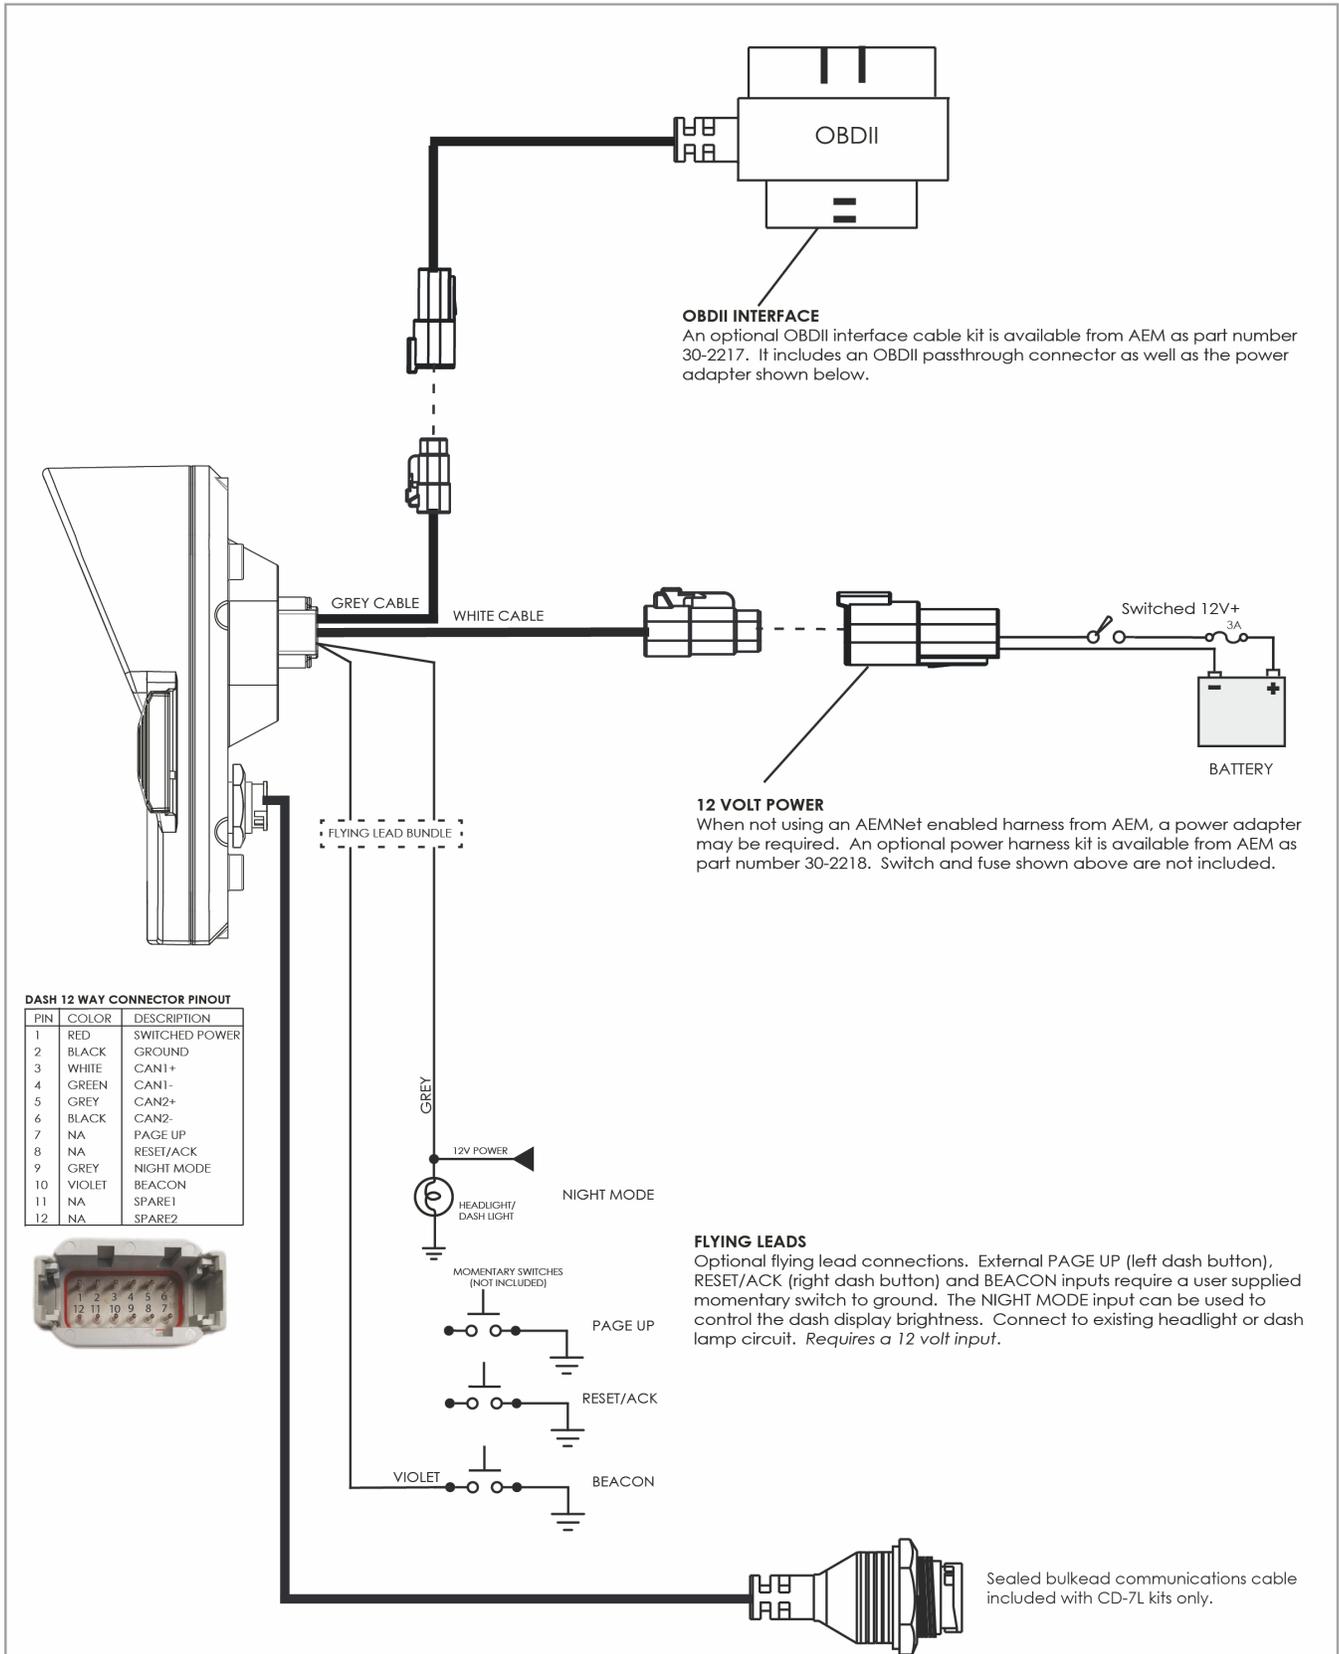

DASH 12 WAY CONNECTOR PINOUT

PIN	COLOR	DESCRIPTION
1	RED	SWITCHED POWER
2	BLACK	GROUND
3	WHITE	CAN1+
4	GREEN	CAN1-
5	GREY	CAN2+
6	BLACK	CAN2-
7	NA	PAGE UP
8	NA	RESET/ACK
9	GREY	NIGHT MODE
10	VIOLET	BEACON
11	NA	SPARE1
12	NA	SPARE2



Drawing: **OPTIONAL OBDII AND POWER WIRING**

PRODUCT: AEM CD-7/CD-7L
AEM CD-5/CD-5L

Date: 11/29/2017

Rev: C

Engineer:

Installing AEM DashDesign

AEM DashDesign is distributed as a single install executable. To install, run AEM DashDesign Setup.exe and follow the on-screen instructions including those requiring you to restart your PC if necessary.

Installing USB Drivers

The installation program will automatically install the USB drivers required by AEM Dash. However, on rare occasions, it may be necessary to install the USB drivers manually. To do this:

- Connect the AEM Dash to the PC.
- When the add new hardware wizard appears, select "Install from a list or specific location" and click Next.
- Choose "Search for the best driver in these locations" and check "Include this location in the search"
- Click the Browse button and navigate to the Drivers folder sub folder in the AEM DashDesign installation directory.
- Click the Next button and the driver installation will proceed automatically.

VDM to Dash

The AEM Vehicle Dynamics Module, PN 30-2206 can be used in conjunction with the AEM dash for lap timing and track mapping features.




VDM Features:


- GPS latitude & longitude delivers AEMdata track map functionality via AEMnet CAN bus
- Easily Add GPS, lateral G, altitude, pitch and roll data to engine data logs
- Simply install it in the correct position, connect to AEMnet and the data streams through AEMnet CAN bus
- Continuous time data can be used for Infinity USB log file naming
- Accelerometers supply all 3-axis acceleration data for chassis tuning
- Ideal for road racers who want to use the gyrometer data for suspension adjustments
- Perfect for drag racers who want G-loads and wheel stand data
- GPS vehicle speed, heading and altitude logged for data analysis, lap comparisons

- Status LED indicates power & GPS signal
- Weather resistant enclosure with IP67 rated GPS/GLONASS antenna

Go to **Setup | Lap Timing...** Select the GPS button to configure for GPS lap timing. A virtual start/finish line creation feature allows you to use the beacon input (violet wire in flying lead harness) to set a virtual start/finish line. While driving the course, press the momentary beacon switch when you cross the start/finish line. Hold for a few seconds until the left and right LEDs flash. The system captures the location information when you first press the button. Holding for a few seconds eliminates the likelihood of false triggering the input. You can define your virtual track width in the dialog window. Set to the approximate width of the track surface plus some extra. The dash creates a start finish line the width of the track perpendicular to the heading when the start finish is set. It then checks whether the previous two points cross this line; the only caveat being that the heading is +/- 90 degrees of the original heading.

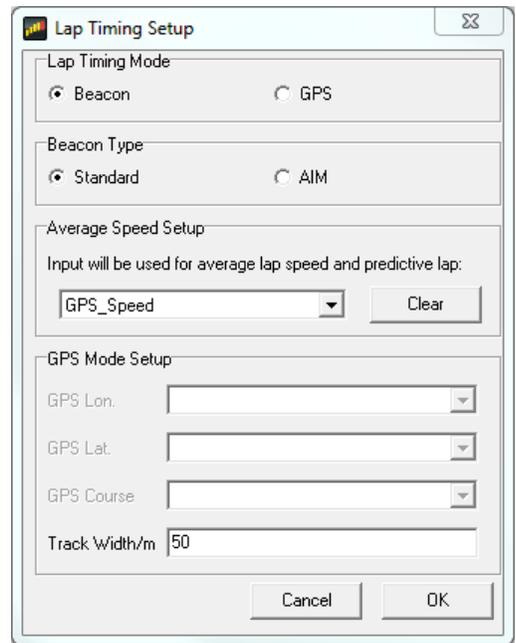


Installation

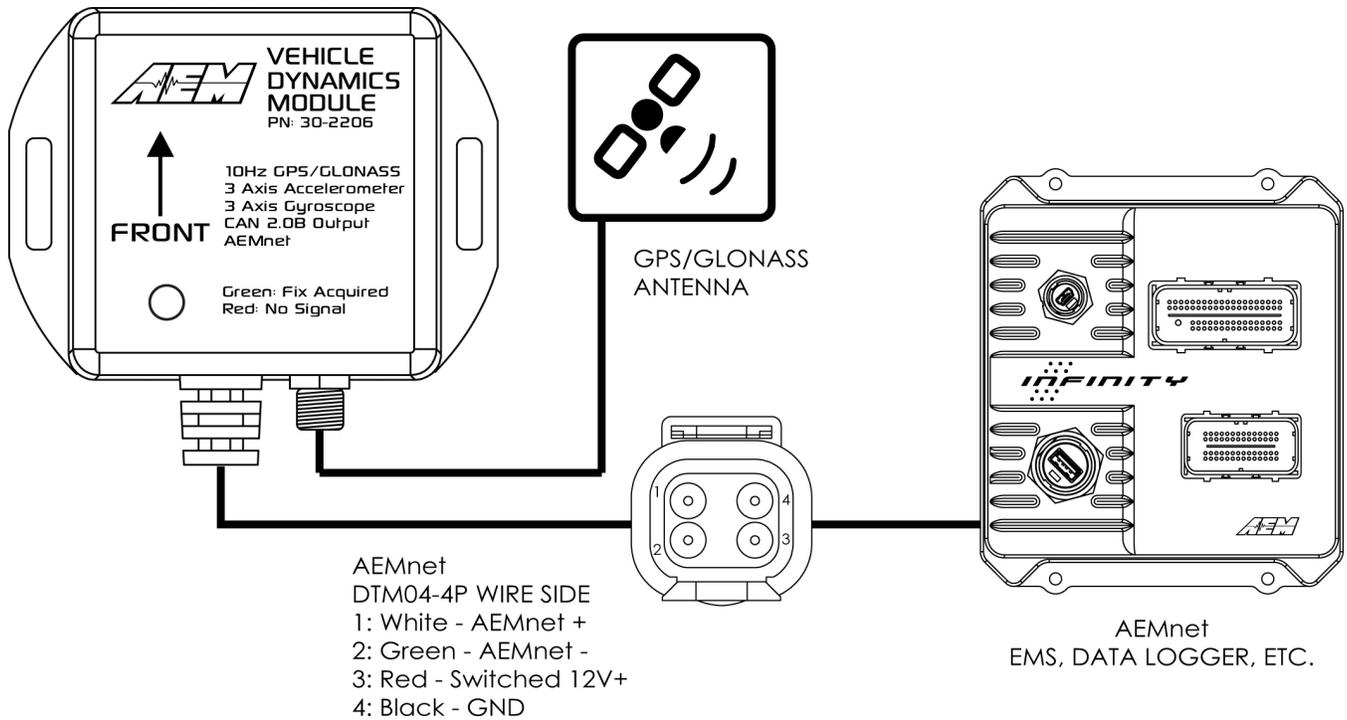

The VDM is equipped with an AEMnet connector (power, ground, and CAN) so that it is a true plug and play experience when used with other AEMnet products such as the Infinity ECU.

Ideally, the VDM module should be installed near the center (both fore/aft and side-to-side) of the vehicle and as low as possible. For example, the module may be mounted to the floor of the vehicle between the two front seats. The module should be mounted using the provided "hook-and-loop" material or may be more rigidly mounted using fasteners through the module's mounting ears. Take care to avoid over-torquing mounting fasteners, if used.

The antenna should be mounted in a location where the top is pointed towards, and has a clear view of, the sky. The bottom of the antenna is magnetic or additional hook-and-loop material is provided for mounting; the dashboard or rear package shelf are **not** acceptable locations. The antenna should be mounted as high as possible in the center of a metal roof away from other antennas or structures. If the roof of the vehicle is non-metallic then a flat piece of metal at least five inches in diameter, to function as a ground plane, should be fabricated upon which the antenna should be placed.

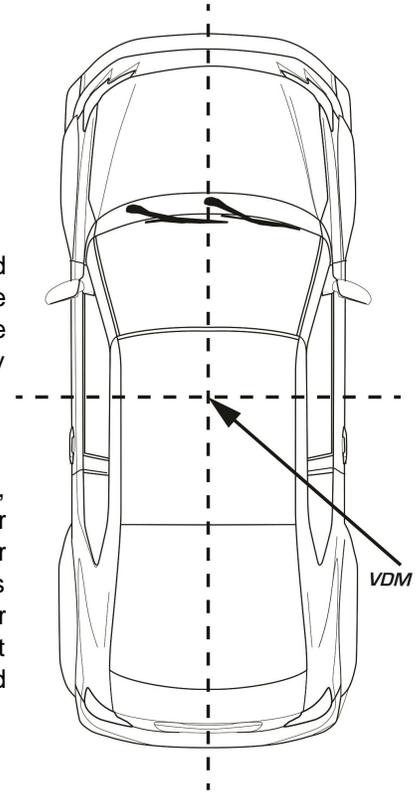

Status LED

There is a status LED located on the top of the VDM module that gives an indication of its operating status, specifically the quality of the current GPS signal:

LED	Description
OFF	The device is not powered
FLASHING RED	No valid GPS fix
FLASHING GREEN	Less than 4 satellites in view
GREEN	4 or greater satellites in view
OTHER	Please contact AEM Support

Channels / Data

GPS

The VDM utilizes an internal 10Hz GPS/GLONASS receiver with a matching external active antenna. Faster time to fix, and better global coverage is afforded by the support of both the GPS and GLONASS constellations. The module is designed with an internal battery that will retain the last known satellite position (ephemeris) while power is disconnected from the VDM for several days. This will allow for a very fast time to fix (<1 sec typ) once the device is turned on again; if power is removed for an extended period of time then the time to fix will increase. The internal battery is automatically recharged and never needs to be replaced.

The following GPS channels are output on AEMnet for logging on your Infinity ECU or other device:

Channel Name	Notes
GPS Latitude [deg]	+ = North, - = South
GPS Longitude [deg]	+ = East, - = West
GPS Speed [mph]	Speed
GPS Altitude [ft]	Above Mean Sea Level (MSL)


GPS Course [deg]	Course over ground, NOT heading
GPS Satellite Count	"Visible" number of satellites
GPS Valid	1 = Valid Fix, 0 = No Fix
GPS Year	UTC Time
GPS Month	UTC Time
GPS Day	UTC Time
GPS Hours	UTC Time
GPS Minutes	UTC Time
GPS Seconds	UTC Time

Accelerometer / Gyroscope

The following accelerations and yaw rate channels are output on AEMnet for logging on your Infinity ECU or other device:

Channel Name	Notes
Acceleration X [g]	*Longitudinal
Acceleration Y [g]	*Lateral
Acceleration Z [g]	*Vertical
YawRate X [deg/s]	*Roll
YawRate Y [deg/s]	*Pitch
YawRate Z [deg/s]	*Yaw

*If +x is mounted in the direction of travel

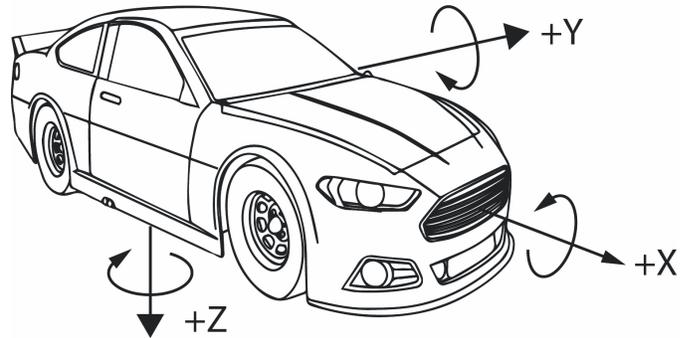

Air/Fuel Sensors and Devices to Dash

The AEMNet CAN message transmission is enabled by default on the following devices. Refer to your harness documentation to identify the CAN terminals.

30-03X0 X-Series UEGO
 30-4900 Wideband Failsafe
 30-4911 Flex Fuel Failsafe
 30-2340 4Ch UEGO

Series 2 EMS and EMS-4 to Dash


The AEMNet CAN output must be enabled in your ECU before the dash can receive messages. Select **Wizards | Setup Wizard** and choose Telemetry: AEMNet from the Wizard Types column. Left click on the Configuration Name AEMNet Datastream and click the Apply button to enable.

Infinity to Dash

The AEMNet CAN message transmission is enabled by default on Infinity ECUs. No additional software setup in your ECU calibration is required. Refer to your harness documentation or Infinity hardware specification document to identify the CAN terminals.

22 Channel CAN Sensor Module to Dash

An AEM 22 Channel CAN Sensor Module (30-2212) can be paired with a CD dash to provide analog, digital and frequency signals for display and logging. The module is added to the Port 1/AEMnet network using the AEMnet connector "Y" in its cable – see diagram. See CAN Sensor Module instruction manual for full installation guidelines.

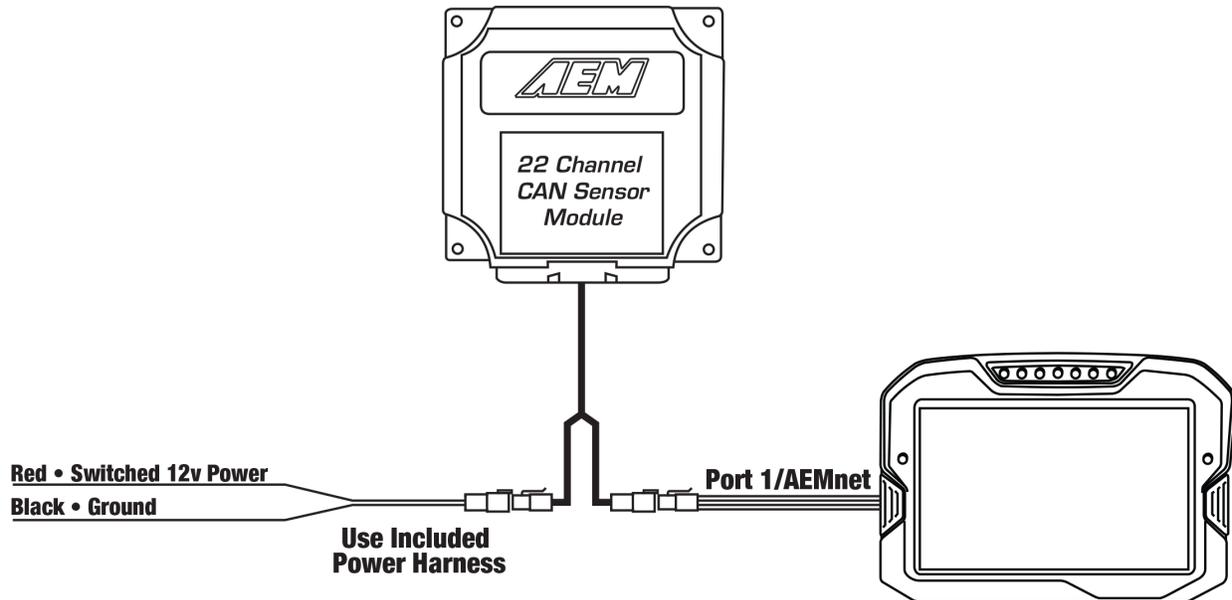

AEM has supplied a number of pre-configured layouts for use with the CAN Sensor Module. The file name of each layout describes the vehicle setup that the layout has been configured for. Vehicle setups include carbureted or fuel injected, drag race or road race, with or without AEM VDM and US or SI units. All layouts are based on the suggested channel assignments listed in the pinout in the CAN Sensor Module instructions.

Channel Calibration


The channel data sent from the CAN Sensor Module is in a "raw" form such as voltage, frequency or resistance. Inputs from sensors such as pressure transducers or temperature sensors can use a predefined transfer function to go from raw units to engineering units. Other channels such as Vehicle Speed, Fuel Level and Throttle Position will require that a calibration be performed in order to get the channel to report accurately. See the 30-2212 manual for more details.

- **Vehicle Speed** - Base units is frequency. A scalar is applied to the raw frequency to get speed in MPH. The calibration is $\text{scalar} = (\text{tire diameter inches} * 0.18) / \text{number of speed sensor trigger teeth}$. For example, the scalar for a 26" tire and 12 teeth on the speed sensor trigger is $(26 * 0.18) / 12$ which is 0.390. To set the Vehicle Speed scalar, go Setup>Display>Scalars and locate VehicleSpeed_scalar. Using provided calibration calculation will get speed reading very close but speed calibration can be verified with a dyno or GPS. To decrease Vehicle Speed, decrease the VehicleSpeed_scalar value.
- **Fuel Level** - Base units is Ohms. A function table is used to assign a fuel level percentage to an Ohms value. To adjust the function table go Setup>Display>Functions and locate FuelLevelCalibration. While monitoring live data, note the Ohms value when the tank is completely empty and also when completely full. If the change in level sensor resistance is linear to fuel usage, the table can be left with empty and full values only. If the fuel tank is oddly shaped and the change in level sensor resistance does not represent a linear change in fuel usage, the function table can be setup to report a fuel level for each gallon added to the fuel tank from empty to give a more accurate reading.
- **Throttle Position** - Base units is volts. A function table is used to assign a throttle position percentage to a voltage value. To adjust the function table go Setup>Display>Functions and locate ThrottlePosCalibration. While


monitoring live data, note the voltage value when the throttle is completely closed and also when completely open. Assign the closed throttle voltage to 0 and the full open throttle voltage to 100.

OBDII Setups


AEM's dash with optional OBDII interface cable P/N 30-2217 puts multiple channels of data at your fingertips by reading the CAN bus stream of your 2008+ model year vehicle's OBD port and transmitting those channels to the dash. To configure your dash for OBDII data display, the dash must first scan your vehicle's OBDII port to identify all ECUs and available PIDs. PID stands for Parameter ID. These are codes used to request specific data from a vehicle. To begin the scan process, Launch AEM Dash Design and go to **Tools | Scan Vehicle OBDII...**

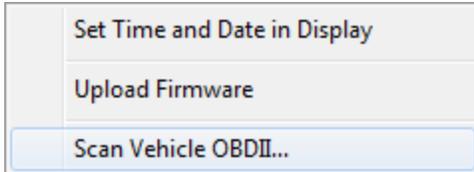

The OBDII Scan Wizard will launch to guide you through the process.

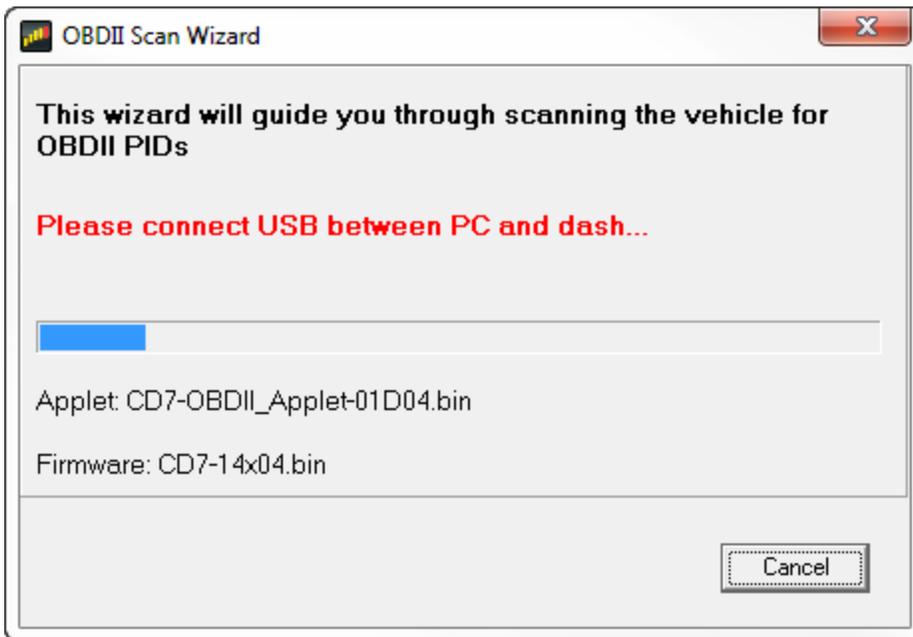

Be sure the dash is powered up and connect the USB cable between the dash and your PC and not plugged into the car yet.

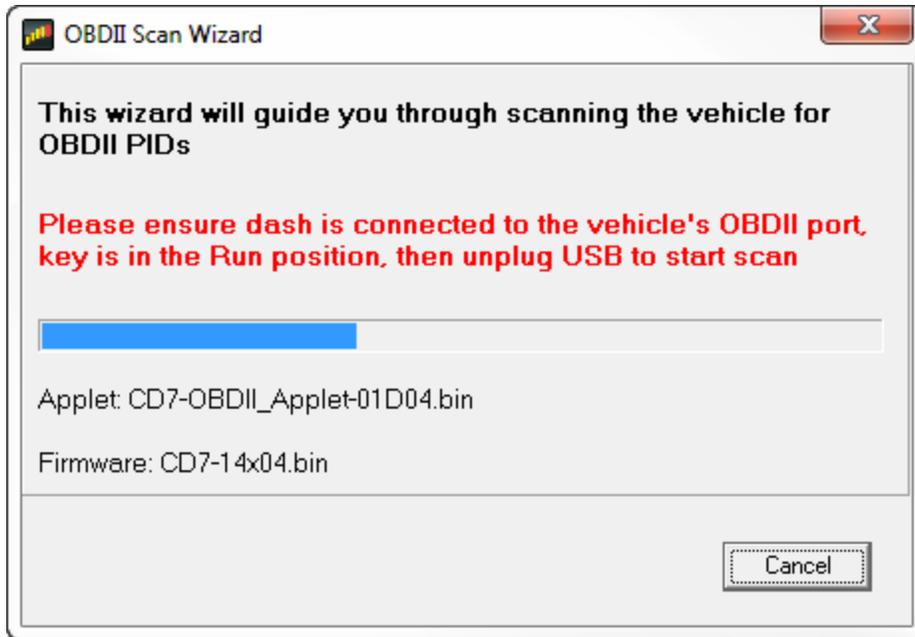

Connect the OBDII connector to your vehicle's OBDII port then unplug the USB cable to begin the scan.

```

                                OBDII Discovery Applet 01D03


CAN 1 ---                               CAN 2 - 500kHz
No OBDII ECUs found                       3 OBDII ECUs found
ECU 1: Not found                          ECU 1: Found 21 PIDs
ECU 2: Not found                          ECU 2: Found 5 PIDs
ECU 3: Not found                          ECU 3: Found 3 PIDs
ECU 4: Not found                          ECU 4: Not found
ECU 5: Not found                          ECU 5: Not found
ECU 6: Not found                          ECU 6: Not found
ECU 7: Not found                          ECU 7: Not found
ECU 8: Not found                          ECU 8: Not found

Discovery Complete, OBDII info logged
Reconnect USB cable to complete process


Port:1, Ecu:2, pids 01 to 1c                Port:1, Ecu:8, pids 01 to 46

```


The dash will scan your vehicle and identify all available PIDs. When the scan is complete the message *Reconnect USB cable to complete process* will be displayed **on the dash**. The following window will be displayed in the Dash Design software. At this point in the process, you have the option to press the right button on the dash to scroll through a live display of available PID data.

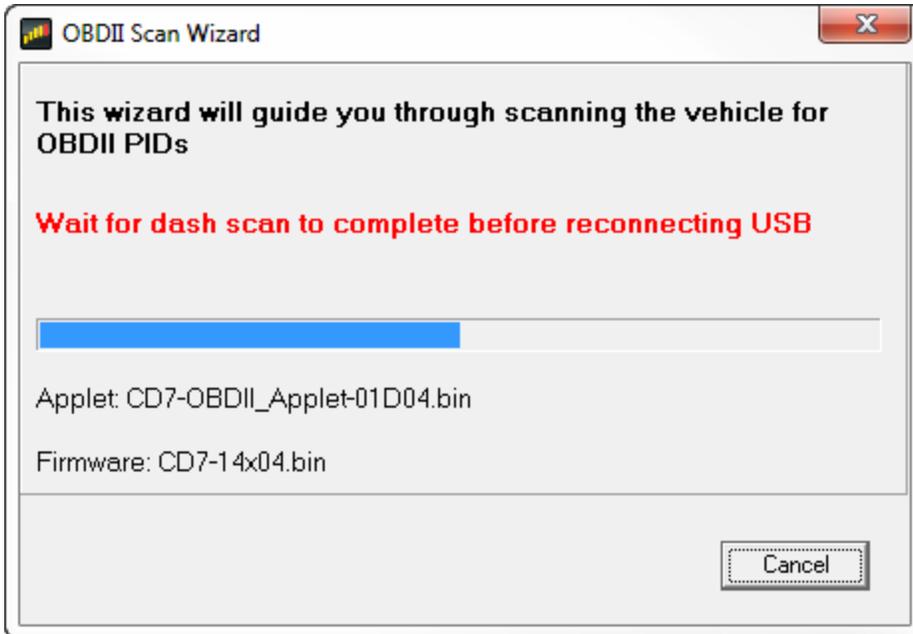


Connect the USB cable to your PC.

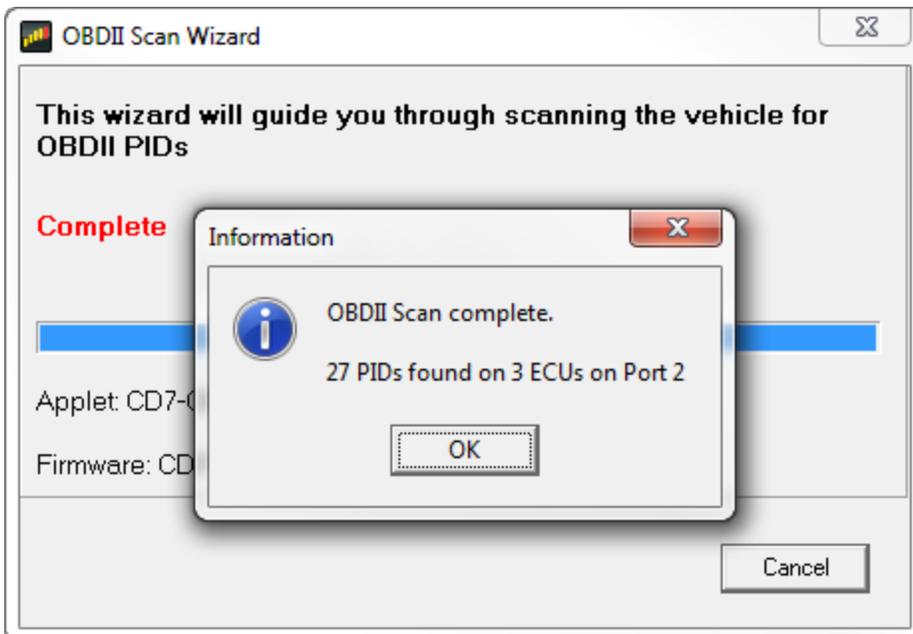

The scan is complete. Click OK to proceed. **NOTE: At this point, we recommend saving the setup file as there may have been changes applied during the scan process. You must upload your setup before proceeding by selecting File | Upload to Display... You can also use the hotkey combination Ctrl+U. If the setup file is not loaded into dash after completing OBDII Scan Wizard there can be errors or missing data.**

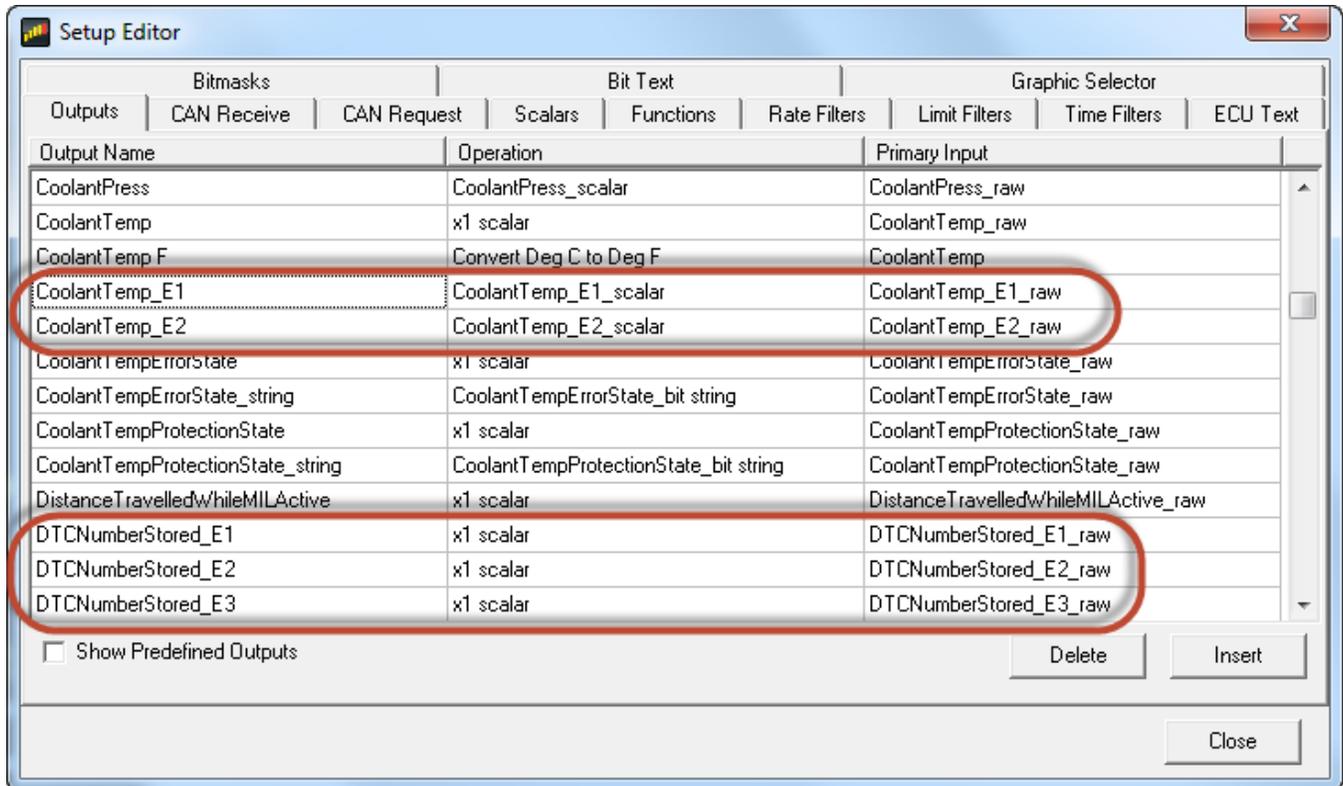

Open the Setup Editor. OBDII PIDs will be automatically added to your list of available outputs. The circled examples above represent the same PID from different vehicle ECUs. In these cases, the system will append a suffix E2 for ECU2 and so on but can be ignored as they are non standard PIDs and may perform differently from expected. These outputs are now available for use as inputs to gauges for display on your dash. To see a complete list of PIDs obtained from your vehicle, click on the CAN Receive tab and choose to show Port 2. Port 2 is the default for OBDII messages.

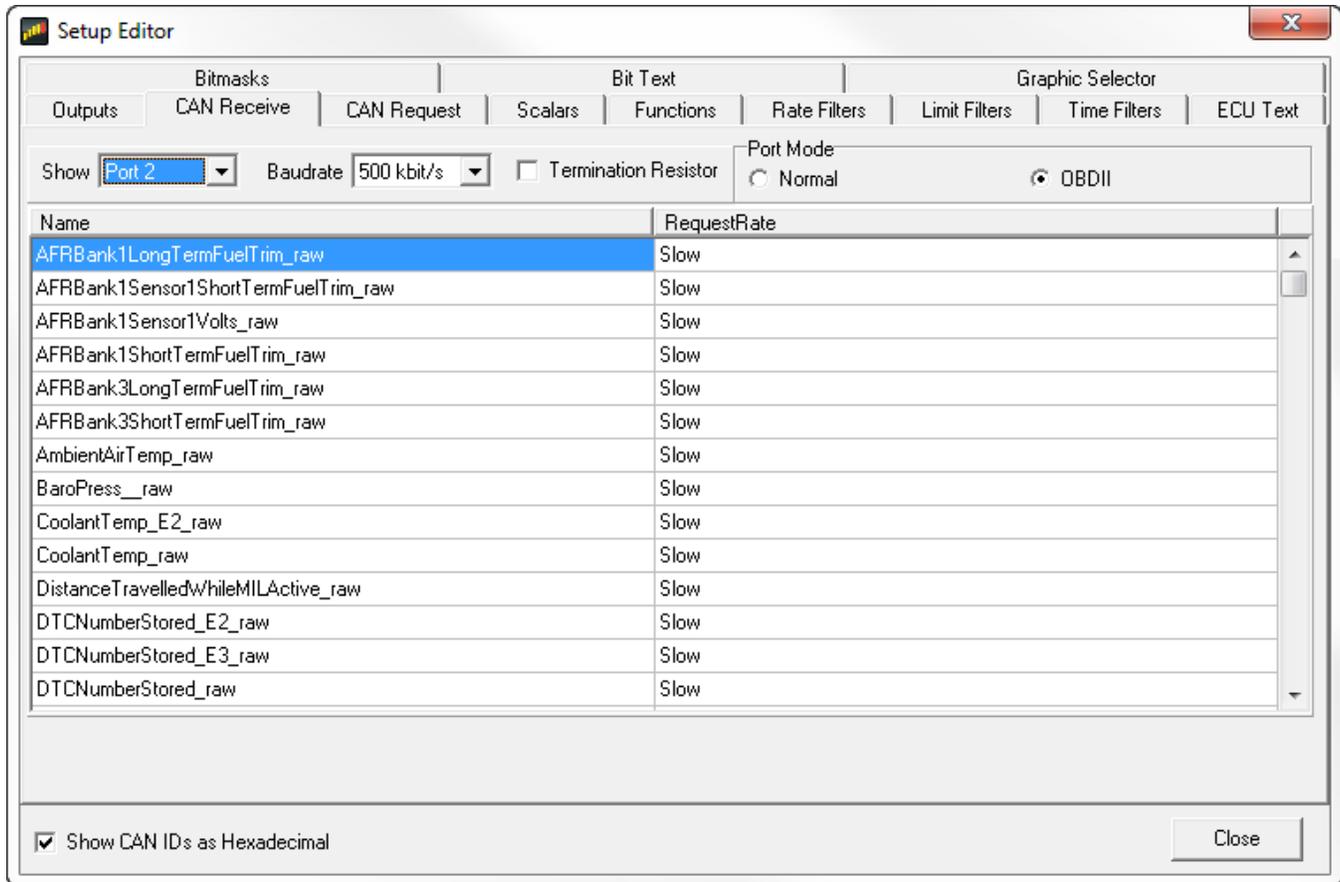

This is a complete listing of available PIDs. An AEM supplied setup file for OBDII messages will be located in the \Documents\AEM\DashDesign\Setups\Generic folder. The basic default OBDII file is named Default-Black-OB2.aemcd7.

Complete PID list will vary between cars so modification to the default setup is encouraged to view desirable data.

Note: Any PID not logged or displayed on the setup will not be used or active while car is running. To better view important data, increase request rate and remove unnecessary PIDs from setup.

Editing Display Setups

The display setup file has the extension .aemcd7 and contains all the information needed to configure a color display including connection definition, sensor calibration and screen layout.

Opening and Saving Setups

To Open an existing color display setup:

- Select **File | Open...**. The file open dialog is shown.
- Select the required display setup file and click **Open**.

The last five files opened can be accessed by selecting **File | Reopen** followed by the appropriate file from the sub menu.

To save a setup under a new filename, select **File | Save As...**, enter a file name in the file save dialog and click the **Save** button. To save a setup with the current name, select **File | Save**.

If a setup or AEM DashDesign is closed and the setup has changed since the last save, a prompt will appear asking if the changes to the setup are to be saved. Select **Yes** to save the changes, **No** to abandon the changes or **Cancel** to return to editing the current setup.

Creating a New Display Setup

To create a new display setup:


- Select **File | New**
- Select **Setup | Display | CAN Receive**

Default Display Setups

AEM supplied setup files will be located in the \Documents\AEM\DashDesign\Setups folder.

You can copy entire pages from another file. First, make sure the target page is open and selected and that the layout is unlocked.

Select: **Edit | Paste Screen From Setup File**

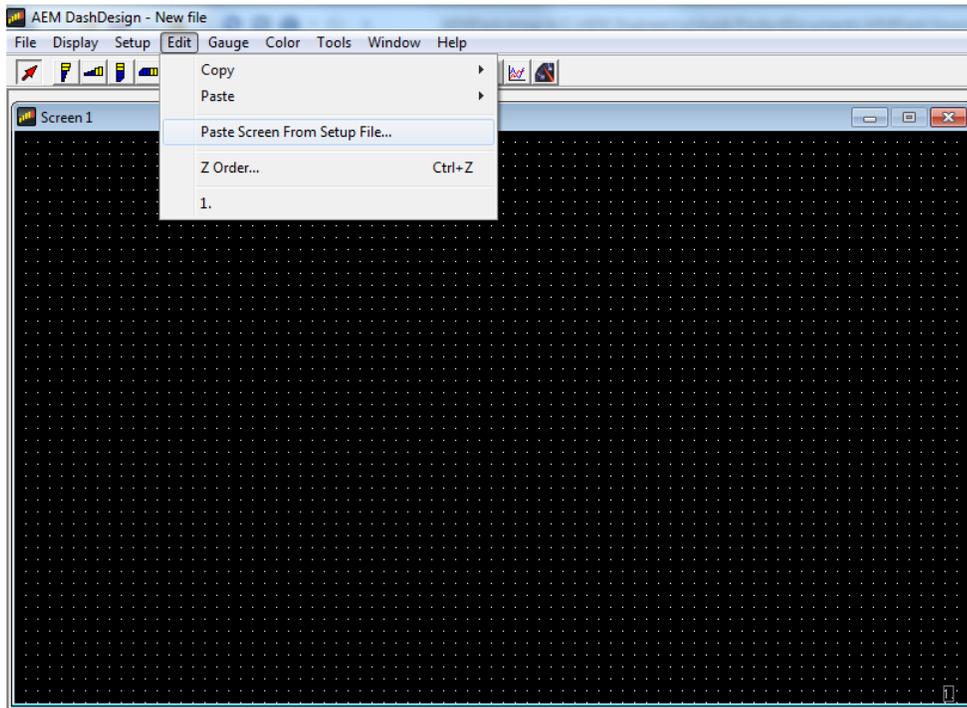



Select the file that contains the screen you want to copy. A window will open showing the six screens in the target file.



Select the screen you want to import by clicking on the screen name and Clicking OK.


Basic Editing of Default Setups

To view screens for editing go to **Display | Screen X**

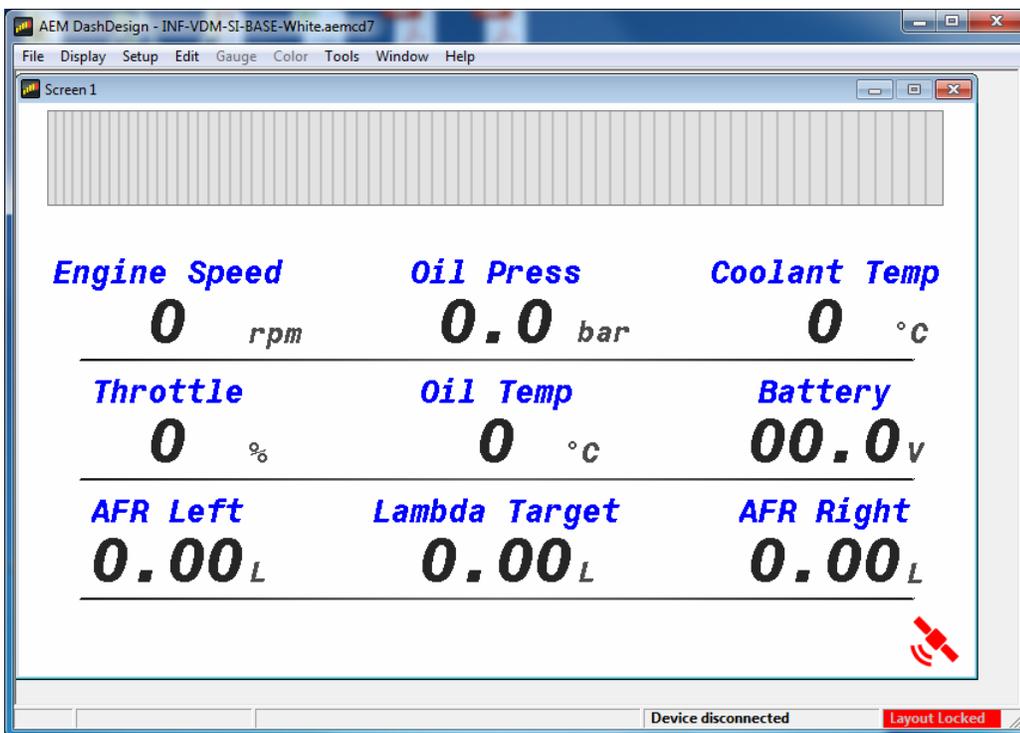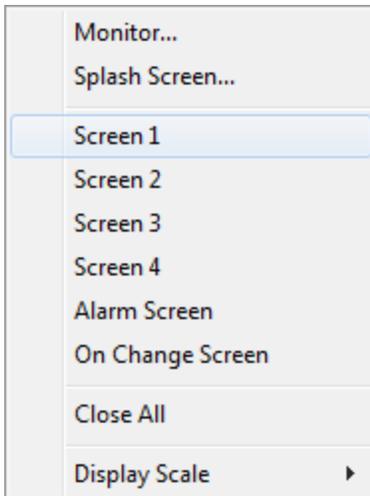

Layout Locked

The Layout Locked feature displayed at the bottom right of the screen prevents unwanted moving of screen items.

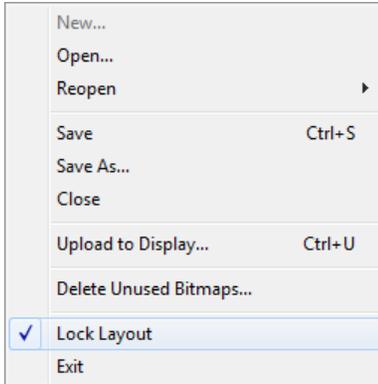


The Layout Locked feature can be disabled by going to **File | Lock Layout** or by clicking the red Layout Locked area of the screen. Caution as inadvertent clicks and drags can move items unintentionally. Some basic editing of the default screens is possible even with the Layout Locked feature turned on. It is a good idea to leave the Layout Locked activated until you specifically need to move or delete a gauge. Having it on prevents you from accidentally moving a gauge or deleting one inadvertently. When the layout is locked, the editing icon menu is hidden.


Engine Speed

0 rpm

Double clicking on the Engine Speed text label in the example above will display the available editing menu.

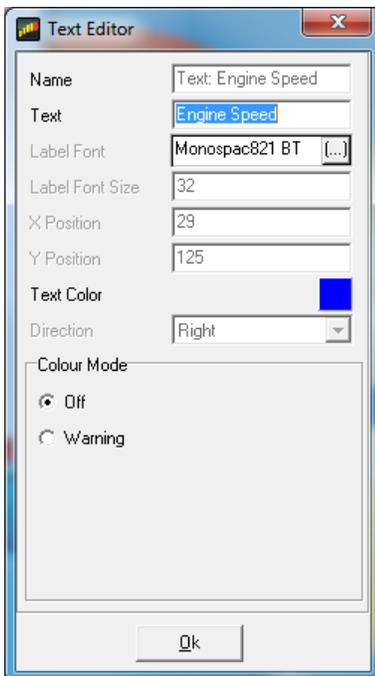

The dialog allows editing of all unlocked characteristics if Layout Locked is turned on. Locked characteristics are typically related to size and position. To change the text displayed in the text label example above, simply highlight the text and edit. Double clicking on the "0" in the example above opens the value label editor. This is live data displayed on the screen.

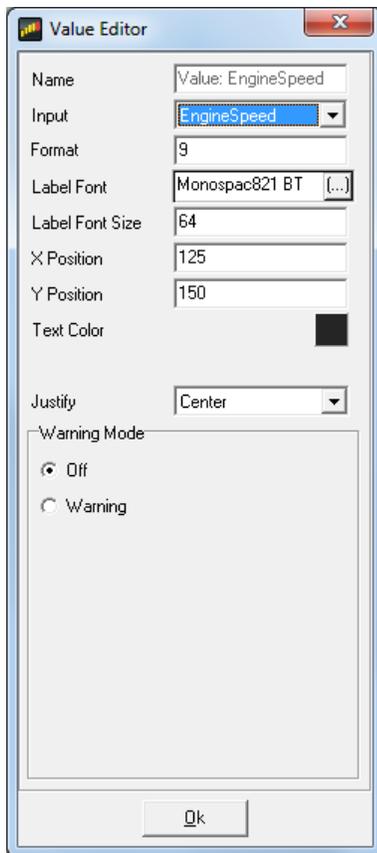

Here you can change the input displayed at this location. Click on the drop down to view a list of available channels.

Uploading a Setup to a Display

Uploading a setup programs the current setup into the color display.

AEM DashDesign communicates with the AEM Dash via USB.


To upload a setup:

- [Open](#) a display setup.
- Connect the AEM Dash to the PC using a USB cable. The AEM Dash will go into upload mode and will show "**USB cable connected**".
- Select **File | Upload to display...** or press Ctrl + U
- A dialog box will appear indicating the setup is being sent
- On the AEM Dash, the upload progress will be shown as a percentage. This progress percentage IS NOT shown in the AEM DashDesign interface.
- Once the setup has been received the flash will be erased; the AEM Dash will show "**Erasing flash**". This process will take a few seconds.
- Once the flash has been erased, it will be programmed; the AEM Dash will show the progress of programming as a percentage. Do not remove the power to the display at this point.
- Once the programming has finished, an **Upload complete, OK to disconnect** message will be displayed as shown in the example below. Unplug the USB cable to reboot the dash with the new setup. Do not disconnect the USB cable before this message is displayed.

Downloading a Setup From a Display

Firmware 14x20 and later allows for layout files to be downloaded from the CD dash display. It is important to note that only layouts that have been uploaded to the dash with Allow Downloading enabled will be able to be downloaded. It is also important to note that any layout file uploaded to a dash that has Allow Downloading enabled can be downloaded by anyone with PC access. If file security is a concern, it's advised to not enable Allow Downloading in order to limit access to ones files.


To allow a file to be downloaded from a CD dash, first enable Allow Download (go File>Allow Download) and then upload the layout to the dash. Now this file maybe downloaded by anyone with PC access to the dash. If file security is a concern, it's suggested to not enable Allow Download.

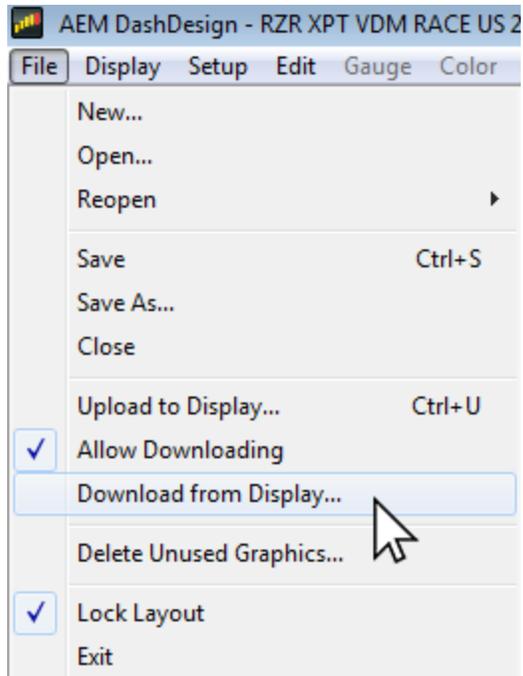

To download a layout from a display, go File>Download from Display and save the file when prompted.

The Display Editor

The display editor is the core tool for editing a setup. To open the tool, go to **Setup | Display...**

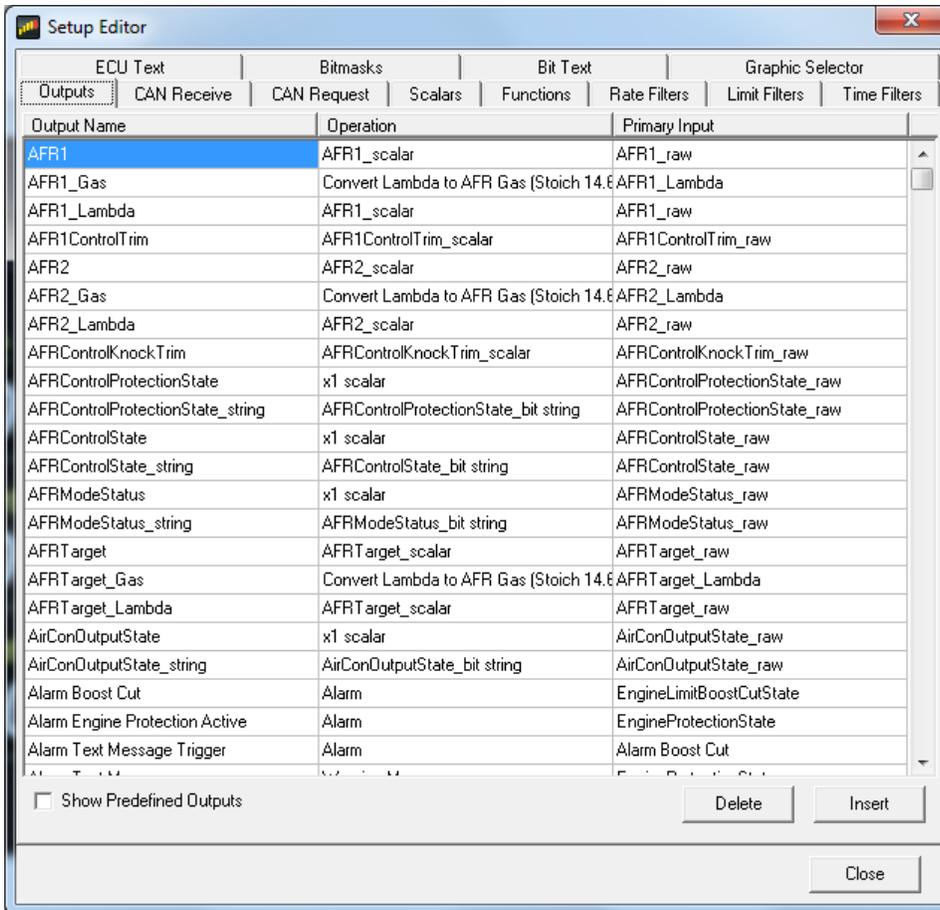

You can think of the display editor as a collection of tools for creating items on your screens. An AEM DashDesign setup consists of four logical components: Sources, outputs, sensors and gauges. These are defined as follows:

- **Sources** or primary inputs are raw data manipulated by an operation.
- **Outputs** are objects that obtain information from one or more sources or other outputs. An output manipulates the obtained data according to the operation associated with the output. The result can then be used in a gauge or another output.
- **Operations** are objects that define how the data is manipulated by an output. Examples of operations are scalars, functions and alarms.
- **Gauges** are objects that are placed on a screen page. There are two types of gauge; static and variable.
 - **Static** gauges do not change their appearance on the screen and include gauges such as text labels or graphics.
 - **Variable** gauges change their appearance to reflect data obtained from an output. Examples of variable gauges are bar graphs, tachos and numerical text gauges.
- **Predefined Outputs** are pre-configured within the system and can be used in many ways. Some examples include: Log Mem Free (kb) which displays the amount of free logging memory (logging versions only) and Night Mode Input Status. This output displays the state of the Night Mode 12v input (Grey wire in flying lead bundle).


Show Predefined Outputs

Click the Show Predefined Outputs box in the Display Editor to add all Predefined Outputs to the list.

OUTPUT
Can be assigned to gauges


OPERATION
Manipulated data

SOURCE
Raw Input

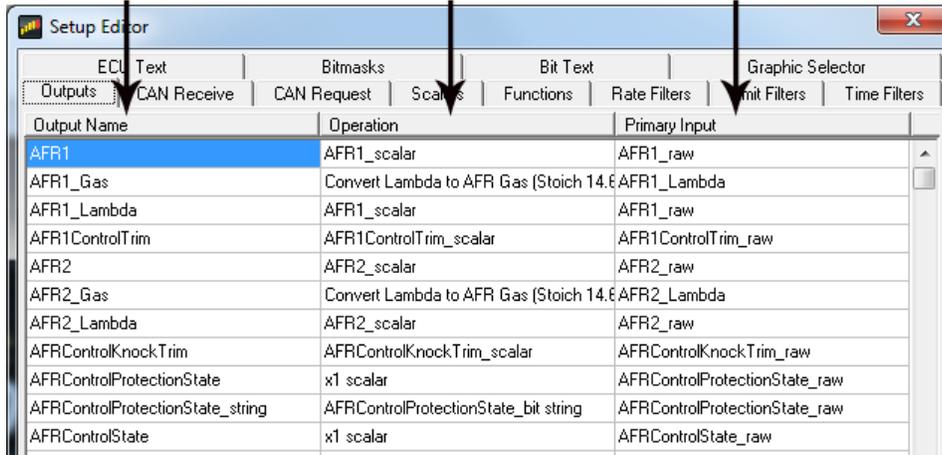


Default CAN .dbc Support


The AEM DashDesign includes a CAN .dbc import feature. A .dbc file is a standardized format for defining a set of CAN messages. Click on the CAN Receive tab in the Setup Editor.

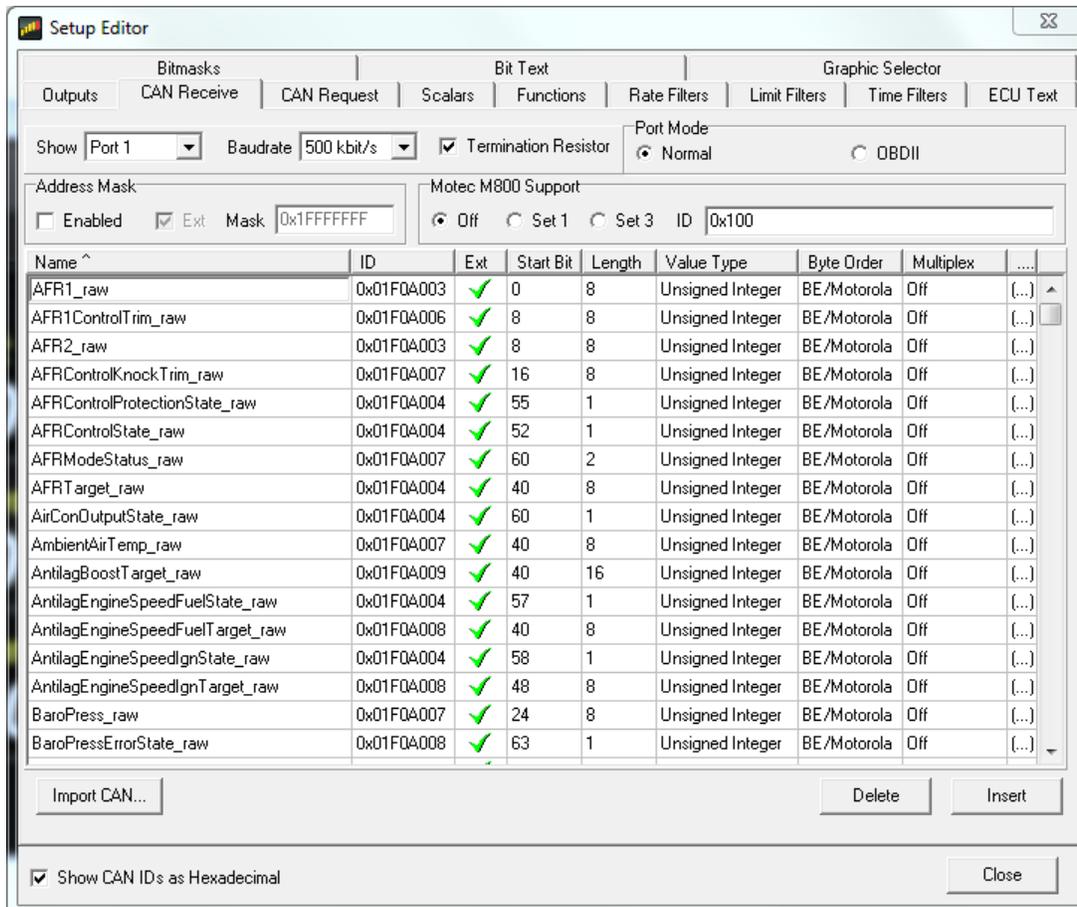


Click on the Import DBC... button to load or append a new .dbc file.

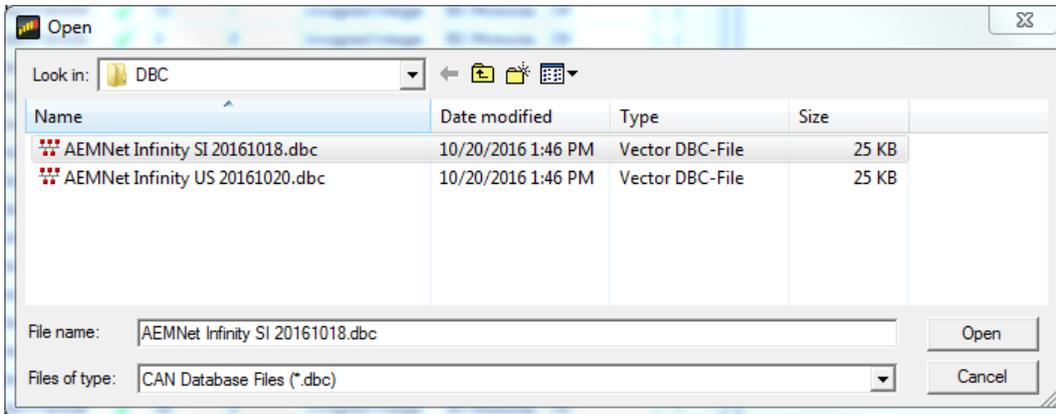

Available .dbc files will be located in the \Documents\AEM\DashDesign\DBC folder. Selecting a file will open the import dialog.

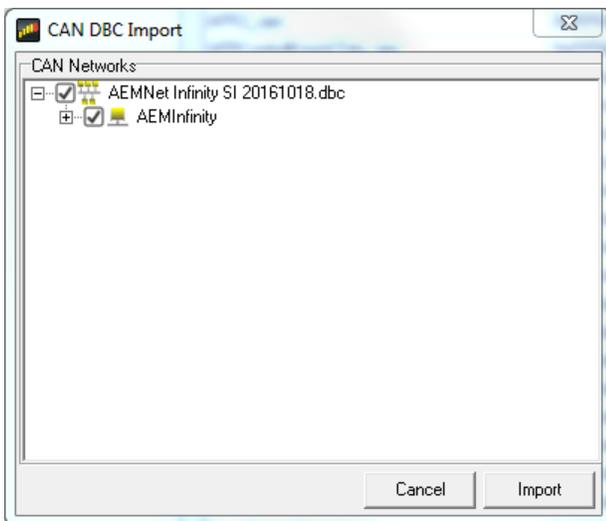

The levels can be expanded by clicking on the plus symbol.

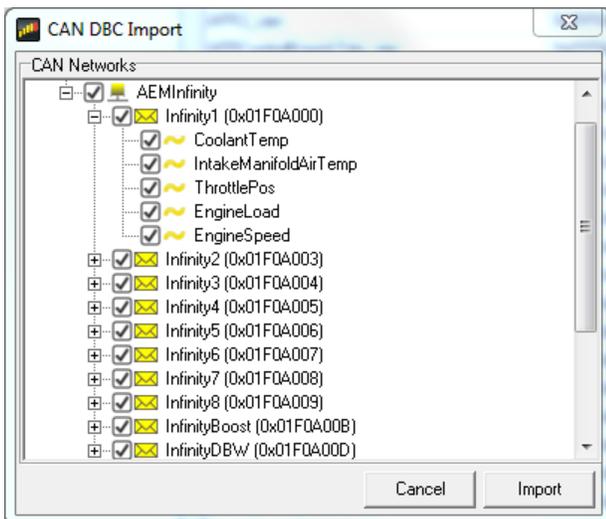

Select the channels for import by clicking the boxes. All available channels are selected by default. Click the Import button to import. All CAN message information is automatically imported along with necessary Scalar and Bit text operations. The channels are now available for assignment.

Logging

AEM Dash has 200Mbytes of internal data logging memory and supports logging rates of up to 1000Hz. Data is downloaded and analyzed with AEMData Analysis software.

To configure logging, select **Setup | Logging** to show the log setup window. Channels available to be logged are shown on the left hand side. To log a channel, select the desired rate from the Log Rate column. Logging a specific channel also automatically selects all other children and parent channels for logging at the same rate.

AEM Dash inserts markers in the data to indicate various states and these are displayed in AEMData. The following markers may be inserted by AEM Dash:


- **Lap** - This is inserted when the beacon input is triggered and is typically used for lap timing.
- **Power** - This is inserted when the display is configured to start logging immediately on power up.
- **Log Start** - This is inserted when the log start condition is met after power up
- **Overrun** - The display has been unable to write the log data to the memory in the time available. Either reduce the number of logged channels or reduce the complexity of the display screen.

Log start/stop conditions

The logging can be started or stopped dependent on channel conditions. Every time a new log is started, a new *Log Run* is created in the logger. Log runs can be downloaded individually with AEMData which reduces the time taken to download the data.

The log can be started in one of three ways:

- **Single input start/stop** - When the specified input is non zero, the log will be started. When zero, the log will be stopped. For example, if the channel EngineSpeed is used as the trigger, the logger will log anytime the engine is running.
- **Twin start/stop triggers** - When the Start trigger is non zero, the log will be started. When the Stop trigger is non zero, the log will be stopped.
- **Log Always** - The logging starts logging immediately on power on and will log until switched off or until the log is full.

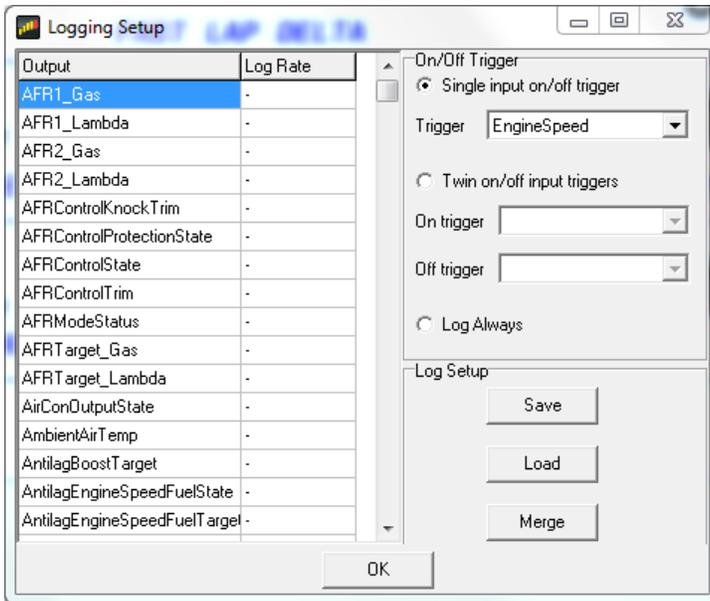

Special Logger Outputs

Enabling logger adds the following special outputs:


- **Log Mem Total** - The total logging memory in kilobytes
- **Log Mem Free** - The amount of logging memory remaining in kilobytes
- **Log Mem Percent Free** - The percentage of logging memory free.
- **Log Status** - A channel representing the current logging status:

The Log Status text has the following meaning:


- **Logging not Supported** - This firmware does not support logging.
- **Logging stopped** - The device is not currently logging.
- **Logging running** - The device is currently logging.
- **Log looped** - The log has looped.
- **Log memory space low** - There is less than 5% of the log memory remaining.
- **Log memory full** - The logging memory is full and logging has stopped.
- **Log initialising** - The logger is currently processing the setup.
- **LOG SETUP ERROR** - There is a problem with the logger setup.
- **LOG OVERRUN** - The logger has been unable to write the log data to the memory. Either reduce the number of logged channels or reduce the complexity of the display screen.
- **Log memory worn** - There are a significant number of bad blocks in the flash memory. Logging will continue to work but capacity will be reduced.

Downloading Log Files


To download log files from an AEM logging dash, connect the USB cable between the dash and your PC. Launch AEMData analysis software and turn on the switched ignition power to the Dash. The message below will be displayed when AEMData detects a connection to the dash.

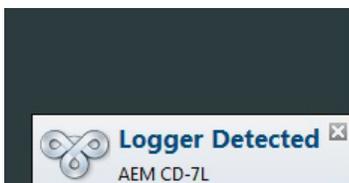

Go to **Logger | Download Log**

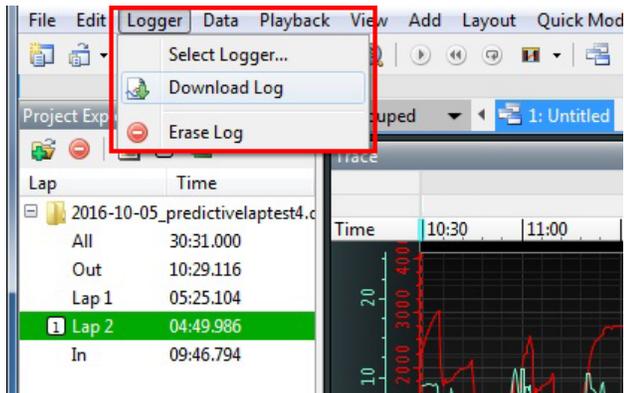

If there are logs saved on the dash, a list similar to the one below will be presented. Select the files to download. Choose whether to erase the files from the dash or not.

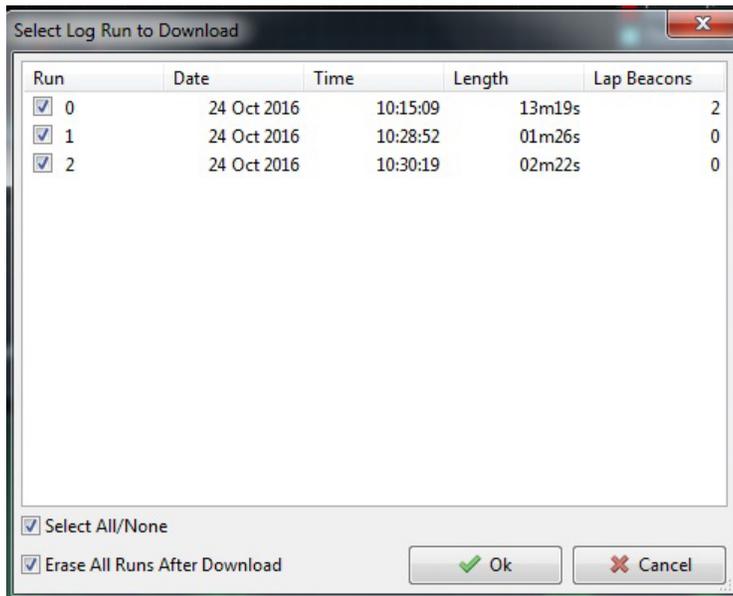

Setting the Internal Clock

- Connect the color display to your PC using the USB link..
- Select **Tools | Set Time and Date in Display**.
- The system will synchronize the time and date to match the PC.

Updating Dash Firmware

As part of the continuing development process, from time to time new versions of the AEM Dash firmware will be released with new DashDesign installers. To upload the new firmware:

- Firmware files are installed to the \Documents\AEM\DashDesign\Firmware folder.
- Connect the color display to your PC using the USB link..
- Select **Tools | Upload Firmware**. Select the firmware (.bin) file from the location above.
- The upload process starts. Do not switch the display off during the upload process as this may corrupt the firmware.
- Once the upload process has finished, unplug the USB cable to reboot the display.

The Setup Editor

The AEM DashDesign Setup Editor is used to configure the non-visual objects of a setup i.e. **Outputs** and **Operations**. Some outputs use more than one input depending on the operation used. The setup editor is accessed by selecting **Setup | Display....**


Each page of the editor has **Insert** and **Delete** buttons which are used to insert or delete an item in that tab. The following sections describe the various operation types available and how they are used to make an output.

Outputs

Outputs are values, texts or graphics that are used by gauges or other outputs. The output that it passes is determined by the operation that it uses.


To set up a new output:

- Click the Insert button in the Outputs tab.
- Enter the name of the new output. This should describe what the output actually generates.
- Select the operation to be used by the output from the drop-down list.
- Select the input from the drop down list.

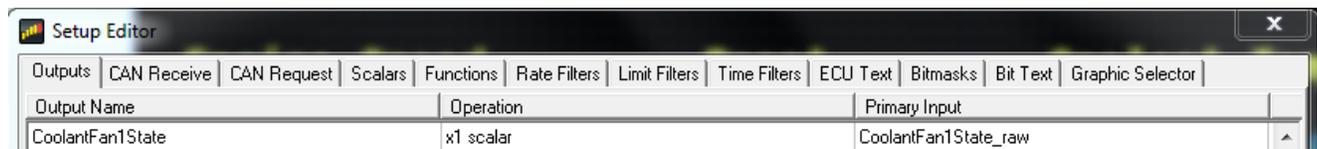


The example above shows the basic use of a x1 scalar. It uses a raw input and passes it through as itself with the opportunity to change the name.

$\text{CoolantFan1State} = (\text{CoolantFan1State_raw}) * (1)$

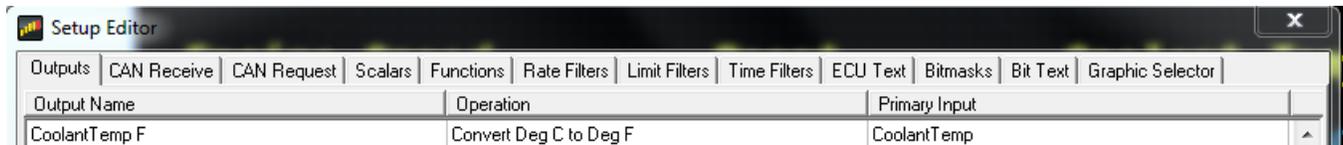

The next example shows a simple unit conversion operation.


Find the *Convert Deg C to Deg F* in the Scalars tab.

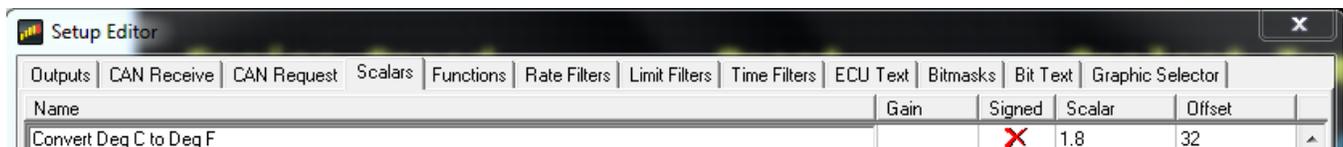


This Scalar operation uses a Scalar value of 1.8 and an offset value of 32. Applying this Operation results in the following math expression.

$$\text{CoolantTemp F} = (\text{CoolantTemp} * 1.8) + 32$$

This is a simple unit conversion for converting degrees C to degrees F.

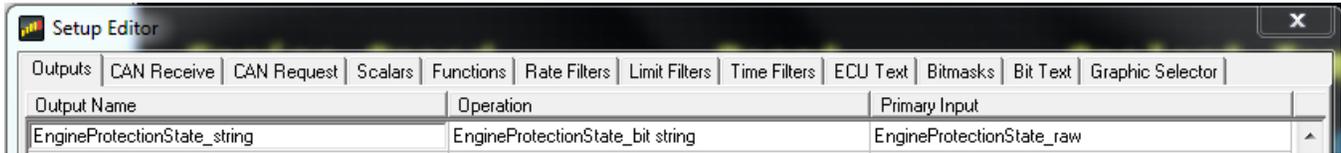

The next example uses EngineProtectionState_raw as the Primary Input. This input has two possible values with are 0 or 1. A Bit text operation is used to convert these values into text texts that can be displayed on the dash.

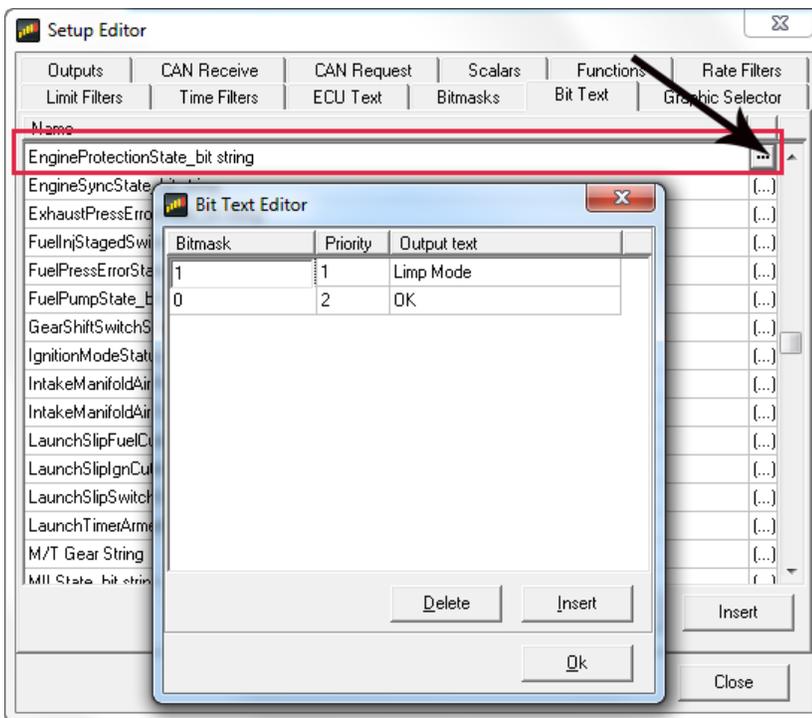


Shown above, the Bit text operation performs the following transformation:

If EngineProtectionState_raw = 1, EngineProtectionState_text = Limp Mode


If EngineProtectionState_raw = 0, EngineProtectionState_text = OK

CAN Receive

The Dash is a CAN display dash. The CAN receive tab of the Setup Editor must be defined for proper functionality. The steps involved in defining a CAN message structure from scratch is outside the scope of this manual. However, the system includes a robust CAN .dbc import feature that greatly simplifies the process.

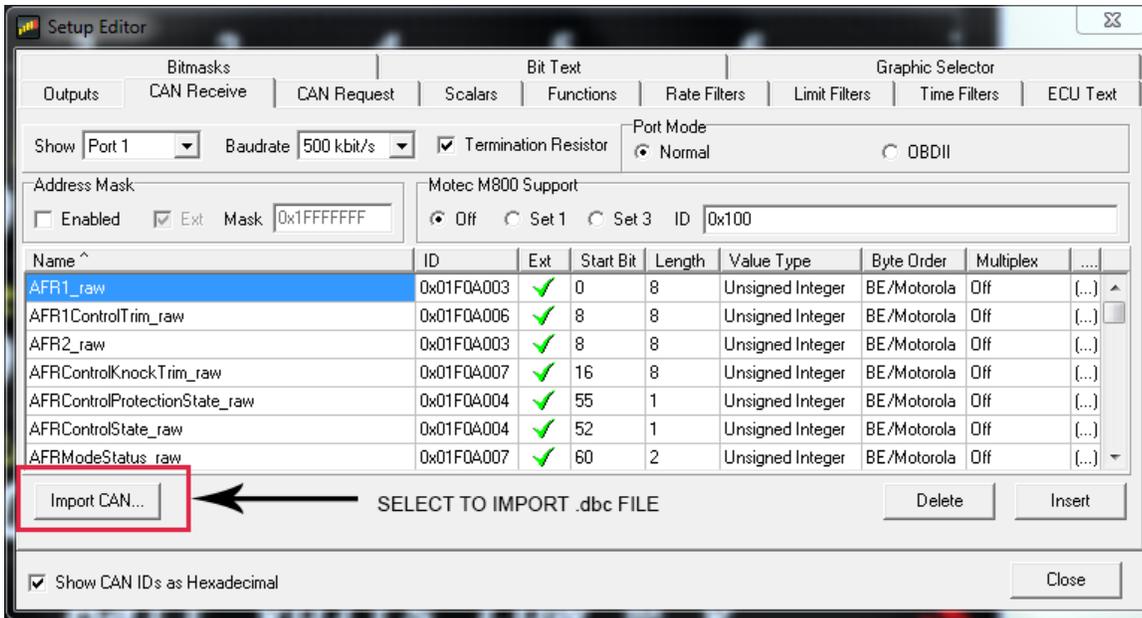

The "Start Bit" refers to the location of the LSB. The message contents and the byte/bit numbering can be viewed by clicking on the ... button for each message.

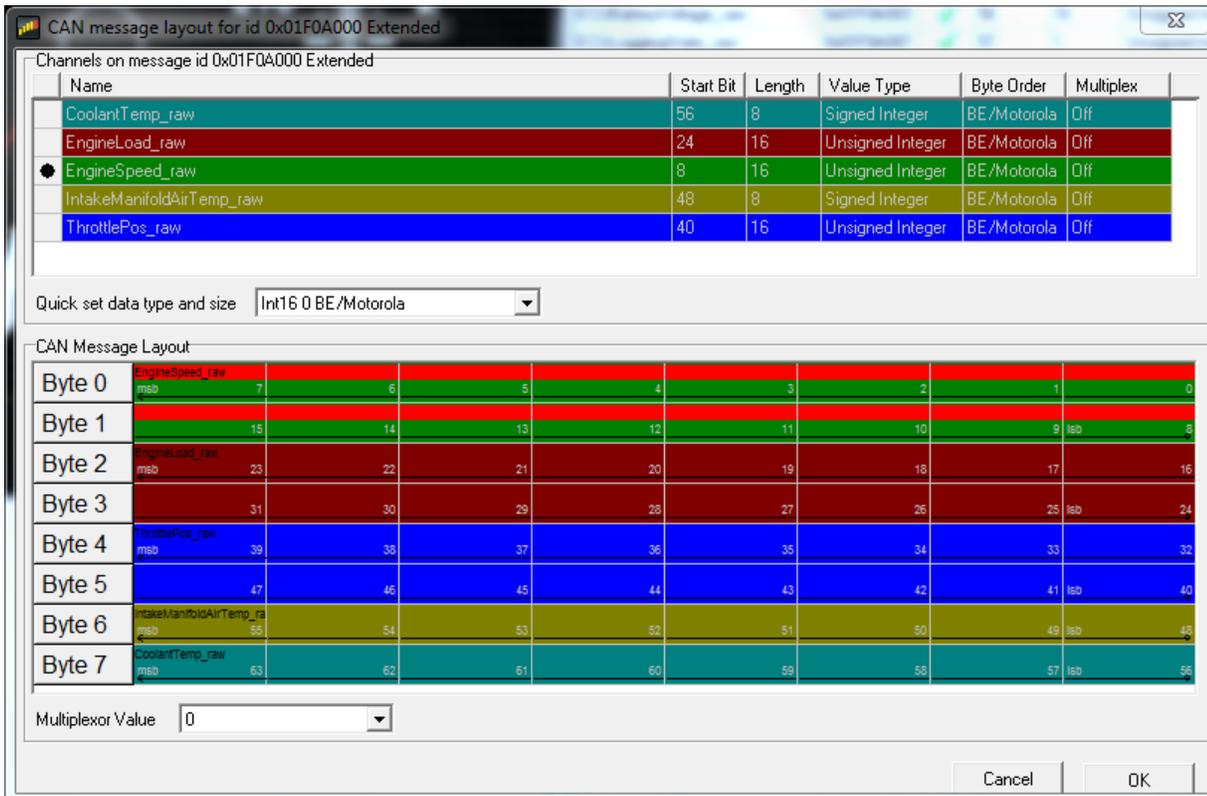

Scalars Operation

The scalar sensor applies a gain (if specified) to the input which is then multiplied by the scalar and the offset added. If signed is ticked and the gain is not set to NONE, the input is treated as a two's complement number. The scalar sensor is used for linear signals.


Name	Gain	Signed	Scalar	Offset
AFR1_scalar		<input checked="" type="checkbox"/>	0.00390625	0.5
AFR1ControlTrim_scalar		<input checked="" type="checkbox"/>	0.5	-64
AFR2_scalar		<input checked="" type="checkbox"/>	0.00390625	0.5
AFRControlKnockTrim_scalar		<input checked="" type="checkbox"/>	0.001	0
AFRControlTrim_scalar		<input checked="" type="checkbox"/>	0.5	-64
AFRTarget_scalar		<input checked="" type="checkbox"/>	0.00390625	0.5
AmbientAirTemp_scalar		<input checked="" type="checkbox"/>	1	-50
AntilagBoostTarget_scalar		<input checked="" type="checkbox"/>	0.1	0
AntilagEngineSpeedFuelTarget_scalar		<input checked="" type="checkbox"/>	100	0
AntilagEngineSpeedIgnTarget_scalar		<input checked="" type="checkbox"/>	100	0
BaroPress_scalar		<input checked="" type="checkbox"/>	0.25	50
BoostControlOutput_scalar		<input checked="" type="checkbox"/>	0.392157	0
BoostControlPIDOffset_scalar		<input checked="" type="checkbox"/>	0.392157	0
BoostControlTarget_scalar		<input checked="" type="checkbox"/>	0.1	0
BrakePress_scalar		<input checked="" type="checkbox"/>	0.006895	0
CamExhaustBank1Pos_scalar		<input checked="" type="checkbox"/>	0.5	-50

Functions Operation

The function table sensor is used when a non-linear signal needs to be processed. The function table sensor applies a gain (if specified) to the input and looks up the input in the function table to produce the appropriate output. If the input falls between two values, linear interpolation is used to derive the output value. If signed is ticked and the gain is not set to NONE, the input is treated as a two's complement number.

To edit the function table, click the ellipsis button (...) to show the function table editor:

Ensure there are no duplicate inputs as this may result in abnormal behavior.

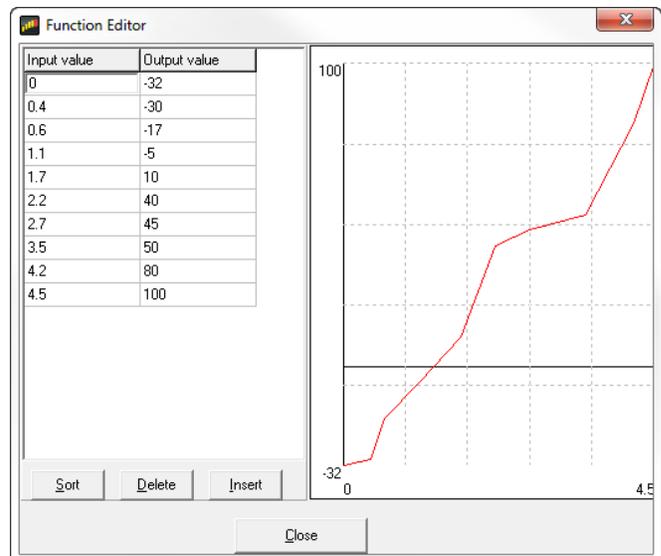

Rate Filters Operation

An output using a rate filter checks that the rate of change of the input value does not exceed a specified amount. If the rate of change is too high the new data is discarded.

Limit Filters Operations


An output using a limit filter checks that an input value never exceeds specified levels, either high or low. This can be used to prevent invalid data from reaching other outputs or gauges. If data is received that exceeds either of the high or low values (if specified) the data is discarded.

Time Filters Operation

Normally, outputs send data to gauges as fast as possible. However, by creating an output using a time filter operation, it is possible to specify the update rate of the output which is useful for making rapidly changing values

more legible. Furthermore, a time filter operation can be used to perform a rolling average, minimum or maximum on the input value which is useful for filtering noisy inputs.

To edit the Time Filter operation values, click the ellipsis button (...) to show the time filter editor:

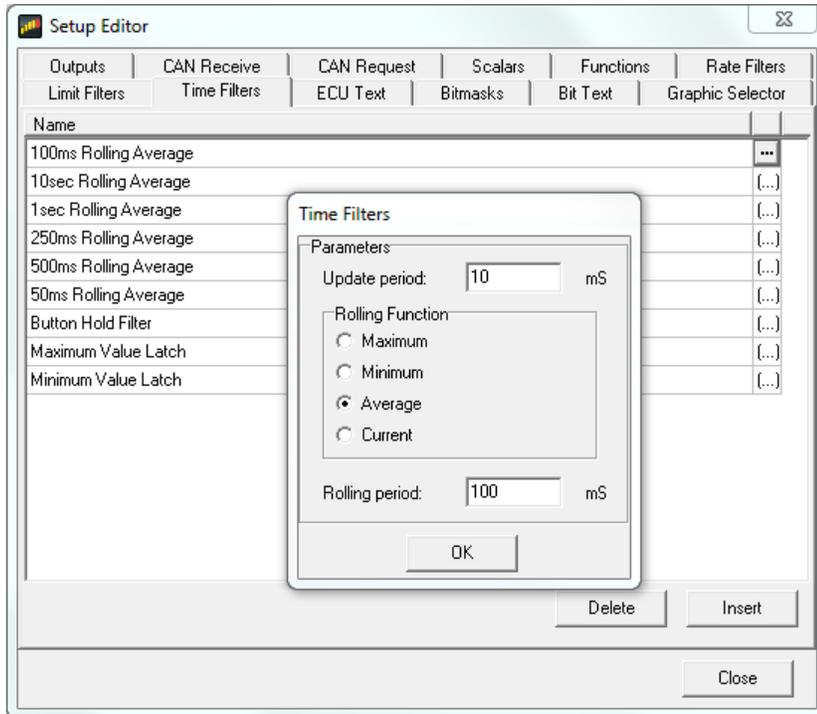

The Time Filter parameters have the following meanings:

- **Update period:** Specifies the rate at which values are sent to outputs and gauges used by this output. For example, if the Update Period is set at 1000, a gauge displaying the value from this output will update once per second. If 0 is specified, the output will update as fast as possible.
- **Rolling period:** Specifies the time period over which the rolling function is calculated. If zero is specified, the rolling period is set to the update period.
- **Rolling function:** Specifies how the value produced from the output is calculated:
 - **Maximum:** The output is the maximum value occurring during the last (rolling period) milliseconds.
 - **Minimum:** The output is the minimum value occurring during the last (rolling period) milliseconds.
 - **Average:** The output is the average of all values occurring during the last (rolling period) milliseconds.
 - **Current:** The output is the last received value. This effectively disables the rolling period function.

ECU Text Operation

An output using an ECU Text operation is used to obtain text (such as a calibration name) from the connected ECU. The length of the text to obtain is specified in the length column.


Bitmasks Operation

The bitmask operation is used to mask off bits from a raw (32 bit) input. This is useful when data is received from the ECU that contains information for two different outputs. For example, the lower 4 bits of a value may be used to determine gear position while the upper 4 bits determine diff mode. The bitmask is specified as the sum of all the bits being masked.

Bit Text Operation

When an input has bits that are set dependant upon a mode in the ECU, it can be useful to convert this into a text output. The bit text operation takes the input and compares it with defined bitmasks. The bitmasks are compared in order of priority until the masked input is set or no more bitmasks are defined. If a masked input is set, the corresponding output text is passed out of the sensor. If no bitmask matches the input an empty output text is passed.


To create a bit text operation, add a name for the operation in the Bit text tab and click on the (...) button to show the bit text editor:

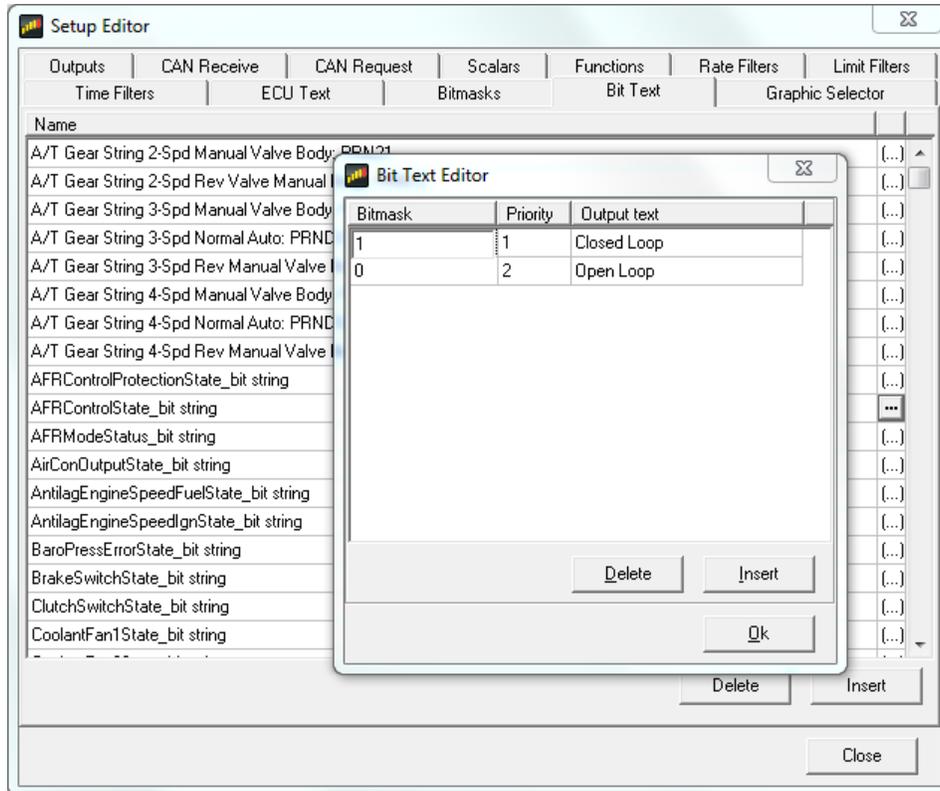

The priority determines the order in which the bitmasks are evaluated with low numbers being a higher priority. This ensures that if two bitmasks match, only the highest priority output text is returned from the sensor.

Graphic Selector Operation

The graphic selector operation is used to show different graphics depending on the value of an input. To create a graphic selector operation, add a name for the sensor in the graphic Sel tab and click on the (...) button to show the graphic selector editor:

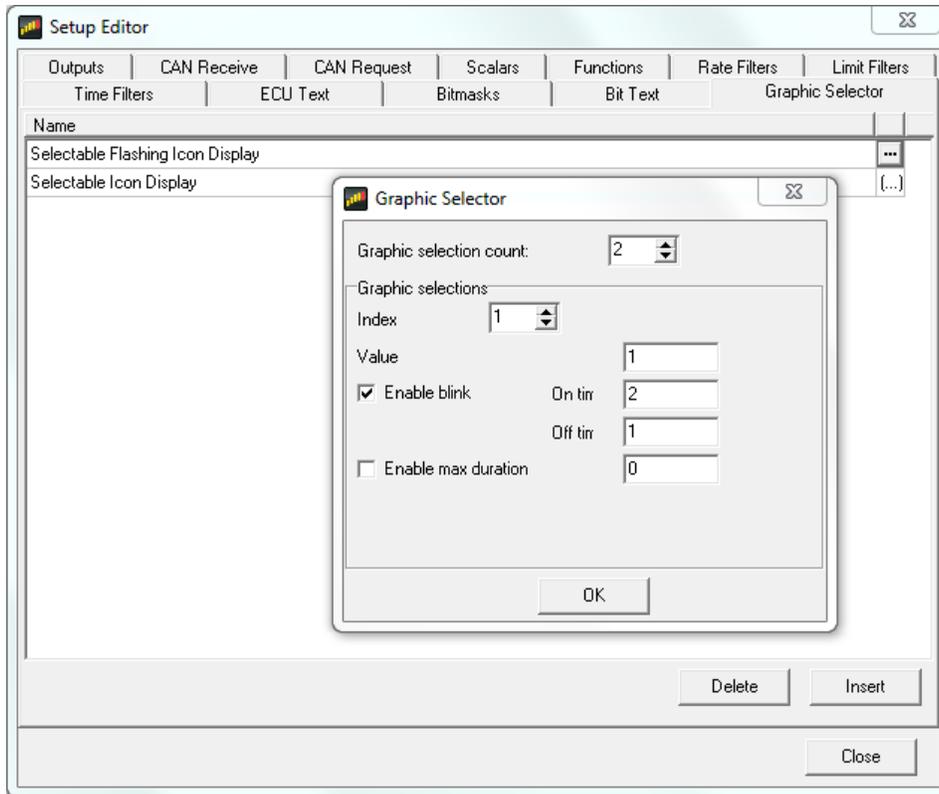

The graphic selection count is the number of graphics used in the sensor and is at least two. The first graphic is shown by default. Subsequent graphics are shown according to the settings in the graphic Selections box.

- **Index** - The number of the selection graphic for which the following settings are made. For example, if the selection count is set to 3, 1 will specify the first selectable graphic and 2 will specify the second selectable graphic.
- **Value** - When the input (specified in the output) is equal to this value, this graphic is shown instead of the default graphic.
- **Enable Blink** - If checked, this graphic will blink according to the **On Time** and **Off Time** in seconds. The graphic swaps between the indexed graphic and the default graphic.
- **Enable Max Duration** - If checked, the graphic is only be shown for the specified duration no matter how long the input is equal to the value.

Alarm Operation

To create a new Alarm output, push the Insert button in the Outputs tab of the Setup Editor.



Assign the output a new name and choose *Alarm* from the dropdown list of available Operations. Push the  button under the Primary Input column for the new Alarm Output. This will open the Alarm Output Setup window. The new name will automatically be added to the Alarm Output Name box.

Input	Condition	Limit	Logic
	<	0	-

Alarm Output Name: Lean Warning

Delay Before Trigger / s: 0.00 Retrigger After / s: 0.00

Select an Input from the drop down list along with Condition and Limit selections.

Input	Condition	Limit	Logic
AFR1_Gas	>	15	-

Alarm Output Name: Lean Warning

Delay Before Trigger / s: 0.00 Retrigger After / s: 0.00

In the example above, the Input AFR1_Gas is checked against a maximum condition of 15:1 AFR. Click the Add button to add additional criteria.

Input	Condition	Limit	Logic
AFR1_Gas	>	15	AND
EngineSpeed	>	0	-

Alarm Output Name: Lean Warning

Delay Before Trigger / s: 0.00 Retrigger After / s: 0.00

Above, the input EngineSpeed is added as an "AND" condition with a limit of 0 RPM. With this logic, IF AFR1_Gas is greater than 15 AND EngineSpeed is greater than 0 (engine running), the alarm will trigger.

The Retrigger value specifies a timeout in seconds after which the alarm (if still triggered) will toggle to untriggered and back to triggered. This is useful for when an alarm has been used to trigger a page change, usually showing a warning to the driver, for example, low oil pressure. The driver can select the standard page again to cancel the alarm. If the oil pressure is still low after the specified period, then the warning page will be shown again.

If the retrigger value is set to zero, then the alarm will only retrigger if the input conditions change to false and back to true again.

The logical expressions are evaluated from top to bottom and the running result of the logical test is used as the input for the next logical evaluation.

Warning Message Operation

An output using a warning message operation is used to output warning messages when inputs are outside of the normal operating range.

- The warning input typically uses an output defined with an alarm operation. If the value of the output is non-zero, the associated warning message will be displayed.
- The label input is optional and is used to provide a value to be shown in the warning message.

The screenshot shows the 'Warning Input Editor' window. It contains a table with four columns: 'Warning Input', 'Warning Label', 'Label Input', and 'Label Input Format'. Below the table are fields for 'Warning Output Name', 'Warning Display Times' (On Time/s, Off Time/s, Min On Time/s), and buttons for 'Delete', 'Add', 'Cancel', and 'Ok'.

Warning Input	Warning Label	Label Input	Label Input Format
Warning Coolant Temp High	Coolant High @°F	CoolantTemp	###
Warning Batt Volts Low	Batt Volts Low @ v	ECUBatteryVoltage	#9.9

Warning Output Name: Warning Text Messages

Warning Display Times:
 On Time/s: 2.00 Off Time/s: 0.00 Min On Time/s: 2.00

The example above shows two existing Warning Inputs. These were both previously defined as Alarm outputs before setting up this window.

The Warning Editor message is entered in the Warning Label column. When an '@' symbol is inserted into the warning label a formatted input value from the label input replaces it in the display. The Label Input defines the data that replaces the '@' symbol. The input label format column allows the format of the value from the label input to be defined. For full details on value formatting, see [Value Formatting](#) in the gauge reference section.

If all the warning inputs are zero, the output text is empty. If only one warning input is non-zero, the appropriate warning is displayed. If multiple warning inputs are non-zero, the appropriate warning labels are displayed in turn, with each one being displayed for around a second.


The On Time, Off Time and Min On Time can be used to affect how the warning is displayed when only one warning is active and are scaled in milliseconds. For example, to have a single message flash at 2Hz, set the On Time to 1000 and the Off Time to 1000. Setting the Off Time to 0 disables flashing.

The Min On Time can be used to ensure a warning is visible even if it is only briefly triggered. For example, a low oil pressure alarm triggered during cornering may only occur for a fraction of a second but by setting the Min On Time to 2000 ensures that the message is displayed for 2 seconds and so is more likely to be seen.

Odometer and Turn Blinkers

AEM Dash has a built in odometer function. This is an internal counter backed up to non-volatile memory that cannot be reset (it is set to zero when the unit is built).

To set up the odometer, choose **Setup | Odometer**. Select an output that is road speed km per second. AEM DashDesign will automatically create an output called **ODOMETER** which is scaled in km and can be displayed on the screen.

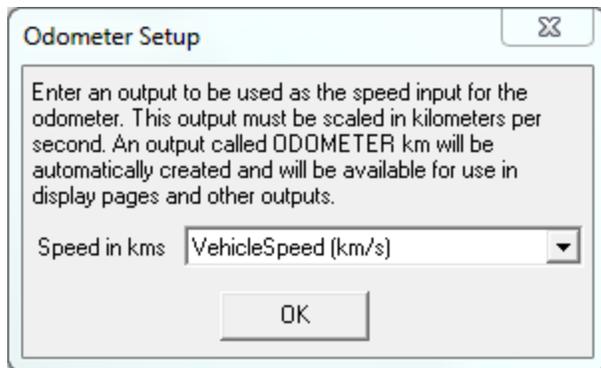


All AEM base setups include an odometer scaled in both miles and kilometers.

An optional turn blinkers feature is available on some AEM supplied setups. Pins 11 and 12 can be used for LEFT TURN and RIGHT TURN blinkers respectively. When these inputs are grounded, the turn blinkers will activate.


HARNESS 12 WAY CON PINOUT

PIN	COLOR	DESCRIPTION
1	RED	SWITCHED POWER
2	BLACK	GROUND
3	WHITE	CAN1+
4	GREEN	CAN1-
5	GREY	CAN2+
6	BLACK	CAN2-
7	BLUE	PAGE UP
8	YELLOW	RESET/ACK
9	GREY	NIGHT MODE
10	VIOLET	BEACON
11	NA	SPARE1
12	NA	SPARE2

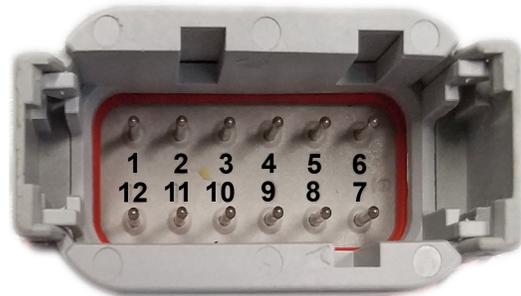


Lap Timing and Track Mapping

The following channels are used for lap timing and track mapping.

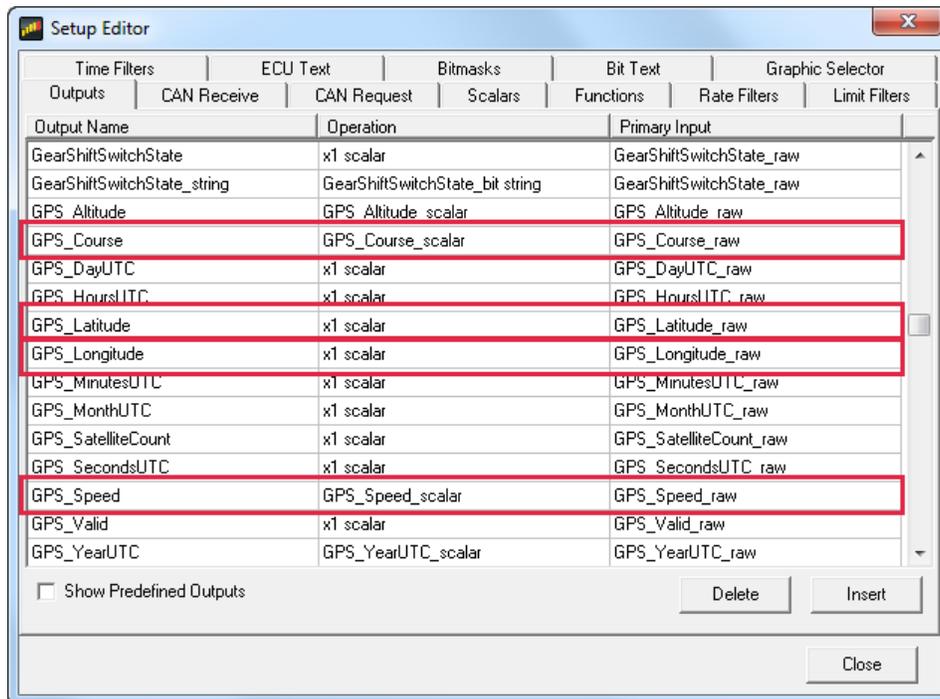

Most AEM default setups include a lap timing screen. The [VDM for GPS speed and lap timing](#) section describes the basic setup and configuration of a GPS input for speed and position. Once configured, the screen will update with current data as the laps progress.

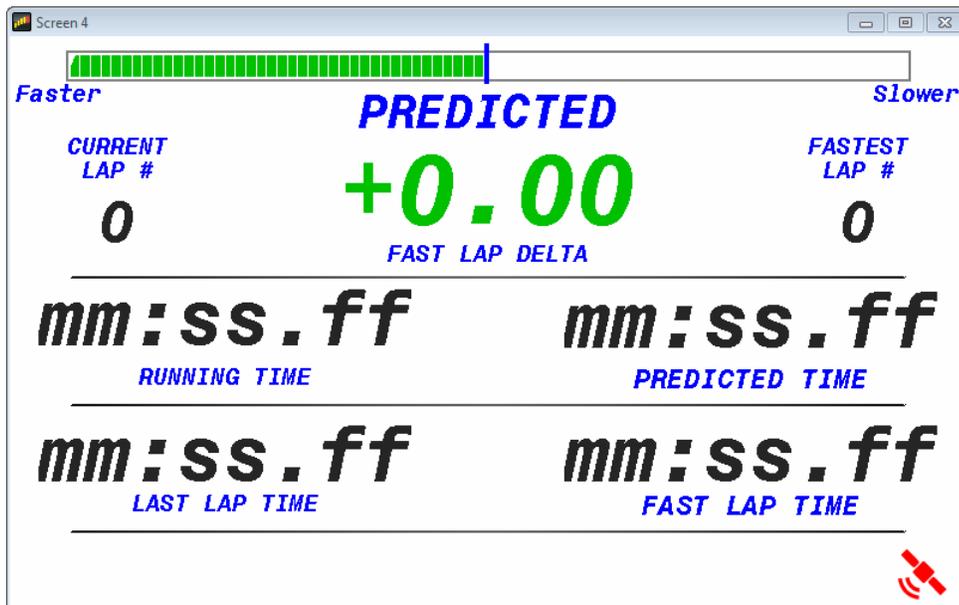

Lap Timing channels available include:


- Fastest lap number
- Fastest lap time

- Fastest lap average speed
- Fastest lap time delta (your current lap compared to the fastest lap)
- Last lap number
- Last lap time
- Last lap average speed
- Last lap time delta (your current lap compared to the last lap)
- Current lap number
- Current lap time


Go to **Setup | Lap Timing...** Select the GPS button to configure for GPS lap timing. A virtual start/finish line creation feature allows you to use the beacon input (violet wire in flying lead harness) to set a virtual start/finish line. While driving the course, press the momentary beacon switch when you cross the start/finish line. Hold for a few seconds until the left and right LEDs flash. The system captures the location information when you first press the button. Holding for a few seconds eliminates the likelihood of false triggering the input. You can define your virtual track width in the dialog window. Set to the approximate width of the track surface plus some extra. The dash creates a start finish line the width of the Track Width/m setting perpendicular to the heading when the start finish is set. It then checks whether the previous two points cross this line; the only caveat being that the heading is +/- 90 degrees of the original heading.

The GPS start/finish reference and fastest lap data is saved to non volatile memory in case the vehicle power is interrupted during operation.

Once your file that contains GPS data is added to an AEMData project, you can add a track map to your project. Go to **Add | Track** and select a spot on your layout.

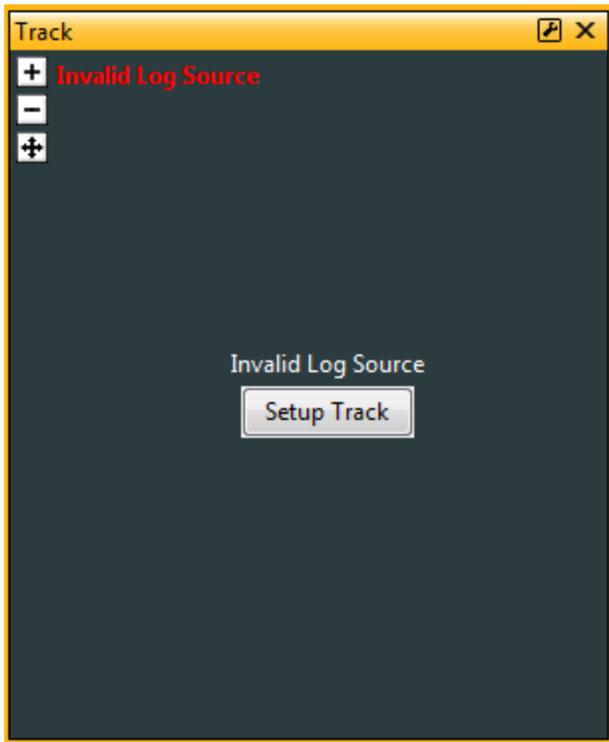


Click the Setup Track button and choose the GPS tab to configure your track.

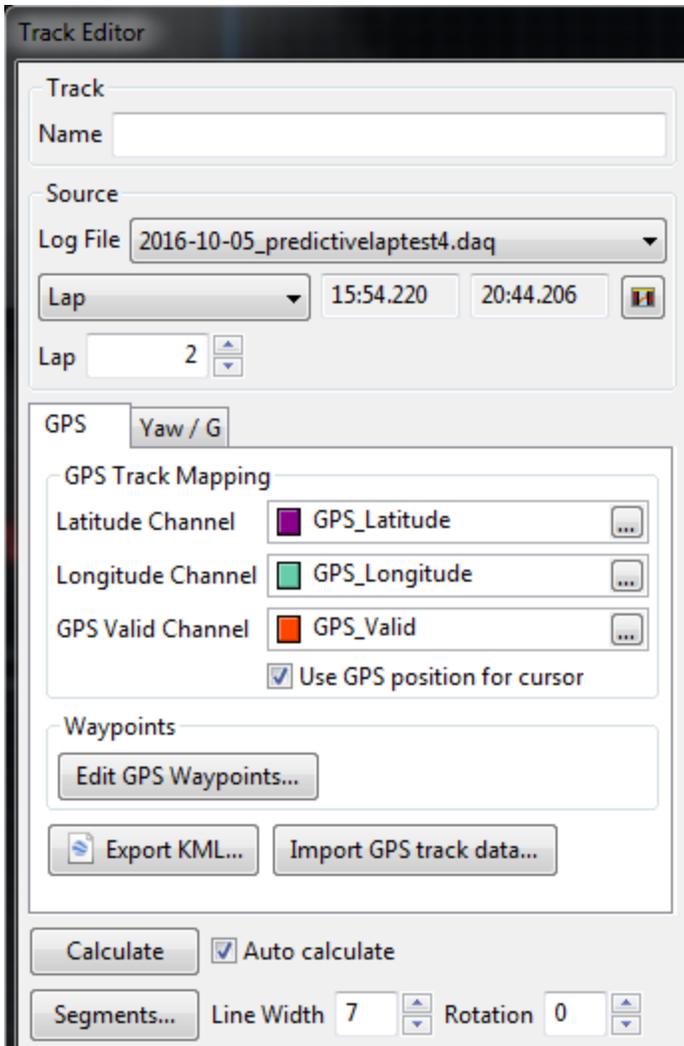


More details on Track Editing can be found in the AEMData documentation.

Settings


The Settings dialog will be populated correctly with all AEM supplied setup files. The options can be changed for custom setups. Night mode dialog box should be empty unless you want to control the mode via CAN. Default is empty and controlled by the flying lead harness input.

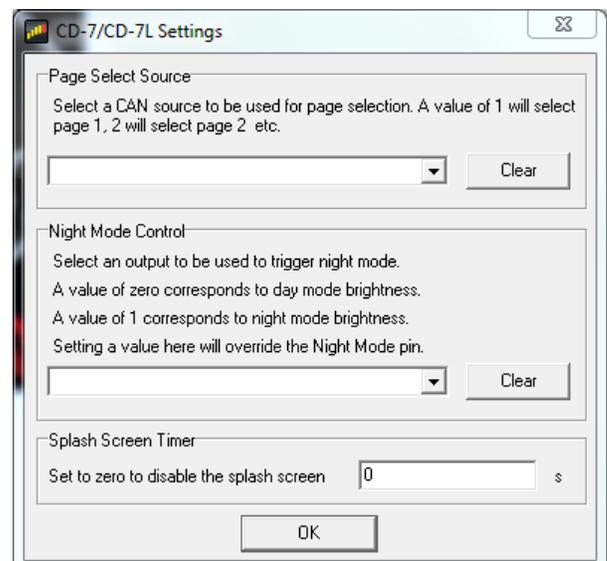


Shift Lights & LEDs

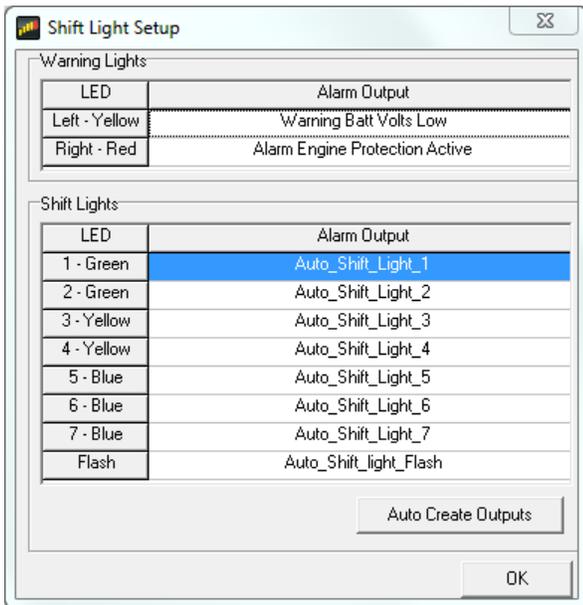


The LED and shift light setup will be pre-configured with AEM supplied setup files. The Alarm outputs used to trigger the LEDs can be adjusted in the Setup Editor as shown in the example below.

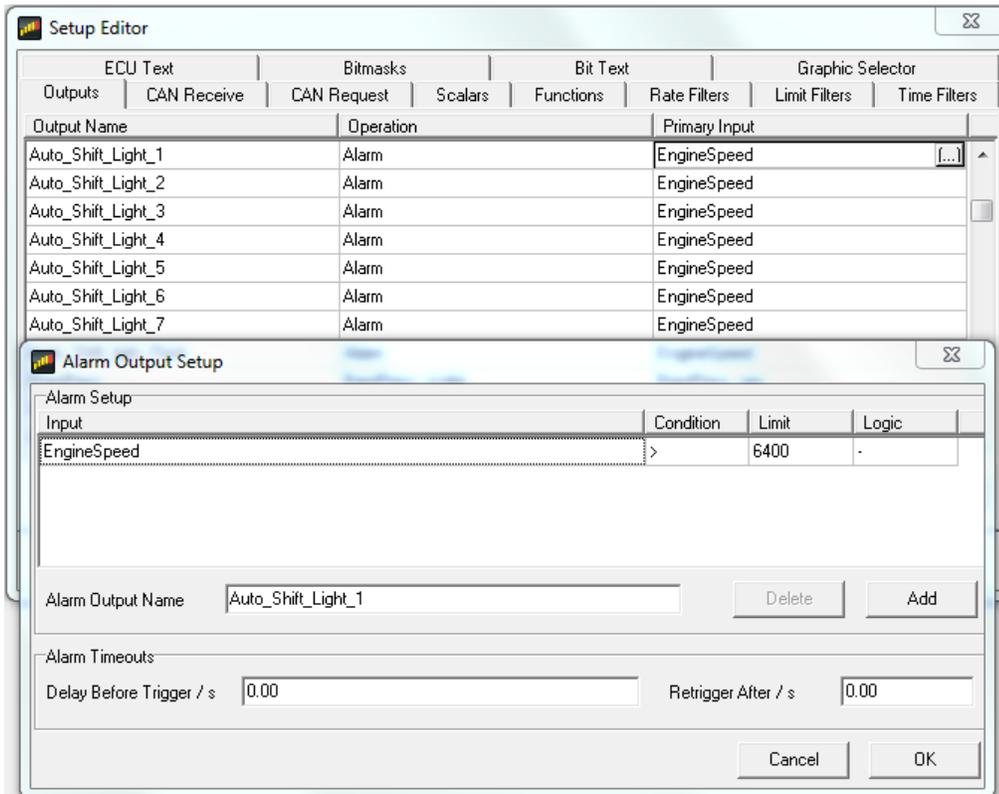

Alternately, the Auto Create Outputs feature can be used. Click this button and acknowledge the message shown below to continue.

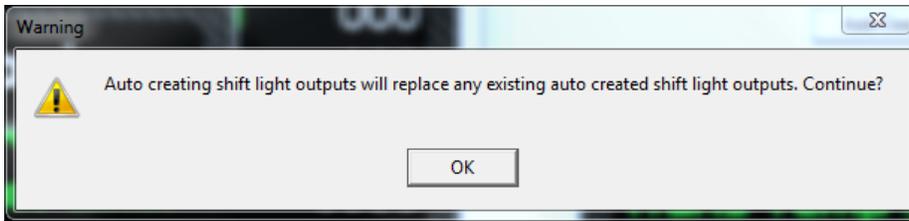

Select the output you want to use to trigger the warning lights. In the example below, we use Engine_Speed.

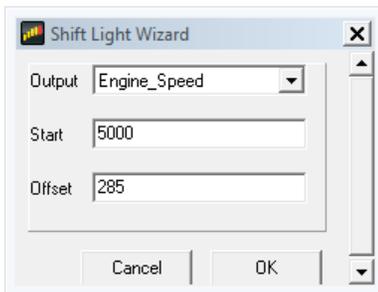

Select your start RPM and you can use the following calculation to set your offset.


$$\text{Offset} = (\text{End RPM} - \text{Start RPM})/7$$

For example if you want to start at 5000 RPM and end at 7000 RPM:

$$\text{Offset} = (7000-5000)/7 = 285$$


Alarm Page

AEM setups will come pre-configured with many optional Alarm outputs. Choose the ones you want to trigger the Alarm Page.

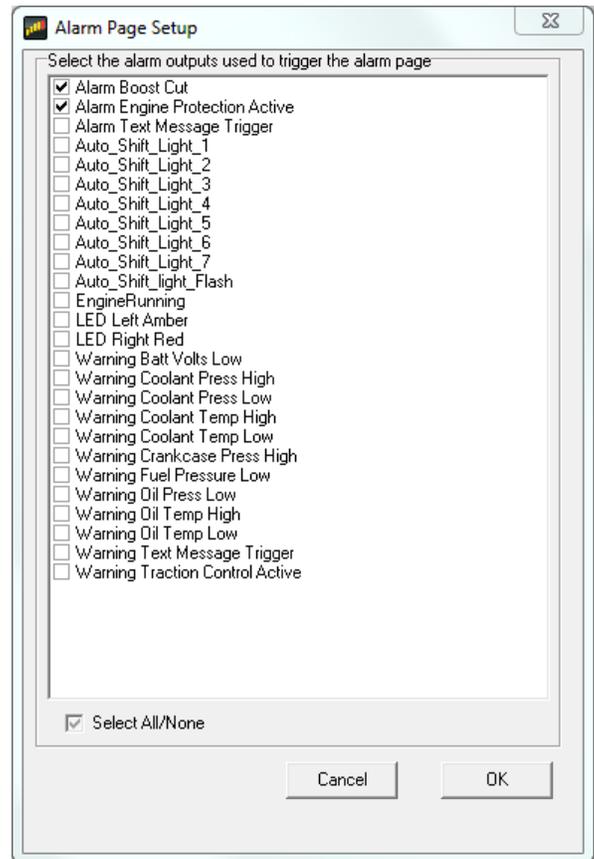

On Change Page


The On Change Page allows you to setup a custom page that will be displayed when any changes are detected on selected channels. The list of available channels will be displayed at the left. Double click or press the space bar to move them to the right Selected Channels list.

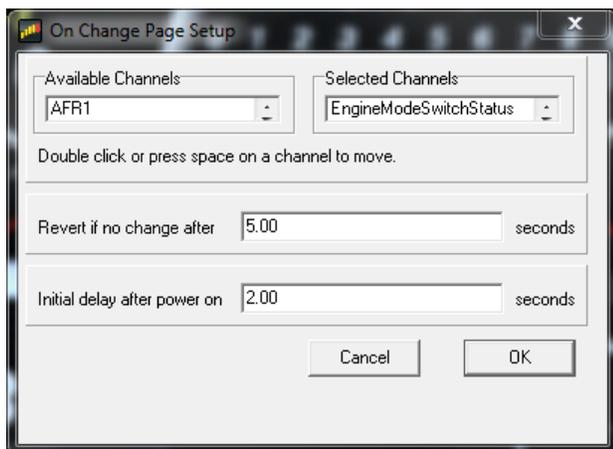

The example below shows one version of an AEM supplied On Change Page. Different operating modes and/or multi-map selections can be displayed using this page. Other useful items are boost target and traction controls set points.




Brightness

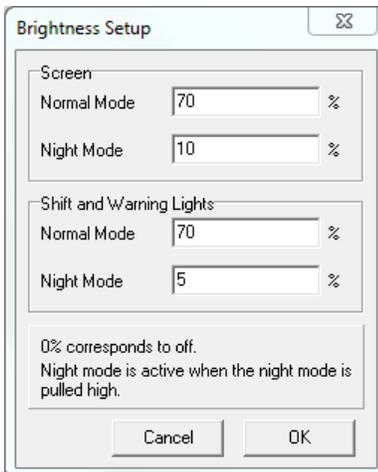

The Brightness setup dialog allows you to choose two different brightness settings for both the screen and LEDs. See [Harness and Wiring](#) section for Night Mode input wiring. 100% should only be used in direct sunlight. 70% gives almost as much brightness without overdriving the backlight. 5%-10% is appropriate for night mode. **NOTE: The LEDs used in the CD-5 unit are brighter and may require different settings compared to a CD-7 unit.**

Count Up and Count Down Timers

The output channels Count Up Timer and Count Down Timer are configured in the Setup Editor. In the outputs tab, check Show Predefined Outputs to display these channels for editing along with all other existing predefined channels. The output channel Count Up Timer can be added to a layout and set in msf format (minutes-seconds-hundredths). The Count Up Timer will increment continuously unless reset by pressing the right dash button. Count Down Timer can be added to a layout and configured in hmsf format (hours-minutes-seconds-hundredths). Click on the "..." button in the Primary Input column of the Outputs tab to edit the Count Down Timer reset values. The Count Down Timer will reset to its starting time by pressing the right dash button.

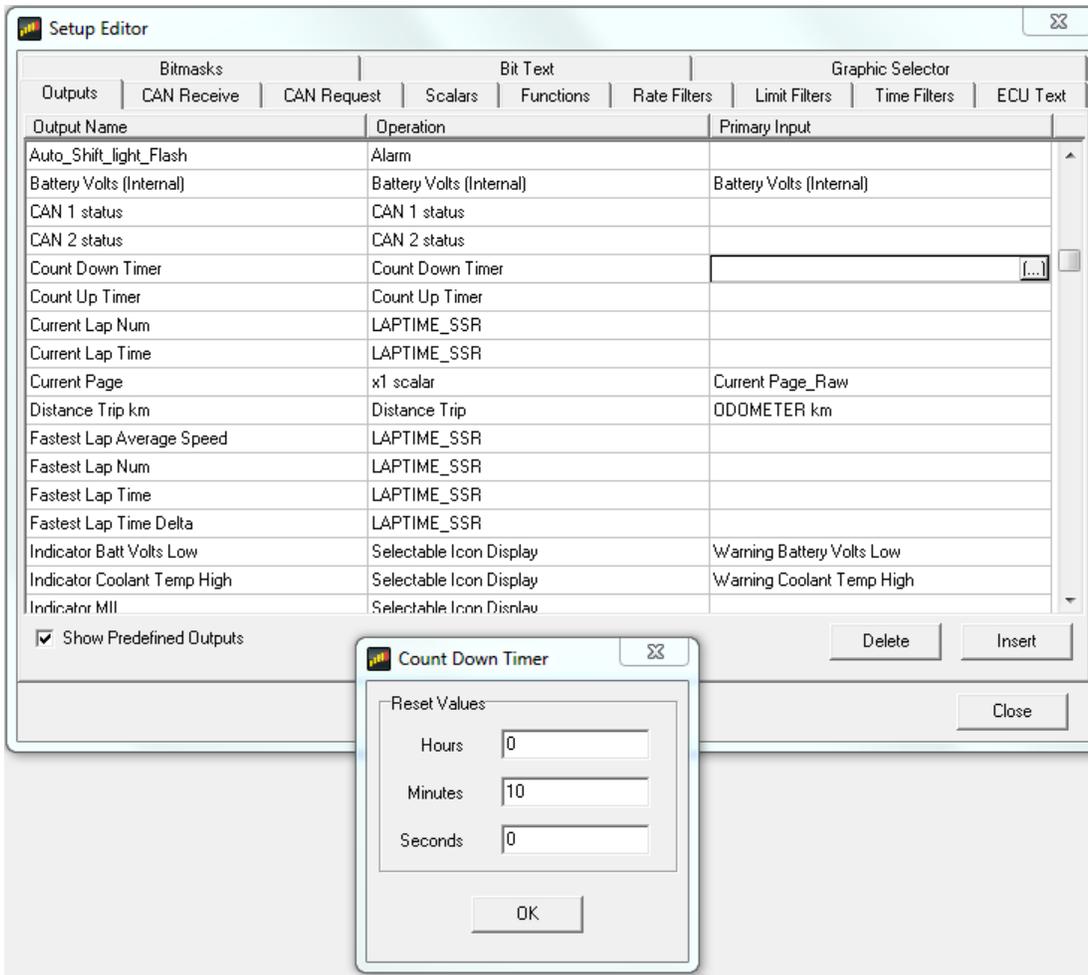

Display Screens

The AEM Dash supports 6 screen pages. The display also has a monitor list which enables permanent monitoring of data and a splash screen that appears when the display starts.

Display Scaling

By default, AEM DashDesign displays the screens at actual screen size (100%). For example, if the screen size of the hardware is 800x480 pixels, then the screen editor windows will also be 800x480. Editing in this mode provides a true what you see is what you get editing experience.

However, it is possible to show the editor windows at different scalings by selecting an appropriate value from the **Display | Display Scale** menu. Supported scales are 75%, 100% (default), 125%, 150%, 175% and 200%.

The Monitor Screen

Normally a given output is only monitored if used by a gauge on the currently displayed screen. In certain circumstances however, it is necessary to monitor some outputs irrespective of whether or not they are used by the currently displayed screen page. For example, if the maximum coolant temperature is required as an output for some screens, switching screens deletes the output as the screen changes and recreates it if necessary. The maximum output is then be reset and its' information is lost. By adding this output to the monitor page it is created when the color display is switched on. Changing screens has no effect on the output and the data is not reset unless a reset signal is received.


Furthermore, outputs added to the monitor screen are automatically stored in non-volatile memory. Thus, the value of a min, max or average output added to the monitor screen is preserved even when the screen is powered off.

Select **Display | Monitor** to view the monitor screen setup. Add the outputs to be continuously monitored to the list.

The Splash Screen

The splash screen is a special screen that is shown for a set period when the display starts; for showing a team logo for example.

To design the splash screen, go to **Display | Splash Screen** and design the screen layout as normal. Typically, this will just be a logo but other static values (such as the serial number or version details) will work as well.

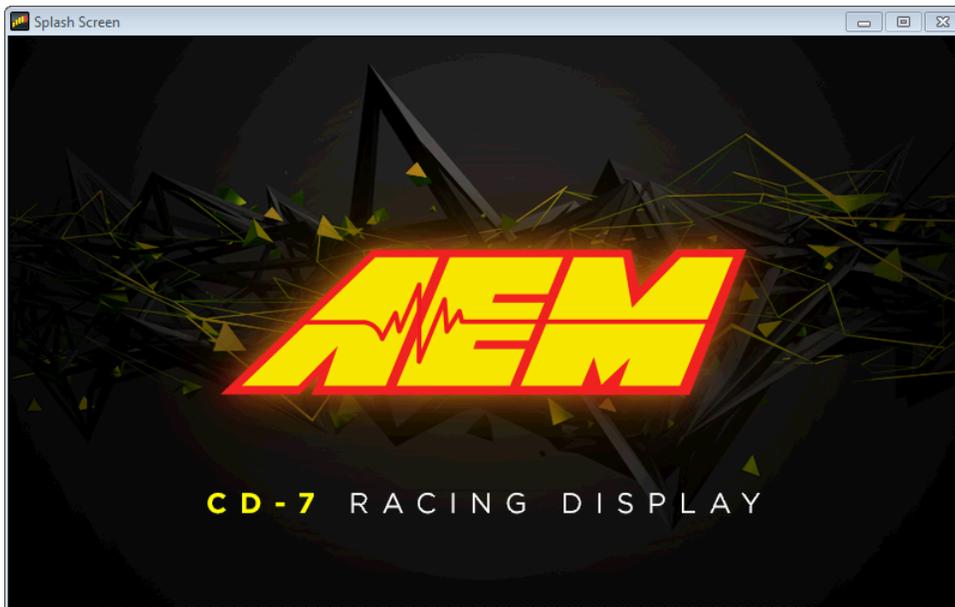

Setting Screen and Default Colors

The **color** menu allows the default colors to be specified. These are used whenever a new gauge is added to a screen. The default colors can be overridden in the individual gauge properties.


- **Screen** – Sets the background color of the current screen.
- **Warning** – Default color of a warning bar when it is triggered.
- **Gauge Background** – Default background color of a gauge.
- **Gauge Line** – Default line color of a gauge used in drawing the outline.
- **Gauge Fill** – Default fill color of a gauge used in bars.
- **Gauge Text** – Default text color of a gauge.

Adding a Gauge

Once a screen page is open, it is possible to add gauges to the screen. To add a gauge:

- Select the gauge required from the **Gauge** menu or the tool bar.
- Click on the area of the screen the gauge is to be added to and whilst holding the mouse button down drag a box to the size required for the gauge.
- On releasing the mouse button, the gauge will be added to the screen.

Most gauges can be added from the tool bar:

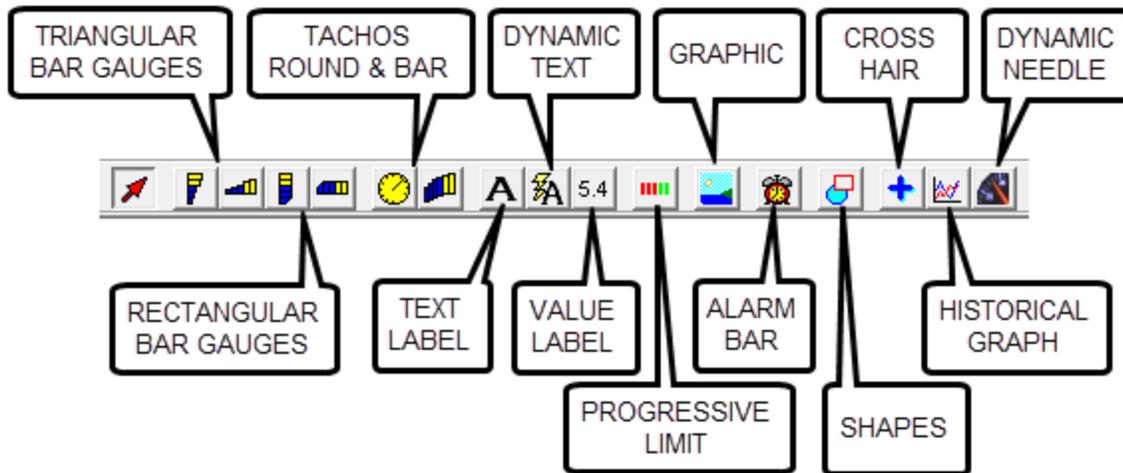

Selecting a Gauge

A gauge is selected using either the mouse or keyboard. To select a gauge using the mouse, move the cursor over the gauge. If gauges are overlapping the topmost gauge is selected. Try moving the mouse to an area where the gauge to select is not covered by another gauge. Alternatively, use the keyboard. To select a gauge using the keyboard press the tab key repeatedly until the appropriate gauge is selected. When a gauge is selected a border appears around it.

Moving a Gauge

A gauge can be moved using either the mouse or the edit window. To move a gauge using the mouse:

- Select the gauge with the mouse.
- When the cursor appears as a pointing hand  click and drag the gauge to the required position.

To move a gauge using the edit window:

- Show the [Gauge Property](#) window by right clicking on the selected gauge or by selecting it from the **Edit** menu.
- Change the values of the **x position** and **y position** properties to appropriate values.

This is particularly useful in aligning different gauges.

Resizing a Gauge

A gauge can be resized using either the mouse or the edit window. To resize a gauge using the mouse:

- Select the gauge with the mouse.
- Move the cursor to the border of the gauge which requires resizing. The pointing hand cursor changes to a sizing cursor depending on the position:
 - If the cursor is at the top left or bottom right corner of the gauge the cursor changes to a NW-SE cursor  and is resized by dragging that corner.
 - If the cursor is at the top right or bottom left corner of the gauge the cursor changes to a NE-SW cursor  and is resized by dragging that corner.
 - If the cursor is at the top or bottom edge of the gauge the cursor changes to a N-S cursor  and is resized by dragging that side.

- If the cursor is at the left or right edge of the gauge the cursor changes to an E-W cursor  and is resized by dragging that side

To resize a gauge using the edit window:

- Show the [Gauge Property](#) window by right clicking on the selected gauge or by selecting it from the **Edit** menu.
- Change the values of the **x size** and **y size** properties to appropriate values.

This is useful in making different gauges the same size.

Deleting a Gauge

To delete a gauge:

- Select the gauge.
- Press the *Delete* key.

Editing Gauge Properties

The gauge property editor is used to change the settings of an individual gauge. The gauge property editor is shown using either the mouse or **Edit** menu. Using the mouse:

- Select the gauge.
- Click the right mouse button.

To edit a gauge using the menu:

- From the **Edit** menu, select the name of the gauge to edit.

The gauge property editor is specific to the type of gauge being edited. See the [Gauge Reference](#) section for full details.

Using Copy and Paste

The copy and paste feature is used to copy gauges or entire screens between screen pages or setup files.

- **Edit | Copy | Gauge** copies the currently selected gauge into the paste buffer.
- **Edit | Copy | Screen** copies the current screen into the paste buffer.
- **Edit | Paste | Gauge** pastes the last gauge copied into the paste buffer into the current screen.
- **Edit | Paste | Screen** pastes the last screen copied into the paste buffer into the current screen. Any gauges already present on the current screen will be removed.

To paste a gauge or screen into a different setup file, copy it, close the file, open the appropriate setup file and screen and paste.

Setting the Gauge Z Order

When a page is rendered in the display, the gauges are drawn in the order in which they were added to the screen in the editor.

When gauges are placed on top of other gauges, it can be useful to change the order in which the gauges are drawn (the Z order). For example, if an alarm bar is added over a value gauge, only the alarm bar will be visible. By changing the Z order so that the value gauge is drawn after the alarm bar, the value gauge will appear drawn on the alarm bar.

To change the Z order on a page, select **Edit | Z Order...** or press **Ctrl Z**. The Z order editor will be shown. To change the order of a gauge, select it from the list (it will be simultaneously highlighted in the screen editor) and use

the up and down cursor keys or the up down buttons to move the gauge within the list. gauges towards the top of the list are drawn first (behind other gauges). Gauges towards the bottom of the list are drawn last (in front of other gauges).

Click OK to commit the changes or cancel to quit the Z Order editor.

Gauge Reference

Gauges are the visual elements of a AEM DashDesign screen page. The various different gauge types available in AEM DashDesign are described in this section.

Standard Gauge Properties

Most gauges share a standard set of gauge properties described below. In addition to these standard properties, many gauges have additional properties that are described in their relevant section.

The standard gauge properties are as follows:

- **Name** - The name is used to identify the gauge in the **Edit** menu. The AEM CAN Dash assigns a name to a new gauge automatically although it is useful to give gauges more meaningful names as it makes them easier to identify in the **Edit** menu.
- **Input** - The output used by the gauge.
- **Minimum** - The value at which a gauge starts, for example the start value of a bar gauge.
- **Maximum** - The value at which a gauge finishes, for example the end value of a bar gauge.
- **Resolution** - Divisions are drawn at this frequency.
- **Label Frequency** - Labels are drawn according to the resolution.
- **Label Font** - The font used by the gauge.
- **Label Font Size** - The font size used by the gauge.
- **Label Format** - Determines how numbers are formatted in the gauge. See the [Value Formatting](#) section for more information.
- **X Position** - The left most position of the gauge.
- **Y Position** - The top most position of the gauge.
- **X Size** - The width of the gauge.
- **Y Size** - The height of the gauge.
- **Background color** - color of the gauge background.
- **Line color** - color of the resolution lines and outline of the gauge.
- **Fill color** - color in which to draw a filled part of the gauge, for example the part of a bar graph that has data.
- **Text color** - color of all text in the gauge.

Value Formatting

Many gauges can use a **Label Format** property in order to control how values are displayed. The following table shows the standard formatting characters that can be used.

Character	Description	Notes
X or x	Display in hexadecimal	Must be first character in format
B or b	Display in binary	Must be first character in format
-	Force leading sign character	e.g. +5.3 is displayed instead of 5.3
#	Indicates an optional digit	e.g. ### gives 93
9	Indicates a required digit	e.g. 999 gives 093
5	Indicates rounding to the nearest 5	e.g. ##5# gives 2450 instead of 2448
0	Indicates rounding to the nearest 10	e.g. ##0# gives 2400 instead of 2448
.	Indicates position of decimal place	

Gauges using time outputs use a different set of format texts:

- H - Displays the hours in 24 hour format.

- h - Displays the hours in 12 hour format.
- m - Displays the minutes.
- s - Displays the seconds.
- f - Displays tenths of seconds.
- ff - Displays hundredths of seconds.
- fff - Displays thousandths of seconds (only works for lap time via CAN).
- y - Displays the date in dd-mm-yy format
- z - Displays the date with text for the month, eg 01 Jan 09

Thus, the following formats would display the time in the following manner:


- Hms - 24:00:00
- hmsf - 12:00:00.0
- hmsff - 12:00:00.00
- y - 01-01-09
- hmsz - 12:00:00 01 Jan 09

System information can be shown by adding a value gauge to the screen and setting the **Label Format** property as follows:

- W - Shows the version of the color display firmware.
- vs - Shows the serial number of the display.
- vu - Shows the usage (on time) of the display in hours.
- vr - Shows the reset counter - the number of power on events since the last setup upload.
- vc - Shows the filename of the setup file used to program the display (up to 24 characters).

Bar Gauges

There are four types of bar gauge - rectangle and triangle shaped bars in either horizontal or vertical orientation. A bar contains a number of resolution lines that divide the bar up between the minimum and maximum limits.

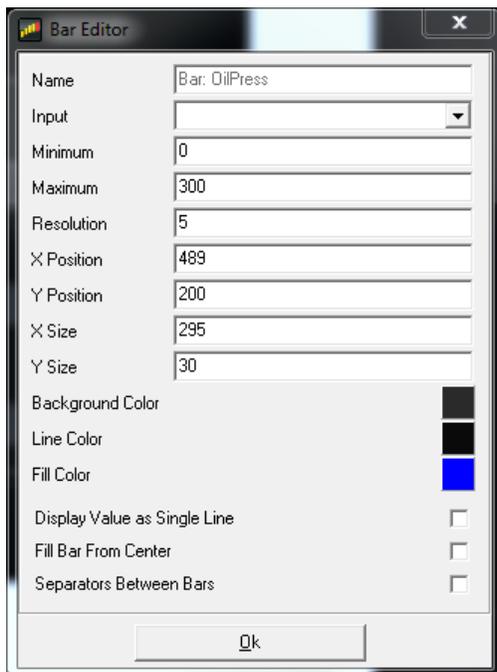

Tacho Gauges

The tacho gauges are typically used with engine speed or road speed and are available as either a curved bar gauge or a round gauge. They use minimum, maximum and resolution in the same manner as bars but also have labeled resolution lines, the frequency of which is specified by the label frequency property. The label values are divided by the label divisor property and then formatted.

This bar tacho gauge has the following special properties:

- **Square Tacho** - If checked, the tacho will be rectangular instead of having an arc.
- **Enable Lower Tacho Limit** - Turns on the lower tacho limit. When enabled, the first part of the tacho (up to **Limit End**) is drawn in **Limit color** as it is filled. If **Enable Flash Below Limit** is checked, the lower part of the tacho will flash if the input value is below **Limit End**.
- **Enable Tacho Limit** - Turns on the upper tacho limit. When enabled, the last part of the tacho (after to **Limit Start**) is drawn in **Limit color** as it is filled. If **Enable Flash Above Limit** is checked, the upper part of the tacho will flash if the input value is above **Limit Start**.
- **Flash Entire Tacho above Limit** - If the upper limit is flashing because **Enable Flash Above Limit** is checked, all the filled tacho blocks will flash if this option is checked.
- **Flash Rate** - The rate at which to flash the tacho when in any of the flash modes.


It can be seen that with these options, the tacho can effectively be divided into three separate different colored regions.

Bar Tacho Editor

Name	BarTacho - Engine RPM	Appearance	<input type="checkbox"/> Square Tacho
Input	Engine_Speed		<input type="checkbox"/> Smooth
Minimum	4000		<input checked="" type="checkbox"/> Separators Between Bars
Maximum	9000	Label Divisor	1000
Resolution	100	Label Format	#
Label Frequency	10	Label Font Size	30
Label Font	Sui Generis	X Size	770
X Position	15	Y Size	195
Y Position	5	Background Color	
		Fill Color	
		Line Color	
		Text Color	
Lower Limit Options		Upper Limit Options	
<input checked="" type="checkbox"/> Enable Lower Tacho Limit		<input checked="" type="checkbox"/> Enable Tacho Limit	
Limit End: 8000		Limit Start: 8600	
Limit Color:		Limit Color:	
<input type="checkbox"/> Enable Flash Below Limit		<input type="checkbox"/> Enable Flash Above Limit	
		<input type="checkbox"/> Flash Entire Tacho above Limit:	
		Flash All Start: 8800	
Flash rate (between 100 and 500 ms): 500			
Ok			

Text Label Gauge


The Text Label gauge is a static gauge (it has no input) that is used to label other gauges and provide static information to the user. The text displayed in the gauge is set in the **Text** property. The **Direction** property is used to specify the direction in which the text is drawn in. *Right* specifies left to right. *Down* specifies top to bottom.

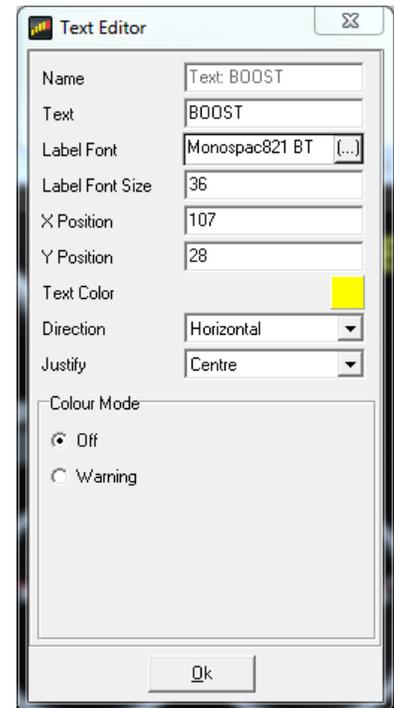

Variable String Gauge

The variable text gauge is used to display text from a text output such as a bit text output. The **Justification** property specifies whether the text is aligned to the left, right or centre of the bounding rectangle.

Note: It is important to select the background color of the value gauge to be the same as the color of the background the gauge is over. Failure to do so will result in corruption of the value displayed.

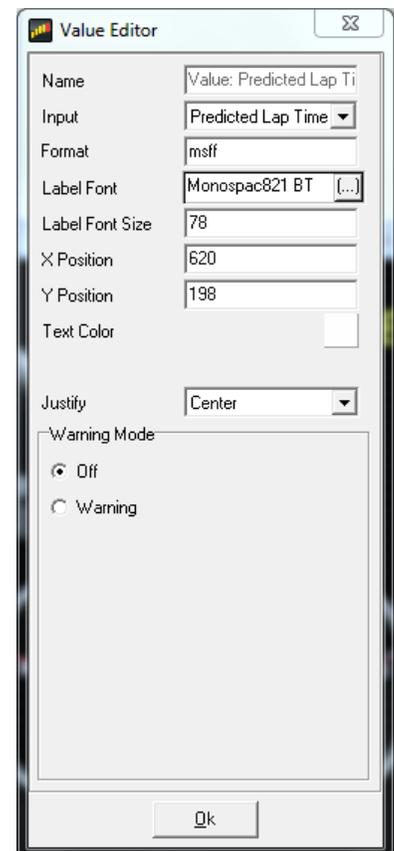

Value Gauge

The Value Gauge shows the value of the output specified in the **Input** property according to the [format](#) specified in the **Format** property. The **Justification** property specifies whether the text is aligned to the left, right or centre of the bounding rectangle.

Note: It is important to select the background color of the value gauge to be the same as the color of the background the gauge is over. Failure to do so will result in corruption of the value displayed.

The value gauge has an optional warning mode that changes the color of the gauge when a warning limit for the input is exceeded. To activate warning mode, check the **Warning Mode Active** box and specify the **Warning color**.

- To have the warning activated when the value of the input goes above a certain value, click the **Input Limit Exceed** button and enter a value for the **Warning Limit**. The displayed data will change from the **Text color** to the **Warning color** when the input value is greater than or equal to the **Warning Limit**.
- To have the warning activated based on a secondary input, click the **Secondary Alarm Output** button and select the output to be used as the trigger. The displayed data will change from the **Text color** to the **Warning color** when the secondary input value is non-zero.
- If **Flash If Warning Active** is checked, the gauge will alternate between the warning color and the background color whilst the warning is active.

The screenshot shows the 'Value Editor' dialog box with the following settings:

- Name: Value: AFR2
- Input: AFR2
- Format: ###
- Label Font: Monospac821 BT
- Label Font Size: 48
- X Position: 688
- Y Position: 149
- Text Color: (empty)
- Justify: Center
- Warning Mode: Warning
- Warning Color: (red square)
- Flash if warning active:
- Warning Triggered By...: Input Limit greater than or equal to
- Warning Limit: 0
- Secondary Alarm Output:
- Alarm Output: (empty)


Buttons: Ok

Progressive Limit Gauge

The Progressive Limit gauge is typically used to signal an approaching rev limit by means of several boxes that change color as the rev limit approaches. This gauge has the following special properties:


- **Box Count** is the number of boxes in the gauge.
- **Box Size** is the width and height of the box in pixels.
- **Limiters Start** is the value at which the first box will change color from **Background color** to **Fill color**.
- **Limiters Offset** is the value added to the **Limiters Start** to determine when the next box changes color.
- **Draw Circular Limit Lights** - if checked, round LED style boxes will be drawn instead of boxes.

For example, if **Box Count** is 3, **Limiters Start** is 8000 and **Limiters Offset** is 200, the first box will change color at 8000, the second at 8200 and the third at 8400.

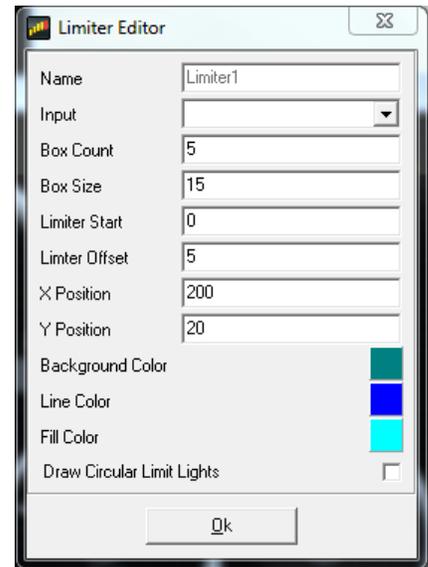

Graphic Gauge

The graphic gauge is used to show a graphic from a file or the output of a [graphic selector](#) output. The **graphic** property has a drop down box from which any [graphic selector](#) outputs and graphics currently present in the setup is selected. At the bottom of the list is the option **Add New graphic** which is used to add a new graphic from a file to the list. graphics must conform to the Microsoft Windows graphic standard and should be no bigger than 800x480 pixels. The graphic can be true color (32 bit) though lower definition graphics may be preferable to reduce the size of the setup.

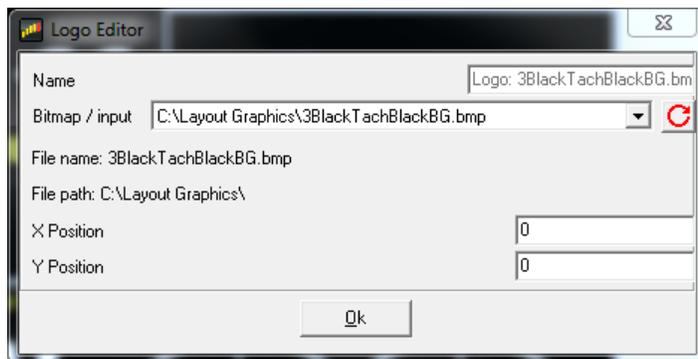

Alarm Bar Gauge

The Alarm Bar gauge is a block that changes color depending on its input. Typically this is used to indicate out-of-range parameters. For example, an Alarm Bar may be placed next to a gauge showing coolant temperature. The input to the Alarm Bar is configured to give an error signal if the coolant temperature rises above a pre-determined level. The bar color changes from the specified background color to the Fill color to give an easily seen warning indication.

Starting in firmware version 14x20, the Alarm Bar function has been updated to use pre-configured color mapping for dynamic color changes instead of having to manually map out specific color bit values as was done in previous versions. The following describes the new method of configuring an Alarm Bar. The older method will follow for reference.


For firmware version 14x20 and newer:

Alarm Bar Color Mapping


Updated Alarm Bar color mapping function allows for Alarm Bar colors to dynamically change between different colors based on assigned channel values. There are 12 different color mapping configurations to choose from. To create a color mapped Alarm Bar, first create a new Output channel – for example ThrottlePosBar. Set Operation to Color Map Operation and then click on the ellipses (“...”).

Limit Filters	Time Filters	ECU Text	Bitmasks	Bit Text	Graphic Selector
Outputs	CAN Receive	CAN Request	Scalars	Functions	Rate Filters
Output Name	Operation	Primary Input			
EngineSpeed	EngineSpeed_scalar	EngineSpeed_raw			
ThrottlePos	ThrottlePos_scalar	ThrottlePos_raw			
ThrottlePosAlarm	Alarm	ThrottlePos			
ThrottlePosBar	Colour Map Operation	ThrottlePos			...

In the Color Map window, select the channel to reference – in this case ThrottlePos – and set the Start and End Value to scale the color mapping to and then select the desired Color Map.

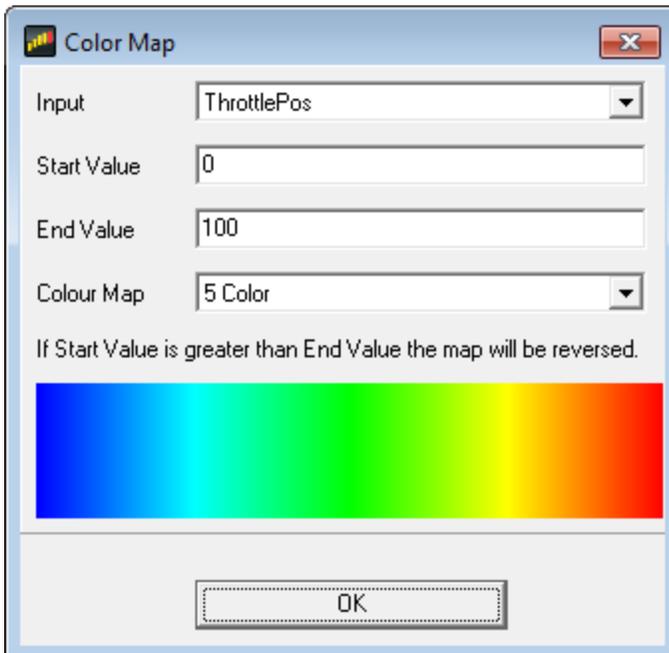

To add this element to a layout, unlock the layout and click on the Alarm Bar button (alarm clock icon). Place the Alarm Bar in your desired location – note that Alarm Bars can be clicked and dragged to set their shape as either a horizontal or vertical bar. Double click the Alarm Bar once placed to access the Alarm Bar Editor window.

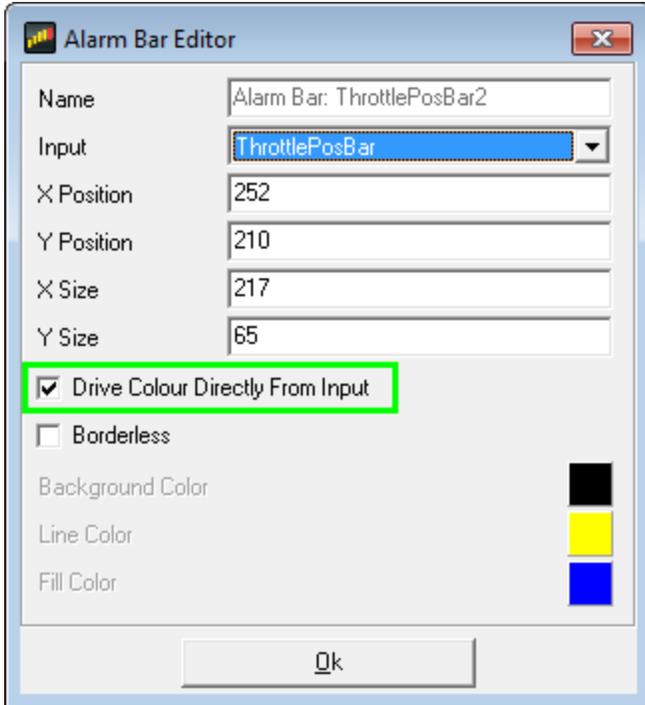

Set the input to the appropriate channel and check Drive Color Directly From Input. All other Alarm Bar functions beyond this are the same as previous versions.

For firmware version 14x17 and older:


The color value is specified as a 24 bit RGB value. The hexadecimal (and decimal) values of some common colors are shown below:

Color	Hexidecimal	Decimal
Black	0	0
Navy	80	128
Blue	0000FF	255
Green	8000	32768
Teal	8080	32896
Lime	00FF00	65280
Cyan	00FFFF	65535
Maroon	800000	8388608
Purple	800080	8388736
Olive	808000	8421376
Grey	808080	8421504
Silver	C0C0C0	12632256
Red	FF0000	16711680
Magenta	FF00FF	16711935
Yellow	FFFF00	16776960
White	FFFFFF	16777215

Typically, a function table will be used to map a given value to a specific color. To avoid interpolation between the color values, the function table should be set up such that a range of values defines one color. For example, the following function table would map brake temperatures of 0 to 250 to blue, 251 to 500 to green, 501 to 700 to yellow and 701 to 1000 to red:

Input	Output
0	255
250	255
251	32768
500	32768
501	16776960
700	16776960
701	16711680
1000	16711680


Note that it is also possible to display an alarm bar underneath a value gauge. For this to work correctly, the alarm bar must be bigger than the maximum likely size of the value gauge. When setting this up in the editor, it is easier to add the alarm bar to the page first then the value gauge; this ensures that the value gauge is visible and makes sizing the alarm bar correctly easier. If you have trouble selecting an item to edit, you can adjust its Z-Order to push it behind other objects.

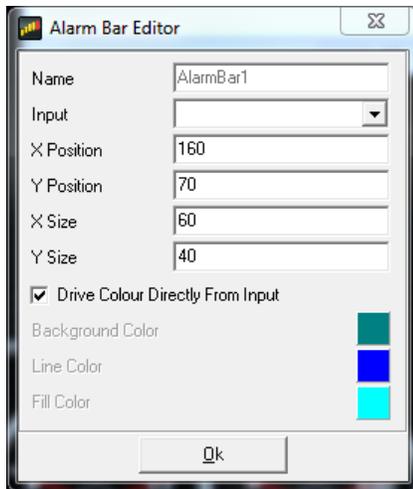

Shape Gauges

Shape gauges are static gauges (i.e. have no input) that are used to draw shapes on the screen. They have two special properties:

- **Shape** specifies the basic shape as either a Rectangle or an Ellipse.
- **Thickness** specifies the thickness of the border drawn around the shape.

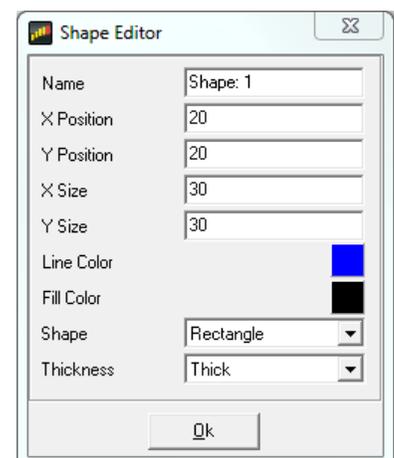


Cross Hair Gauge

The Cross Hair gauge uses two inputs to move a cross hair around a box. The cross hair gauge has the following special properties:

- **XInput**, **YInput** specify the inputs for the X and Y axes of the gauge.


- **X Minimum, Y Minimum** specify the starting values for the X and Y axes.
- **X Maximum, Y Maximum** specify the end values for the X and Y axes.
- **Cursor Size** is the size of the cross hair cursor.
- **Background graphic** can be used to specify a graphic that will be shown behind the cross hairs, This can be used to clarify the meaning of a particular position for the cross hair.

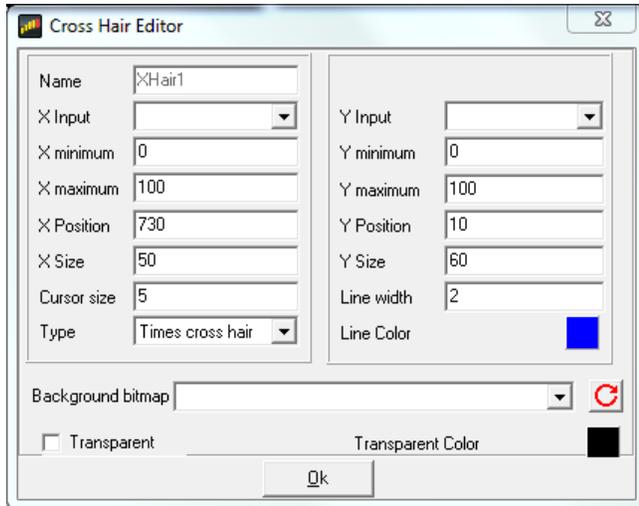

Historical Graph

The Historical Graph gauge is used to show the trend of one or more outputs in the form of a y-t graph. The Historical Graph gauge has the following special properties:

- **Time Base** - This is the width of the x axis in seconds. When a page with a historical graph gauge is first selected, the data is drawn from the left hand side of the graph ($t=0$). As the time progresses, the lines progress towards the right hand side of the graph. Once $t = \text{time base}$, the graph scrolls to the left to make more space available for drawing the lines.
- **Input Count** - The number of lines (outputs) drawn in this graph.
- The **Inputs** box allows the details of each line to be specified:
 - **Input Index** - Selects which line the following settings apply to.
 - **Input** - The output for which the line is drawn.
 - **Line color** - The color of the line.
 - **Minimum** - Specifies the lower range of the y axis of the graph for this line. If the value of the output for this line falls below this value, the line will be drawn at the minimum value.
 - **Maximum** - Specifies the upper range of the y axis of the graph for this line. If the value of the output for this line exceeds this value, the line will be drawn at the maximum value.
- **Background color** - The background color of the graph.

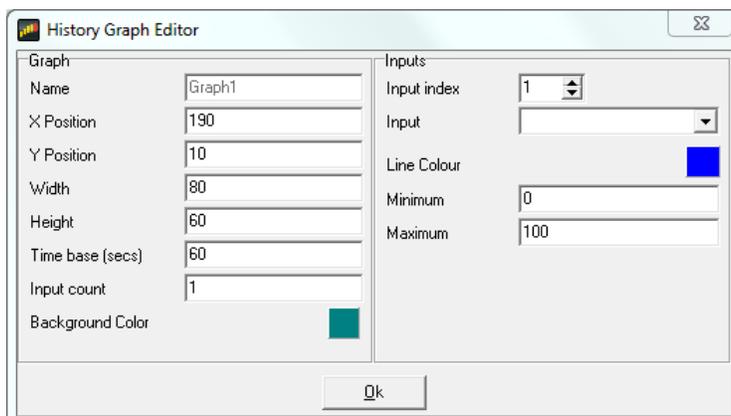


Round Tacho Graphic Gauge

The round tacho graphic gauge allows a scaled pointer or needle to be drawn over a graphic image of a gauge. This allows much more eye catching graphics to be used for round gauges than could otherwise be drawn dynamically by the display hardware.

The round tacho graphic gauge has the following special properties:

- **Background graphic** - the background gauge image.
- **X Centre, Y Centre** - The centre of the gauge from which the logical centre of the pointer will be drawn.
- **Centre Offset** - The number of pixels from the logical pointer centre at which the pointer will be drawn.
- **Length** - The length of the pointer.
- **Start Degrees** - The number of degrees from 6 o'clock (the zero degree position) that the starting value of the gauge should be drawn.
- **End Degrees** - The number of degrees from 6 o'clock (the zero degree position) that the end value of the gauge should be drawn.

The gauge default rotation is clockwise. If you want anti-clockwise operation you switch the Start Val and End Val settings.

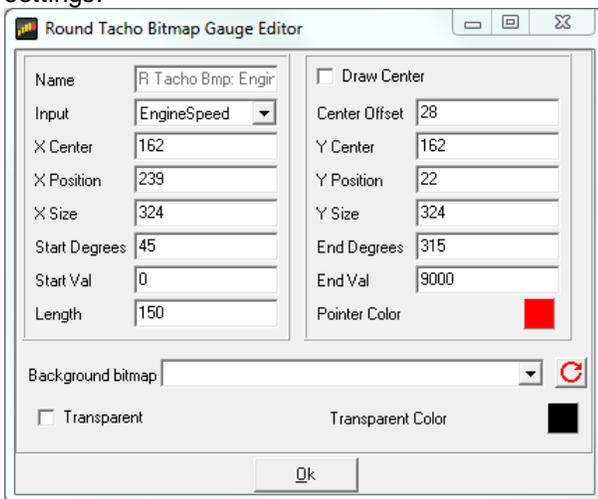

12 Month Limited Warranty

Advanced Engine Management Inc. warrants to the consumer that all AEM High Performance products will be free from defects in material and workmanship for a period of twelve (12) months from date of the original purchase. Products that fail within this 12-month warranty period will be repaired or replaced at AEM's option, when determined by AEM that the product failed due to defects in material or workmanship. This warranty is limited to the repair or replacement of the AEM part. In no event shall this warranty exceed the original purchase price of the AEM part nor shall AEM be responsible for special, incidental or consequential damages or cost incurred due to the failure of this product. Warranty claims to AEM must be transportation prepaid and accompanied with dated proof of purchase. This warranty applies only to the original purchaser of product and is non-transferable. All implied warranties shall be limited in duration to the said 12-month warranty period. Improper use or installation, accident, abuse, unauthorized repairs or alterations voids this warranty. AEM disclaims any liability for consequential damages due to breach of any written or implied warranty on all products manufactured by AEM. Warranty returns will only be accepted by AEM when accompanied by a valid Return Merchandise Authorization (RMA) number. Product must be received by AEM within 30 days of the date the RMA is issued. UEGO oxygen sensors are considered wear items and are not covered under warranty. Please note that before AEM can issue an RMA for any electronic product, it is first necessary for the installer or end user to contact the EMS tech line at 1-800-423-0046 to discuss the problem. Most issues can be resolved over the phone. Under no circumstances should a system be returned or a RMA requested before the above process transpires. AEM will not be responsible for electronic products that are installed incorrectly, installed in a non-approved application, misused, or tampered with. Any AEM electronics product can be returned for repair if it is out of the warranty period. There is a minimum charge of \$50.00 for inspection and diagnosis of AEM electronic parts. Parts used in the repair of AEM electronic components will be extra. AEM will provide an estimate of repairs and receive written or electronic authorization before repairs are made to the product.

Index

- A -

Adding gauges 53
Alarm 41
Alarm bar gauge 61
Alarm page 50

- B -

Bar gauges 57
Basic setup editing 24
Bit string 40
Bitmap 40
Bitmap gauge 61
Bitmask 39
Brightness 51

- C -

CAN 36
CAN .dbc 30
Colors 53
Copy and Paste 55
Creating setups 23
Cross hair gauge 64

- D -

Default colors 53
Default setups 23
Deleting gauges 55
Display editor 28
Display screens 52

- E -

ECU string 39
Editing gauge properties 55

- F -

Features 8

Firmware updating 34
Format 56
Function table 38

- G -

Gauge 56, 58
 adding 53
 alarm bar 61
 bar 57
 bar tacho 58
 bitmap 61
 copy and paste 55
 cross hair 64
 deleting 55
 editing properties 55
 historical graph 65
 moving 54
 progressive limit 61
 resizing 54
 round tacho 58
 round tacho bitmap 66
 selecting 54
 shape 64
 standard properties 56
 text label 59
 value 60
 value formatting 56
 variable string 59
Gauge properties
 editing 55
 standard 56
GPS 13

- H -

Historical graph gauge 65

- I -

Installation 13
Installing The AEM CAN Dash 13
Installing USB Drivers 13
Introduction 2

- L -

Lap timing 13, 45
LEDs 48
Limit filter 38
Logging 32

- M -

Monitor screen 52
Mounting 9
Moving gauges 54

- O -

Odometer 44
On change page 50
Opening setups 22
Outputs 35

- P -

Programming the display 27
Progressive limit gauge 61

- R -

Rate filter 38
Resizing gauges 54
Round tacho bitmap gauge 66

- S -

Saving setups 22
Scalar sensor 38
Screen
 adding gauges 53
 copy and paste 55
 deleting gauges 55
 editing gauge properties 55
 monitor 52
 moving gauges 54
 resizing gauges 54
 selecting gauges 54
Selecting gauges 54

Sensor
 scalar 38
Settings 47
Setup
 editor 35
Setup editor 35
Setups 22
 creating 23
 opening 22
 saving 22
 uploading 27
Shape gauge 64
Shift lights 48
Splash screen 53
Standard gauge properties 56

- T -

Tacho gauges 58
Text label gauge 59
time filter 38
Track mapping 45
Turn Blinkers 44

- U -

Updating firmware 34
Uploading setups 27
USB drivers
 Installing 13

- V -

Value formatting 56
Value gauge 60
Variable string gauge 59

- W -

Warning message 43
Wiring 11

- Z -

Z order 55
