

SPL FRONT LOWER ARM BUSHINGS



Press out stock bushing using appropriate bushing press and driver.

For reference, the following Sears/Craftsman sockets will work as the driver and receiving cup:

Sears P/N 47783 1-5/8" socket
Sears P/N 47516 1 1/8" socket

Note that for the inner bushing it would be necessary to place the arm in a vice and knock the bushing out the rest of the way because the Sears #47783 socket is not deep enough.

Check and clean the bores, file down any nicks in the bore as necessary.



Using a hammer, lightly start the bushing into the bore, making sure bushing is square with the bore. Use press to continue pressing new bushing into compression rod.