


Sparks Racing Clutch Spacing Tool

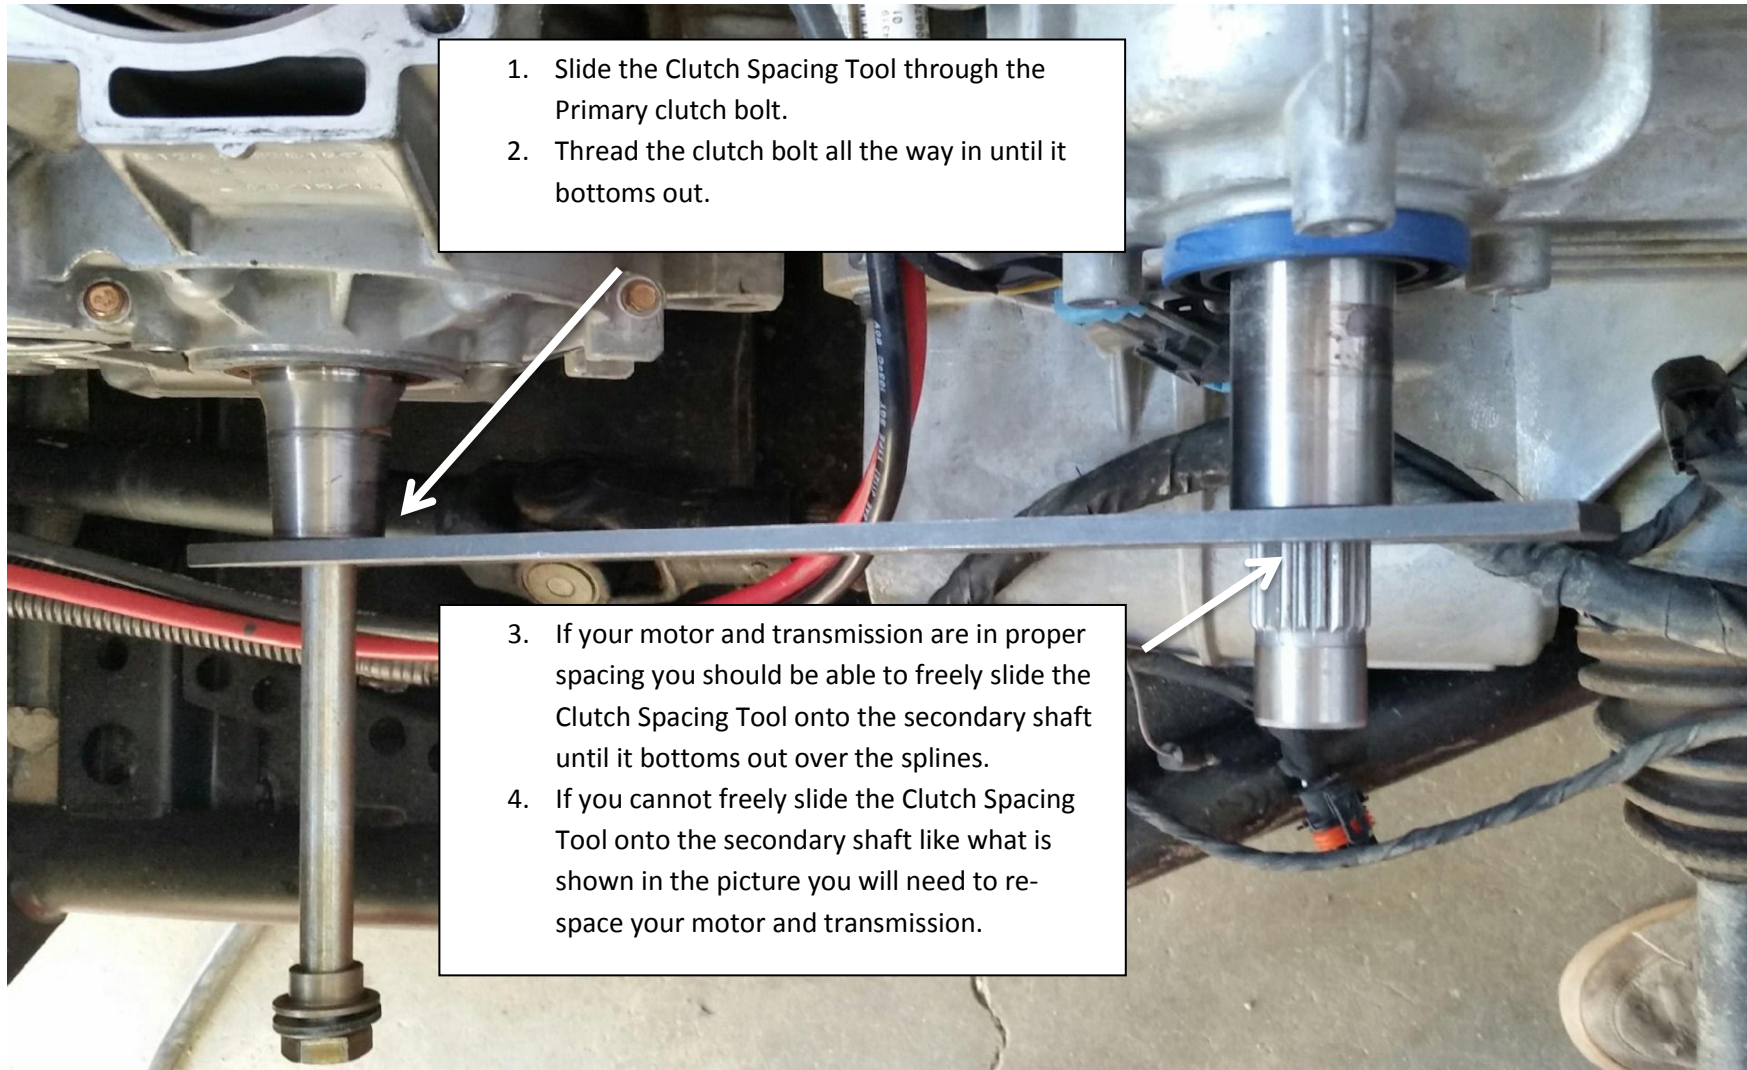

1. Slide the Clutch Spacing Tool through the Primary clutch bolt.
2. Thread the clutch bolt all the way in until it bottoms out.

3. If your motor and transmission are in proper spacing you should be able to freely slide the Clutch Spacing Tool onto the secondary shaft until it bottoms out over the splines.
4. If you cannot freely slide the Clutch Spacing Tool onto the secondary shaft like what is shown in the picture you will need to re-space your motor and transmission.