BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



INSTALLATION INSTRUCTIONS - INSO10

1994 - 1995 FORD MUSTANG 5.0L 1989 - 1995 FORD THUNDERBIRD SUPERCHARGED 3.8L THROTTLE BODY

Part # 1522, 1523 and 1524 / 1994 - 1995 Ford Mustang 5.0L Part # 1715 / 1989 - 1995 Ford Thunderbird Supercharged 3.8L



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

F E 🔠 🔟

BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

Disconnect the negative battery terminal.

STEP 2



Remove the Air Temperature Sensor from the inlet tube. Loosen the clamps on the inlet tube at the throttle body and at the air box. Disconnect the breather hose and remove the inlet tube.

STEP 3

Disconnect the throttle cables and return spring.

STEP 4



Unplug the TPS and IAC valve electrical connections.

STEP 5

Remove the four nuts that retain the throttle body to the intake.

STEP 6

On a work bench, remove the stock TPS and IAC Valve. Install onto the BBK Throttle Body. Use the new provided gasket for the IAC Valve. Use the provided black bushing for the TPS. Install the TPS Bushing before the TPS

STEP 7



Install the provided gasket and throttle body onto the intake using the stock nuts and tighten.

F 🕒 🚜 🔘

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

BBK PERFORMANCE LLC / For any questions, email us: 3060 Performance Circle / TECH@BBKPERFORMANCE.COM Deland, FL 32724 /



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 8



Re-install the throttle cables and return spring.

STEP 9

Reconnect the TPS and IAC electrical connections. Re-install the air inlet tube and tighten the clamps, reconnect the breather hose and Air Temperature Sensor. Then reconnect the negative battery terminal.

STEP 10

Turn the idle screw counter clock-wise until you can see between the screw and the throttle linkage, if using a feeler gauge, .010". Then turn clock-wise one full turn.

 
STEP 11

Be sure the Idle Valve Adjustment screw (gold colored slot head) is turned clock-wise until it bottoms out. Do not use too much force when bottoming out.

STEP 12

Start the engine, if no idle can be achieved, turn the gold colored idle valve screw counter clock- wise in small increments, restarting the engine until desired idle is achieved.

FF 🕒 🛗 🮯



IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019