# INSTALLATION INSTRUCTIONS Part Number: HA-1017R RACE FILTER

#### This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

\* FREE K&N<sup>®</sup> decal To register your warranty, please see us online at knfilters.com/register. FREE K&N<sup>®</sup> decal \*

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter can last many seasons. This filter fits directly into your OE Air Box Assembly, with an OE style sealing bead. No cutting or fitting is required. K&N's NEW "RACE-SPEC" High-Flow Air Filter is performance designed to provide a significant boost in airflow, resulting in increased horsepower & torque. Built with 2 Layers of special pleated media and designed to open up the pleats and provide very low restriction. This K&N<sup>®</sup> High-Flow Air Filter is washable & reusable, Some filters may require applying oil prior to installation for the first time. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N<sup>®</sup> Air Filter seals properly.


- Fuel management modifications WILL BE necessary to obtain optimum performance
- K&N's RACE SPECIFIC SPORTBIKE FILTERS ARE DESIGNED FOR CLOSED COURSE COMPETITION USE ONLY
- Warranted against defective materials or workmanship for One Year.

## If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

### INSTALLATION:

- 1. Remove the stock air filter from the air box.
- 2. Remove the two screws from the stock air filter by pushing them out from the backside. (Fig. 1)
- 3. Install the two screws (removed in the above step) into the supplied frame as shown, using the two supplied retainers. (Fig. 2 & 3)
- 4. Install the K&N<sup>®</sup> filter into the air box with the seal on the filter sitting in the channel of the air box. (Fig. 4)
- 5. Install the frame into the air box with the tabs on the frame sliding in underneath the three retaining clips. (Fig. 5)
- 6. Push the frame down to allow you to align the screws with the holes in the air box. Tighten the screws down evenly to pull the frame into place. (Fig. 6)
- 7. Re-install the air box lid.

#### THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

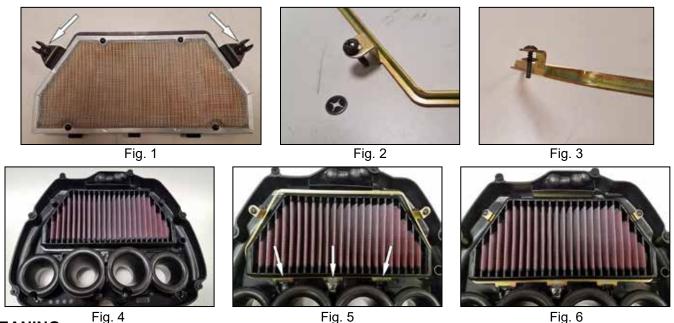

#### CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger<sup>®</sup> service kit, part number 99-5050 or 99-5000 and follow the easy instructions.