



advanced FLOW engineering  
P.O. Box 1719  
Corona, CA 92878  
Support: 951-493-7100  
www.aFeFilters.com

## aFe Silver Bullet

Throttle Body Spacer  
Part Number  
46-38003


### Important!

This kit includes the parts for several different installations; please verify the parts list and read all instruction steps before you begin installation.

Make: TOYOTA TRUCK/SUV

Model	Year	Engine	Model	Year	Engine
4Runner	1996-2000	2.7L	Tacoma	1996-2003	2.4L
T-100	1996-2000	2.4L	Tacoma	1996-2003	2.4L
T-100	1996-2000	2.7L			

1. Unbolt air cleaner assembly from passenger-side of engine. Unclamp air cleaner from throttle body. Remove air cleaner assembly.
2. Remove two bolts and two nuts that secure throttle body to intake manifold. Slide throttle body from studs on intake. Remove the two studs from intake manifold.
3. Install new gasket, aFe Silver Bullet Spacer (engraving towards throttle body), and another gasket and throttle body onto intake manifold using supplied longer bolts. Torque to 15 ft/lb.
4. Install air cleaner assembly on the throttle body. Tighten clamp to throttle body. Install two 25mm spacers in between the air cleaner assembly and engine-mounting bracket. Use supplied longer bolts to secure assembly to mounting bracket. Torque to 12 ft/lb.

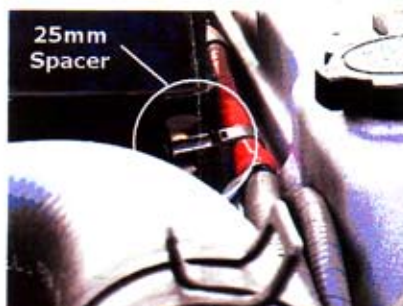

### Parts List

- 1 aFe Silver Bullet Spacer
- 2 Gaskets
- 4 8mmx60mm bolts
- 4 8mm flat washers
- 2 25mm spacers
- 2 6mmx35mm bolts
- 2 6mm washers