

Preparation:

- Disconnect the negative battery terminal. Park the vehicle on level ground and set the emergency brake.
- We recommend reading through the installation instructions in whole before performing the work.
- Estimated Installation Time: **1 Hours**
This installation requires 2 people for best results

You will need the following tools:

- | | | |
|----------------|-----------------------------|-----------------------------|
| - Ratchet | - 5/16" Allen Wrench/Socket | - 7/32" Allen Wrench/Socket |
| - 9/16" Wrench | - 3/4" Wrench | - Razor Blade/Utility Knife |

Included in Kit:

- | | |
|---|--|
| 6 - Button Head Bolts (1/2"-13 x 1 1/2") | 6 - Flat Washers (1/2") |
| 6 - Nylon Lock Nuts (1/2"-13) | 12 - Button Head Bolts (3/8"-16 x 1") |
| 10 - Flat Washers (3/8") | 10 - Nylon Lock Nuts (3/8"-16) |
| 2 - Fender Washers (3/8") | 2 - U-Nuts (3/8"-16) |
| 2 - Mounting Backer Plates | |

Removal:

1. Using a Razor Blade or Utility Knife, cut out the square on front of each bed rail. (Fig A)

Before

After







2. Pull the rubber plug out of the hole shown in (Fig B). Then, repeat this step on the other side of the truck bed.



3. Install the supplied U-Nut (1 per side) onto the tab on each Chase Rack Side Piece as shown in (Fig C).

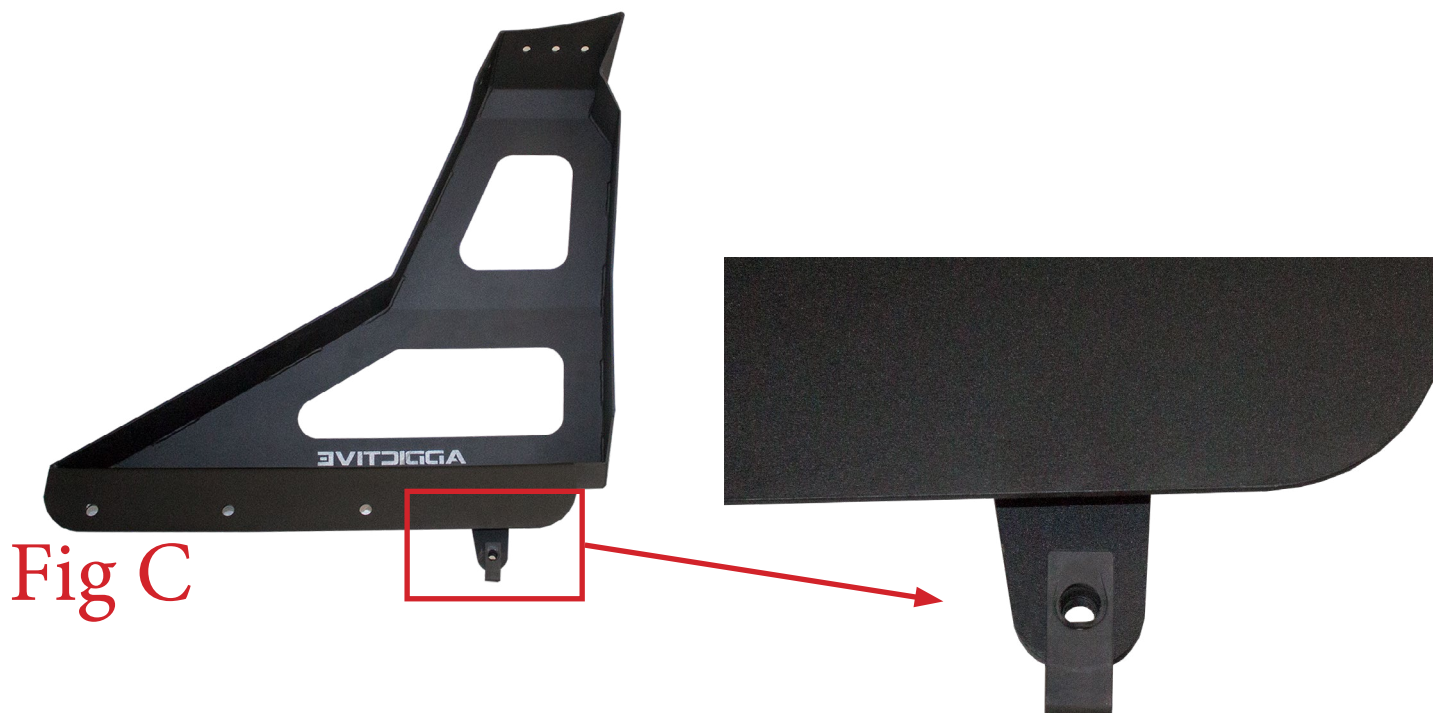

4. Set the Side Pieces in place, so that the tab sits inside the cutout from Step 1. (Fig D)

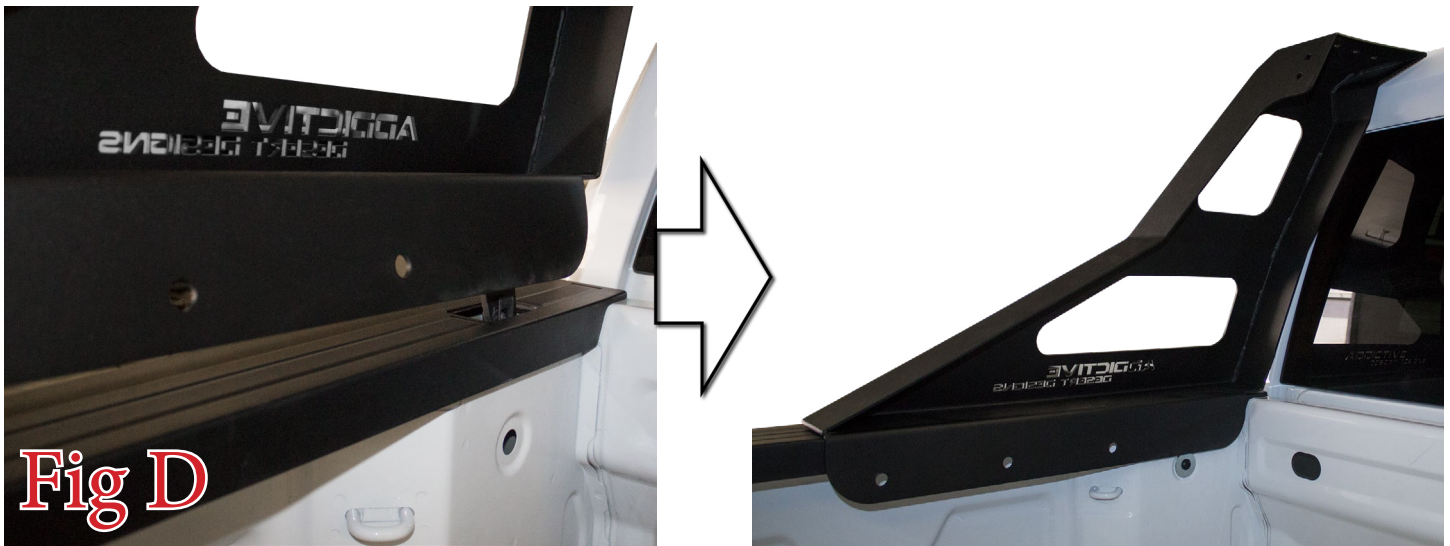

5. Install the supplied 3/8" Bolt (x1) and 3/8" Fender Washer (x1) through the hole from Step 2 and into the U-Nut from Step 3. Leave this bolt loose for now. (Fig E)



6. Set the Mounting Backer Plate in place, sandwiching the bed rail lip between this plate and the chase rack as shown in (Fig F). Then, install the supplied 1/2" Bolts (3 per side), 1/2" Washers (3 per side), and 1/2" Lock Nuts (3 per side). Leave these bolts loose for now.

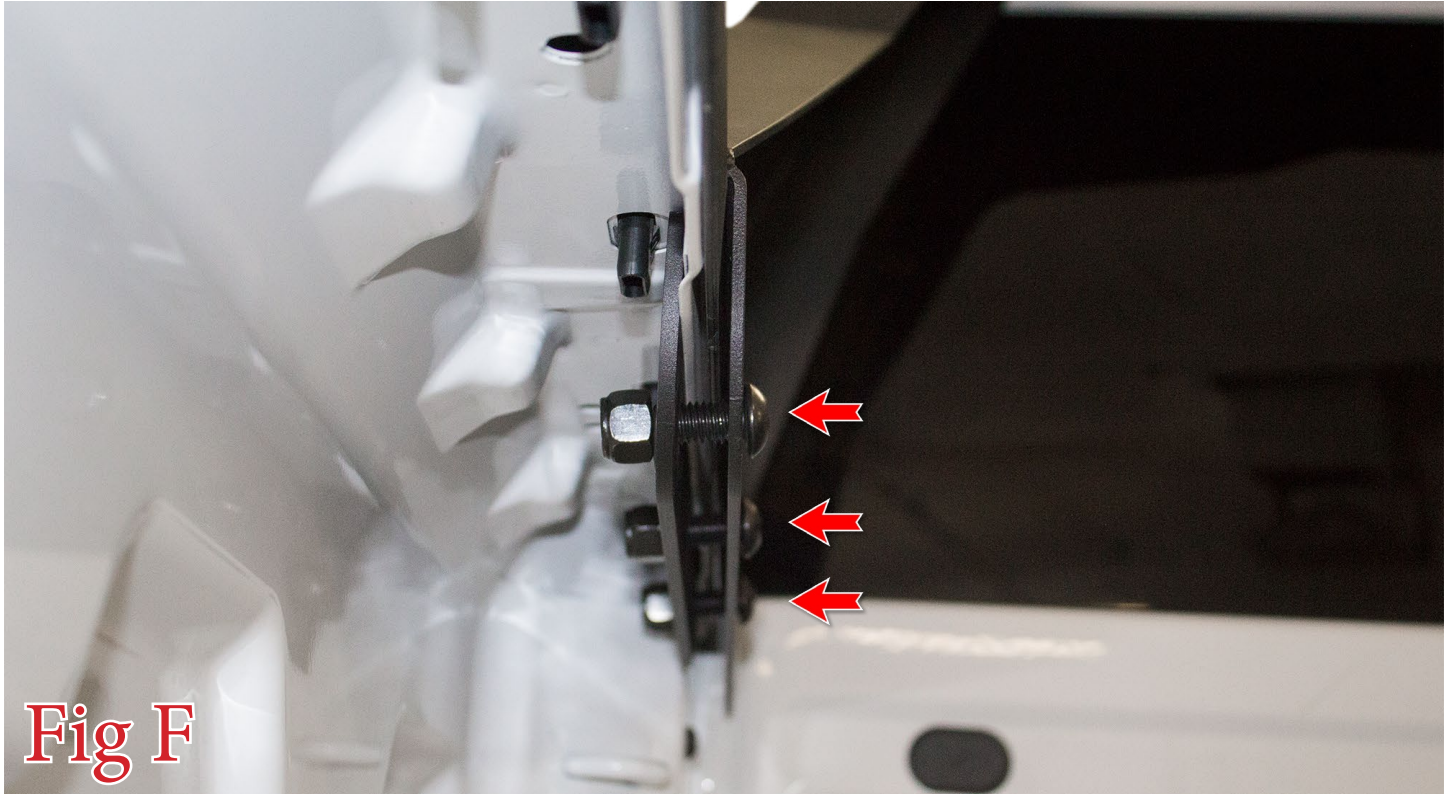


Fig F

7. Repeat Steps 4 - 6 with the other Chase Rack Side Piece. (Fig G)



Fig G



8. Set the Chase Rack Center Rail in place. Then, install the supplied 3/8" Bolts (x10), 3/8" Washers (x10), and 3/8" Lock Nuts (x10). Leave these bolts loose for now. (Fig H)

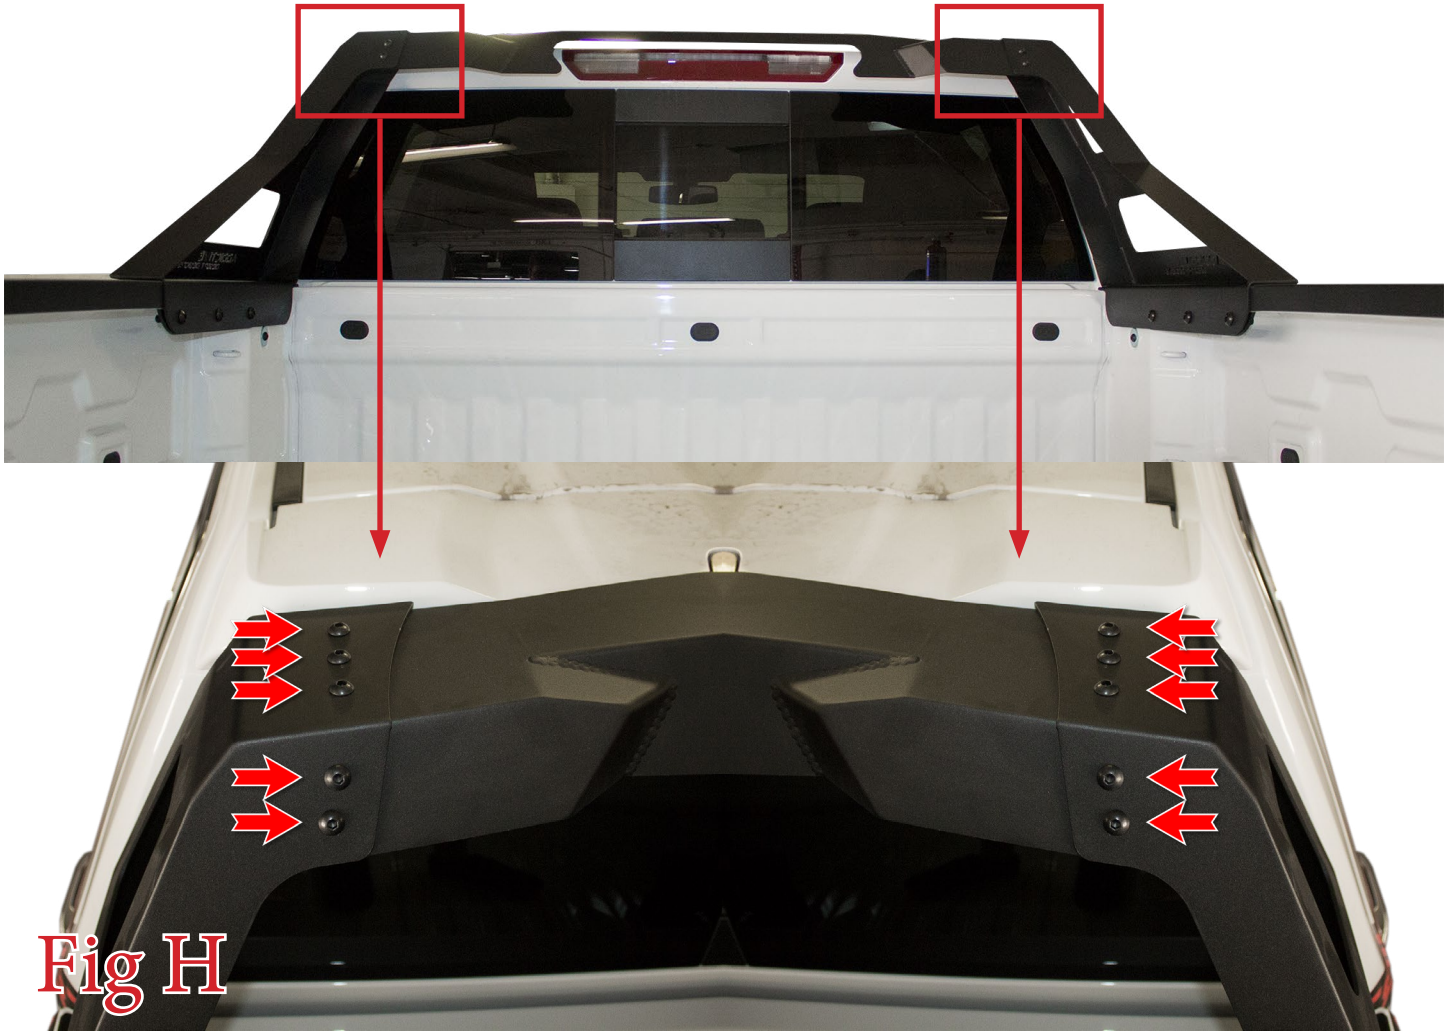


Fig H

9. Tighten the 1/2" Mounting Bolts (from Step 6) to 70 foot pounds.
10. Tighten the 3/8" Mounting Bolts to 25 foot pounds.
11. Stand back and enjoy your new ADD Stealth Fighter™ Chase Rack.
12. Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.

