

PERRIN

PERFORMANCE

Battery Tie Down for All Subaru's

081111

Thank you for purchasing the PERRIN Battery Tie Down. Installation of this kit can be performed by anyone with a 10mm wrench/socket set. Please read through all the instructions before performing installation.

SPECIAL NOTES:


- Tie Down is design for OEM or stock sized battery. This will work with many popular aftermarket batteries, but may not work with all. Please take time and check fitment before bolting down.

Parts Included With PERRIN Battery Tie Down

- (1) PERRIN Battery Tie Down

Installation Procedures

1. Locate battery and remove ground from terminal. Make sure this doesn't contact battery in anyway during installation. **NOTE: If you have a 2008 or newer car, remove plastic grounding wire hold down from OEM bracket at the same time.**
2. Using 10mm wrench loosen nuts securing OEM battery tie down to car. Do not remove nuts completely. When they are loosened enough, you will be able to unhook lower portion long threaded rods from car.
3. Lift OEM tie down from battery and now remove nuts from threaded rods. Place rods through PERRIN battery tie down and install nuts roughly 1 or 2 full turns.
4. Drop PERRIN Tie Down over battery and hook threaded rods back into holes in chassis.
5. Snug rear most nut down a few turns and then tighten front nut down a few turns. Do this back and forth until battery no longer can be moved side to side. If done properly bracket should be equally tight on both nuts and sits flat on battery. If its crooked, loosen tighter side and try again. **NOTE: If you have a 2008 or newer car, reinstall plastic grounding wire hold down onto threaded rod.**
6. Reinstall ground battery terminal back to battery and tighten down.

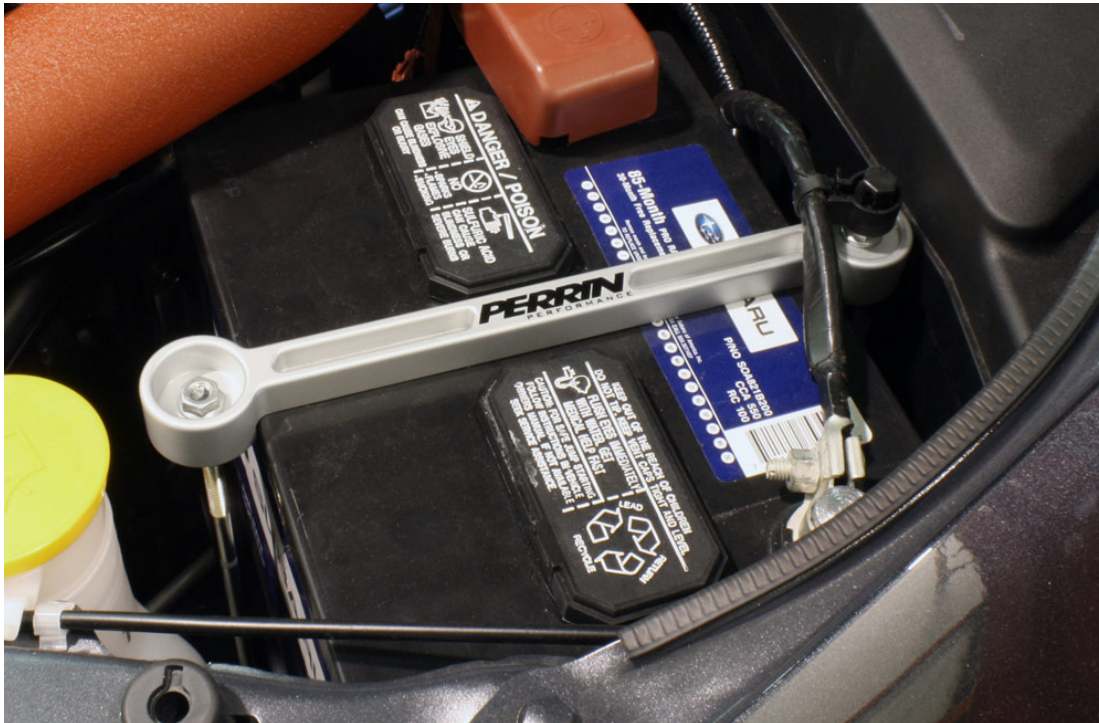

Above picture shows battery tie down on a 2008 WRX

For questions & comments please contact PERRIN

TECH@PERRINPERFORMANCE.COM

503-693-1702

Check Website for Live Chat Assistance