

INSTALLATION GUIDE



Cold Air Intake

2003-2007 Dodge 5.9L Cummins

(Install Time: 1 hour)





DISCLAIMER

1) By installing this product onto your vehicle, you assume all risk and liability associated with its use.


2) It is your responsibility to make sure your vehicle complies with all federal, state, and local emissions laws. Federal and many state and local laws prohibit the removal, modification or rendering in-operative of any part of the design affecting emissions or safety on motor vehicles used on a public street or highway. Violation may result in a fine of up to \$32,500 per vehicle (or possibly higher depending on changes in the law). All civil penalties and fines for removing your vehicle's emissions equipment are the sole responsibility of the end user.

3) Due to its high performance nature, this product may void vehicle manufacturer's warranty.

4) Sinister Mfg Company, Inc. is not responsible for misuse of its products. By installing this product, you release Sinister Mfg Company, Inc. of any and all liability associated with its use.

5) Depending on where you live, restrictions may apply. Check all applicable laws before installing or using!

6) The purchaser and end user releases, indemnifies, discharges and holds harmless Sinister Mfg Company, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Sinister Mfg Company, Inc. will not be liable for any direct, indirect, consequential, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

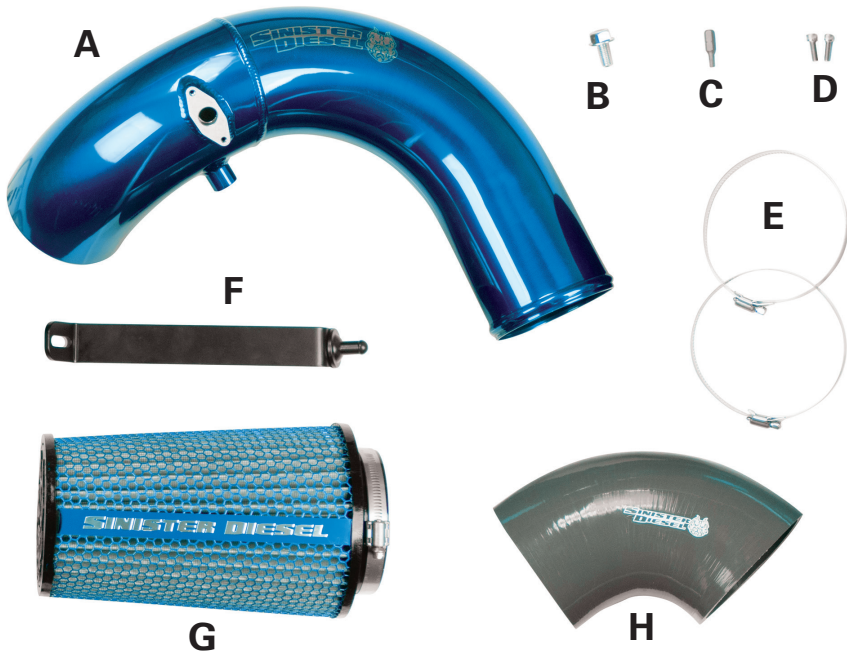

PART:	DESCRIPTION:	QTY:
A	Intake Tube	1
B	M8-1.25 x 16 Flanged Hex Head Bolt	1
C	Security Bit	1
D	8-32 x .5" Socket Head Cap Screw	2
E	Silicone Boot Clamps	2
F	Support Bracket	1
G	Air Filter w/ Clamp	1
H	Silicone Boot	1

IMPORTANT: READ ALL INSTRUCTIONS PRIOR TO INSTALL. Prior to installation, please compare the parts that you have received with the bill of materials provided on this page to assure that you have all the parts necessary for the installation.



CAUTION !!! Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

Note: For your safety we recommend disconnecting any negative battery terminals whenever working on any vehicle. Installation of the Sinister Diesel Cold Air Intake requires removal of the plumbing to the turbo intake. Use caution not to get any dust, debris, or tools left where they may enter the system.

1 Remove factory intake from the truck. The entire assembly, up to the turbo, should be removed.



IMAGE 1

2 Install the new 4" 90° silicone boot (H) onto the turbo with one of the included boot clamps (E) but do not tighten at this time. (Image 1)

3 With the new silicone boot in place, utilizing the remaining boot clamp (E) install the new Sinister Diesel Cold Air Intake tube (A) into the boot. (Image 2)



IMAGE 2

4 Install the provided support bracket (F) with the included M8 bolt (B) (Image 3)

5 Install the “Sinister Diesel” Air Filter (G) With the air filter in place adjust the silicone boot and/or the intake tube to ensure there is not contact between the cold air intake and any part on the truck. (Image 4)

6 Transfer the MAF Sensor from the factory intake over to the new Sinister Diesel intake. Install with the provided (2) socket head cap screws (D) Be sure to connect the electrical connectors. (Image 5)

7 With everything in place, make sure both boot clamps and air filter clamp are tightened.
Start truck and enjoy!



IMAGE 3



IMAGE 4



IMAGE 5







#1 IN PERFORMANCE PARTS & KITS

2025 OPPORTUNITY DR. ROSEVILLE, CA 95678 SINISTERDIESEL.COM 877.692.4110