


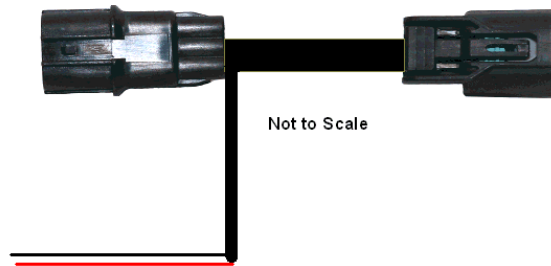

Honda Power Out

Thank you for purchasing our Plug & Play Power adapter. It enables the user to get power out without having to cut into the OEM Harness. It was designed to be used with Lit Whips or License Frame Light. **Please read the instructions fully and familiarize yourself with the components before starting the install.**



1. Remove the Right or Left Rear Taillight, it is held in with rubber grommets.
2. Unplug the taillight and plug the adapter in.



WARNING! Keep power wire away from any hot or moving parts.

3. Run the power wire to the whip or license frame, if it is an XTC frame the White wire is Positive and would be attached to the Red wire and Black is Ground and goes to Black.
4. Strip 1/4" off the wires, using the supplied Butt Connectors Crimp the wires on **following the manufactures directions.**

Red = 12vdc Running Lights

Black = Ground

5. Verify operation
6. Using a heat gun, heat the butt connectors at both ends to seal the connections
7. Using the supplied cable tie's, secure the wires to the car once again making sure that the wire is kept away from any hot or moving parts.

We can also be reached at Support@xtcpowerproducts.com. Please visit our website at

www.xtcpowerproducts.com

XTC Power Products

A Division of XTC Motorsports LLC

380 E Comstock Dr

Chandler, AZ 85225

480-558-8588

www.xtcpowerproducts.com

Copyright © 2023 XTC Motorsports LLC, All Rights Reserved