



Thank you for purchasing your carbon fiber component from ECS Tuning, we appreciate your business!



Sleek Design

- Each component is constructed of sleek hand-laid carbon fiber.
- Components feature a durable gloss clear coat.



Precision Engineering:

- Each component is designed by our engineers to contour to the natural lines of the vehicle.
- Each Component is designed to accentuate the vehicle's styling to provide an aggressive yet tasteful look.




Superior Fitment:

- Each component is designed in-house using state of the art equipment to ensure superior fitment.
- Components feature OE style mounting tabs and hardware for a seamless installation.

Section 1: Installing the Carbon Fiber Component

- Step 1** • Start by thoroughly washing and drying the entire mounting surface area of the vehicle. Then, prep the surface by wiping it down with isopropyl alcohol and a microfiber cloth.
- Step 2** • Next we'll perform a quick test fit WITHOUT removing the backing from the double sided tape.
- Step 3** • Now we're ready to install the carbon fiber component.
 - Start by peeling 1-2 inches of backing off of the double sided tape and folding it over to the side (as shown in photo #3).
 - The goal here is to "dog ear" the backing strip so we can pull it out after the carbon fiber component is correctly laid in place.
- Step 4** • Carefully lay the carbon fiber component into place on the vehicle, ensuring that it is located and aligned properly.
 - Pull each strip back so that the adhesive makes contact with the vehicle, holding it in place.
 - Don't fully remove the backing yet!

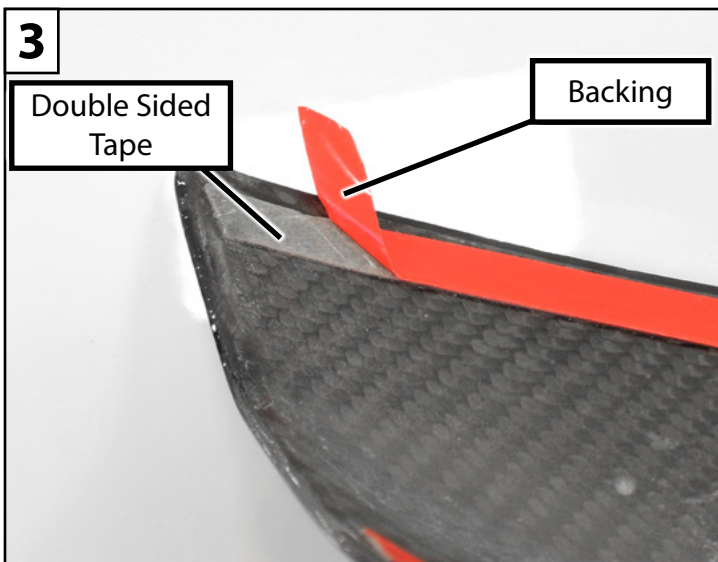

Section 1: Installing the Carbon Fiber Component

- Step 5**
- Push downward on the carbon fiber component to hold it in place while slowly pulling the backing strip out.
 - Take your time here, a little patience can help you to avoid accidentally tearing the backing strip, or causing the double sided tape to not fully adhere to the vehicle.
 - Push down along the entire mounting area of the carbon fiber component once the backing strip has been removed to ensure that the tape fully adheres to the vehicle.
- Step 6**
- Carefully remove any smudges, residue, or fingerprints from the carbon fiber using a clean microfiber cloth and quick detailing spray.
- Step 7**
- To help keep your component looking like new, we highly recommend investing in a carbon fiber cleaning and care kit ([ES2914954](#)). Each kit includes everything you need to maintain the gloss coat to prevent fading and clouding, ensuring that your carbon fiber component keeps looking sharp for years to come.

