



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 462-4222

Installation Instructions


Installation Instructions for Trail Armor Can Am Defender HD8/HD10 12-inch Rear Basket Storage Rack

TARACKSM-CAD

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. **PLEASE NOTE:** This product was designed, fit and tested on new vehicle specifications. Any damage, modifications or excessive wear to your vehicle may require modification to the product and/or your vehicle to ensure proper fitment.

- A. Set the basket side risers on top of vehicle bed side and align riser holes with the LINQ cam locks into the holes in the bedside. Secure LINQ cam locks.
- B. Set upper basket deck into place on top of the risers with the center bolt hole facing forward. Align the risers' bolt holes with the upper basket deck's bolt holes. Secure the risers to the basket using the supplied 5/16 – 18 x 3/4 torx screws and nylock nuts.
- C. Install the supplied cross brace to the center hole of the basket and lower front of the risers. Tighten all fasteners securely.

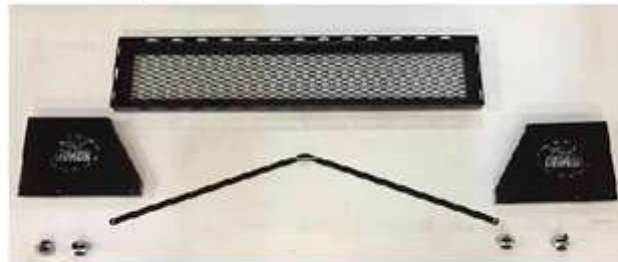

Enjoy! Any questions, contact Trail Armor at 662-462-4222