


Please read and understand these instructions completely before installation to avoid injury to yourself or damage to the machine or accessory.

Dealer: These instructions contain important information for future reference, please give to customer.

1. Parts List:

Item	Part Name	Description	Qty
1	Flyscreen	Polycarbonate	1
2	Screw	3/16-32 x 5/8	3
3	Well Nut	Rubber	3
4	Screw Caps	Black	3
5	Cap Washer	White, retaining	3
6	Instruction Sheet	Rev 4	1

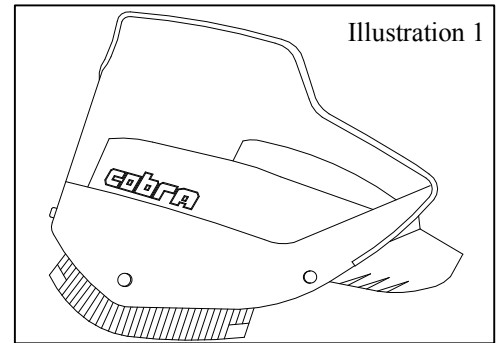


2. Preparation:

- Clean and dry thoroughly the front surface of vehicle dash.
- If your Rev is a 2003 with an OE Flyscreen follow steps (3, a and b).
- If your Rev is a 2004 or newer with an OE Flyscreen, please skip to (3,c).
- All Revs with fairing style windshield that turn with the handle bars skip to step (3, d)

3. Installation:

- 2003 Rev w/OE Flyscreen.** Remove the stock windshield and mounting hardware. It may be necessary to expand the center hole to allow for installation of the center rubber well nut with a 3/8" drill bit. Mount the windshield using the center screw only. With the Flyscreen properly aligned on the machine, use the windshield as a template to mark the two outer mounting holes. Remove the center screw and Flyscreen. With a 3/8" drill bit, drill the two holes that were just marked. Insert the rubber well nuts in the holes that were just drilled in the cowling.
- Install.** Insert the mounting screws in the cap retaining washers as shown in illustration 2. Holding the windshield in place, install the mounting screws through the Flyscreen and in the well nuts that were previously inserted into the cowling holes. Be careful when tightening the screws not to push the lip of the well nut into the cowling. Finish by snapping the screw caps on the cap retaining washers using your thumb.
- 2004 Rev w/OE Flyscreen.** Remove the stock windshield. Use existing hole locations to install the new Cobra Flyscreen. Align the Flyscreen with the pod. Insert the three darts into the Flyscreen holes and firmly press into the existing rubber grommets in the pod.
- All Rev model years with fairing style stock windshield that turns with the handle bars.** Remove the stock windshield and mounting hardware. Visually align the Flyscreen with the cowling of the snowmobile. Be sure that the windshield is centered onto the cowling. With the Flyscreen properly aligned on the machine, use the windshield as a template to mark the mounting holes. Remove the template and with a 3/8" drill bit, drill the holes that were just marked. Remove the fly screen and insert the rubber well nuts in the holes that were just drilled. Finish by following (3,b).

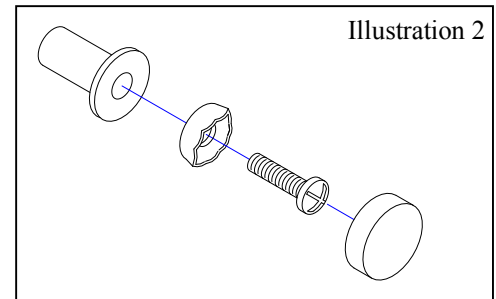

- Maintenance:** Periodically check all fasteners for tightness and re-torque as required.
- Care and Cleaning:** Clean the Flyscreen using a soft cloth and a non-abrasive plastic windshield cleaner.
- Caution:** Prevent drilling damage! Snowmobile models can vary greatly. Carefully review all drilling locations to avoid accidentally damaging important components! **Maintain shallow drill bit penetration.**

LIMITED WARRANTY

POWERMADD warrants this product to be free from defects in material and workmanship under use for the purpose it was intended. POWERMADD shall not be liable for damage or injury caused by defective materials or workmanship. POWERMADD may elect to repair or replace this product, but is the sole judge of any defects in their product. This warranty does not cover any labor costs to remove or reinstall this product and is effect for one year from the original purchase date.