



STEEDA

2015 S550 Mustang Billet Front

Sway Bar Mounts

Instructions for 555-8148




Installation

1. The mounts can be removed and replaced from the engine compartment in most cases.
2. The coolant tank and intake may need to be removed to access the sway bar mounts.
3. Work on one side at a time.
4. Remove the two bolts, securing the sway bar mount to the chassis. Remove the sway bar mount and bushing from the bar. Note: If the car is already using a 1-3/8" ID bushings installed, there is no need to remove the bushings from the bar. Just remove the mounts, remove the bushings from the Steeda billet mounts, and slide the billet mounts into position.
5. Apply the provided grease to the inside of the bushing before installing. This is also a good time to re-apply grease to the bushings, if you already had the correct bushings installed.
6. After installing the bushing and billet mount, install with the factory bolts and washers. Be sure to start both bolts loosely, before tightening them up.
7. Once both bolts have been started, torque the bolts to 76 ft-lbs.



Passenger Side

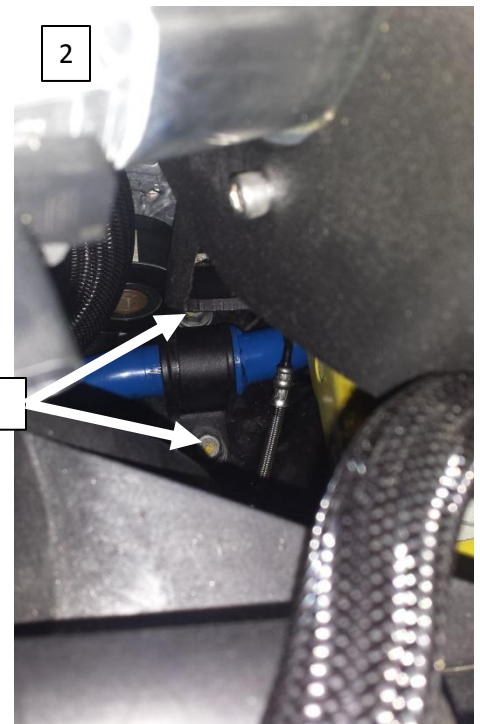

Driver Side

Remove