



# Silver Bullet

Throttle Body Spacer

PN 46-32007

## Important!

Please verify the parts list and read all instruction steps before you begin installation.  
( Dodge Challenger SRT8 6.4L shown in photo)

Make	Model	Year	Engine
DODGE	CHALLENGER SRT8	08-12	V8-6.1/6.4L
DODGE	CHARGER SRT8	06-12	V8-6.1/6.4L
CHRYSLER	300 SRT8	05-12	V8-6.1/6.4L
DODGE	CHALLENGER RT	08-12	V8-5.7L
DODGE	CHARGER RT	06-12	V8-5.7L
DODGE	MAGNUM	05-08	V8-5.7/6.1L
CHRYSLER	300 C	05-12	V8-5.7L

**NOTES:** aFe POWER Intake system may require slight modification to fit with this throttle body spacer

**Step 1.** Remove the OE intake tube from the vehicle. Disconnect the temperature sensor from the intake tube.


**Step 2.** Remove the 4 throttle body screws. Leave factory sealing O-ring in place.

**Step 3.** Insert the new *Silver Bullet* throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).


**Step 4.** Fasten the throttle body assembly using the (4) furnished longer screws and washers. Tighten the screws to 5 Nm (48 lb/in). Use 2" length screws for V8-5.7L or use 2-7/8" length screws for V8-6.1/6.4L

**Step 5.** Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the temperature sensor.


**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.

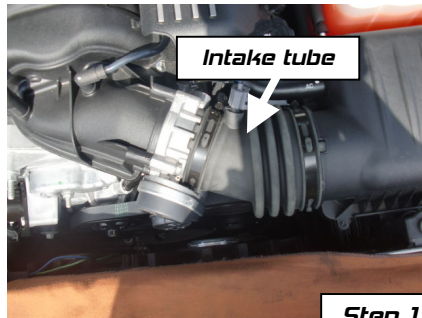


Step 1

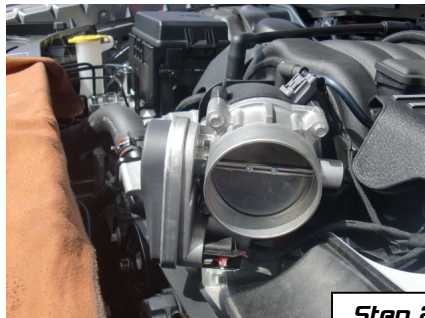

Step 2

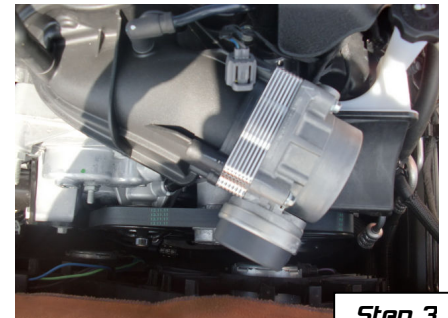

Step 3

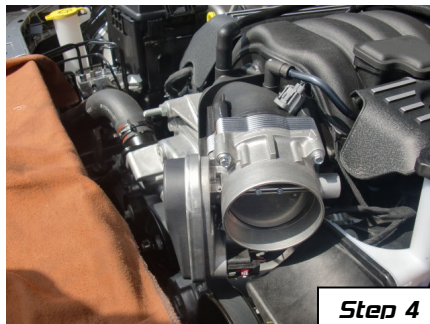

Step 4



Step 5

### Parts List

- 1 *Silver Bullet* Spacer
- 1 Gasket
- 4 #12 x 2-7/8"L screws for plastic
- 4 #12 x 2"L screws for plastic
- 4 Washers

**advanced FLOW engineering**

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com