



INSTALLATION INSTRUCTIONS

Rock Sliders: for Polaris RZR® 1000

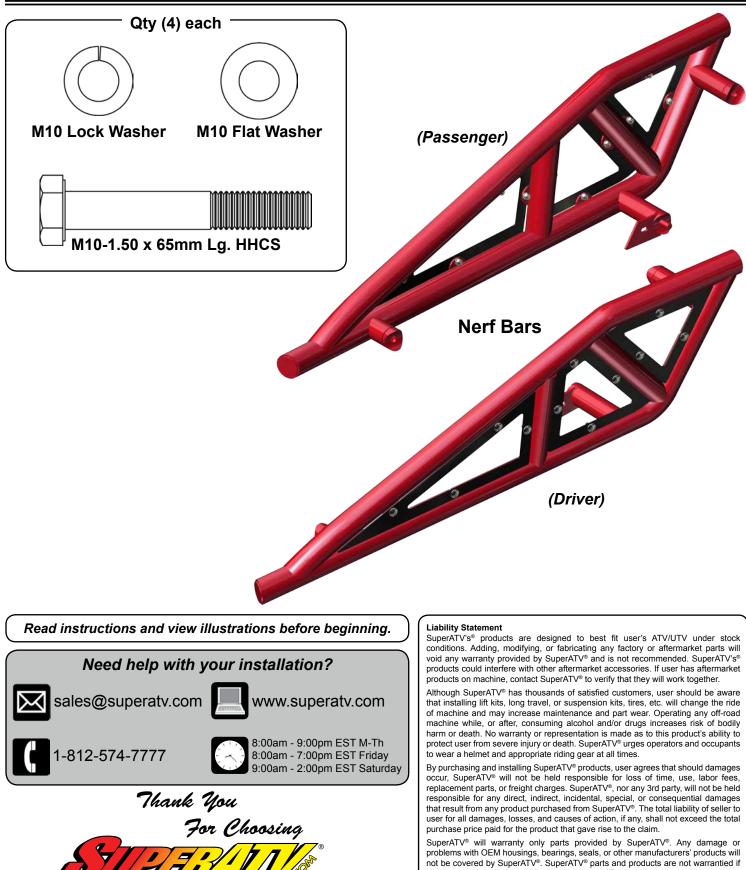

© 2014 SuperATV.com[®]. All Rights Reserved.

item was not installed properly, misused, or modified

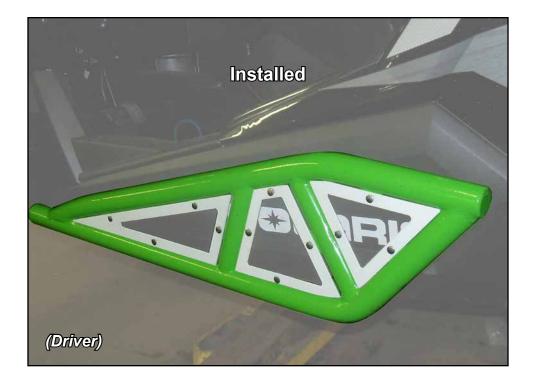

Do not tighten hardware completely unless noted

Keep all components removed from machine.

- 1. Remove stock Rock Sliders if applicable.
- 2. Remove stock hardware shown in Fig. 1a.
- 3. Drill through Frame as shown in Figs. 1a 1b. Hole to be straight and large enough to accept Ø10mm Bolt. Repeat for opposite side.
- 4. Install Nerf Bar to Frame with M10-1.50 x 65mm Lg. HHCS, M10 Lock Washers, and M10 Flat Washers. See Fig. 2.
- Use stock hardware as shown in Fig. 2 to complete installation.
- 5. Repeat steps for opposite side.
- 6. Align to machine and tighten all hardware.

(illustrations on following pages)



