


# **INSTALLATION INSTRUCTIONS**

Rear Brush Guard: for Polaris RZR® XP 1000

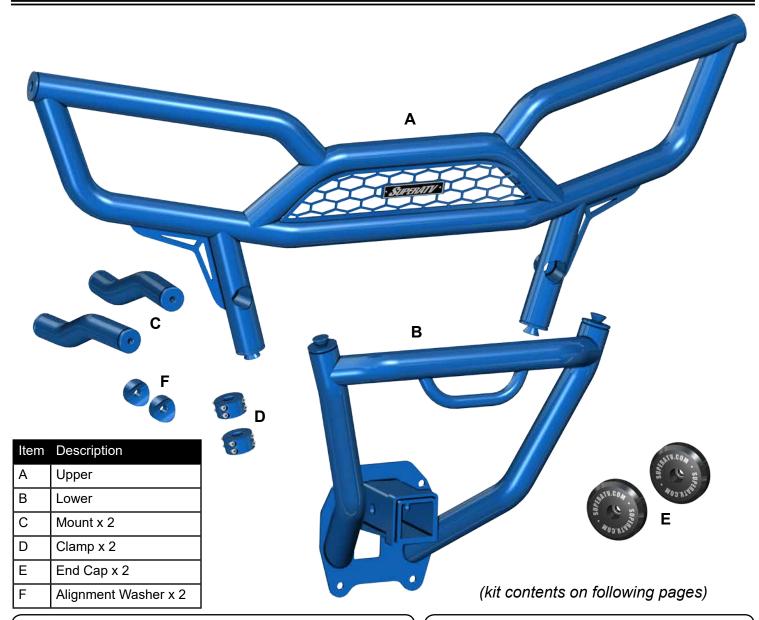

## Read instructions and view illustrations before beginning.

# Need help with your installation? sales@superatv.com www.superatv.com 1-812-574-7777 8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday 9:00am - 2:00pm EST Saturday

Thank You For Choosing


### **Liability Statement**

SuperATV's products are designed to best fit users ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory, or aftermarket, parts will void any warranty provided by SuperATV and is not recommended. SuperATV's products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV to verify that they will work together.

Although SuperATV has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV products, user agrees that should damages occur, SuperATV will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV will warranty only parts provided by SuperATV. Any damage or problems with OEM housings, bearings, seals, or other manufacturers products will not be covered by SuperATV. SuperATV parts and products are not warrantied if item was not installed properly, misused, or modified.

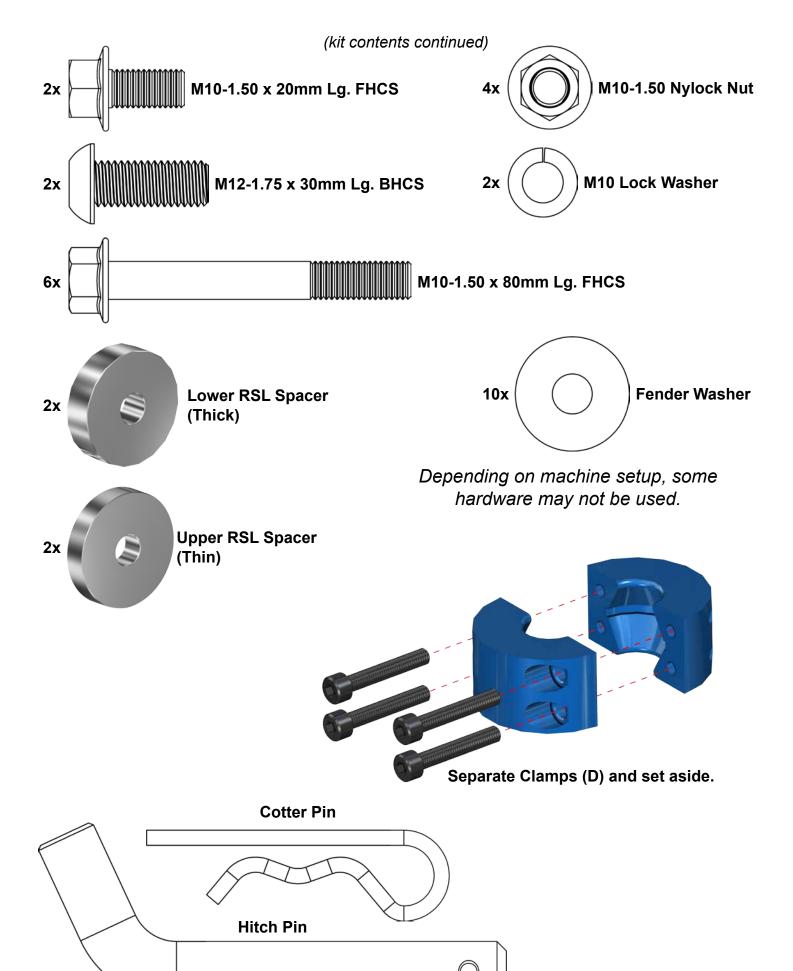

# (kit contents continued)

M12 hardware shown will be used for Lower (B) mounting depending on model; see page 8.







Do not tighten hardware completely unless noted. Keep all components removed from machine.


- Remove stock Bumper and Facia.



- Remove Plate and Radius Arms hardware.




IN-RBG-P-RZR1K-001 4

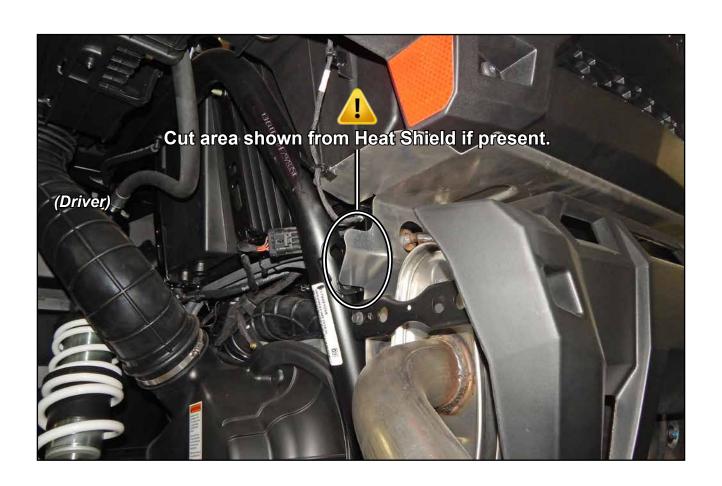


IN-RBG-P-RZR1K-001 5


- Drill through Frame as shown. Hole to be straight and large enough to accept Ø10mm Bolt.
- Repeat for opposite side.
- Reinstall Rear Fascia.



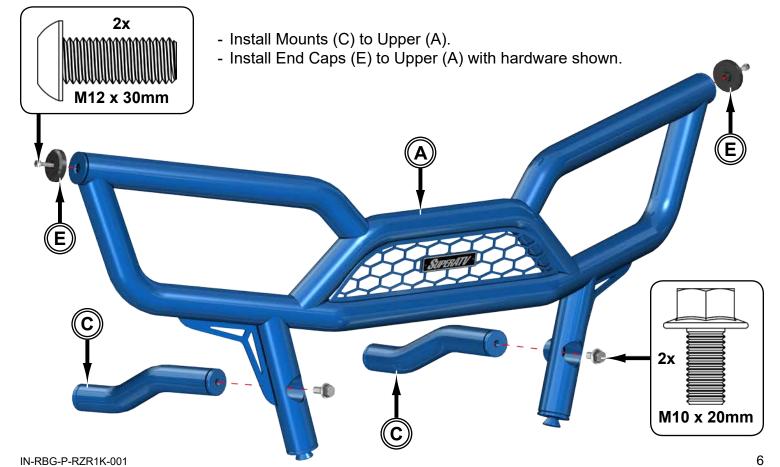


- Secure Upper (A) to Frame with hardware shown.

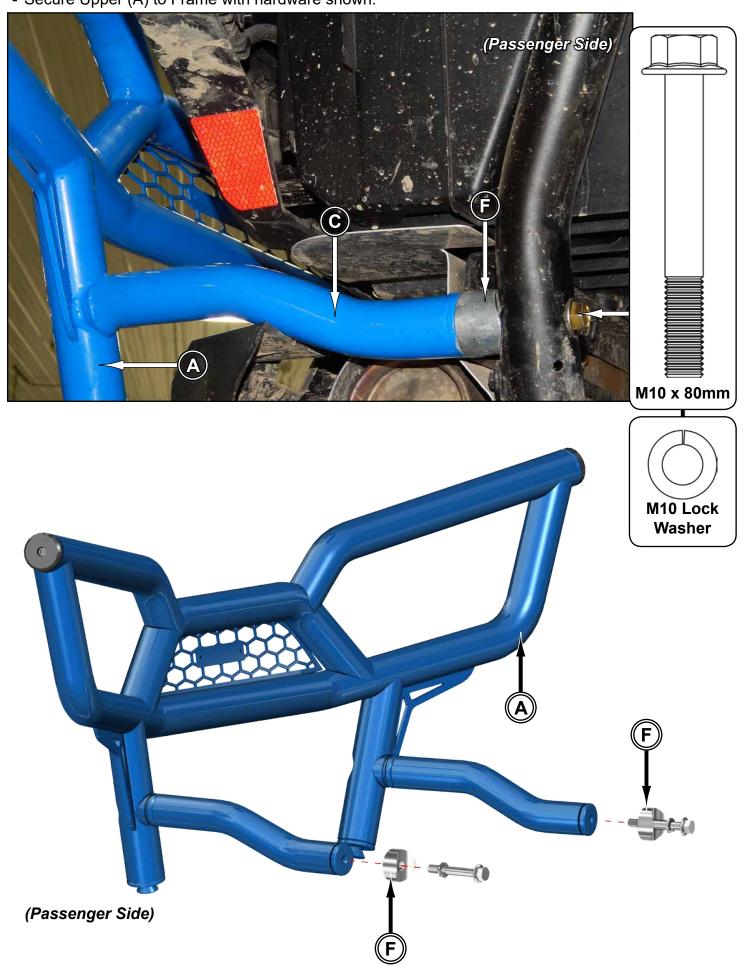

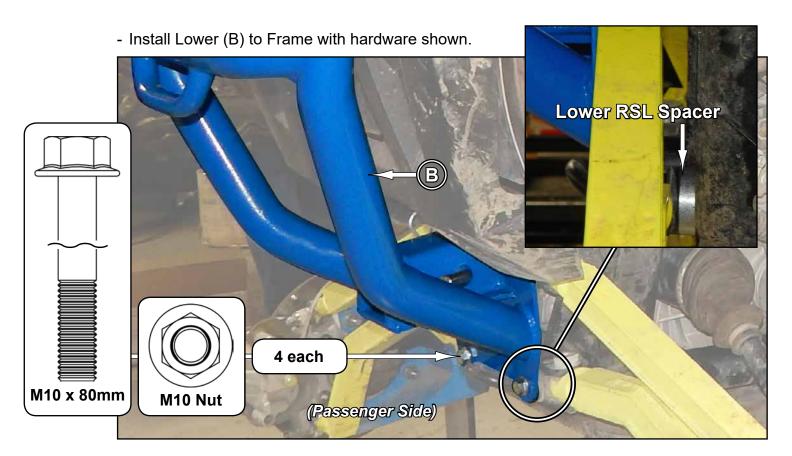




- Due to manufacturer changes, some machines have different size mounting holes.
- If stock RSL hardware will not fit into mounting holes of Lower (B), installer must drill mounting holes in Lower (B) large enough to accept Ø12mm bolts.

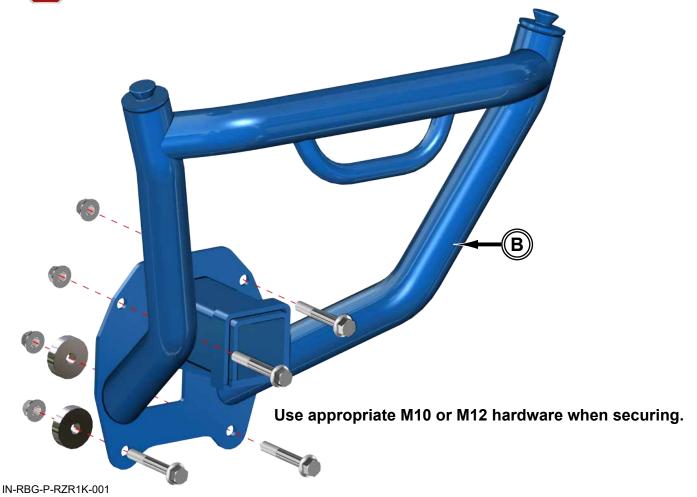

8


- Join Upper (A) and Lower (B) with Clamps (D).Align to machine and tighten all hardware completely.

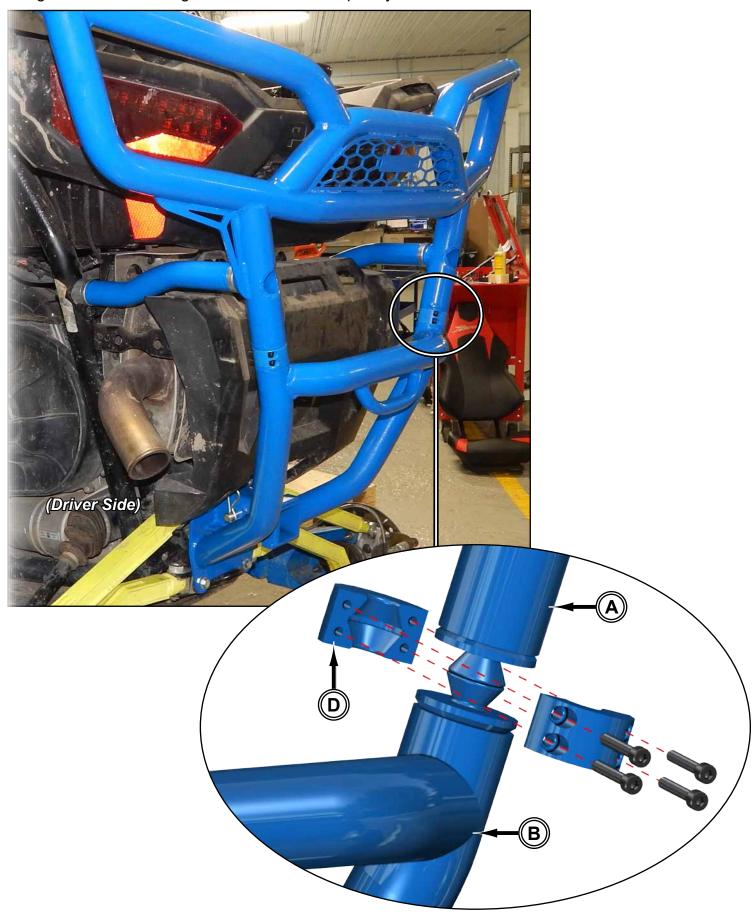


9 IN-RBG-P-RZR1K-001

If SuperATV p/n FP-P-RZR1K-003 Rear Fender Protectors are installed, Rear Brush Guard may need to be spaced away from Frame for best fit:

- Use Fender Washers and/or Upper RSL Spacers as needed.
- Due to machine variations, different combinations of components may be required.
- Keep hardware for future use if Rear Fender Protectors are not installed.

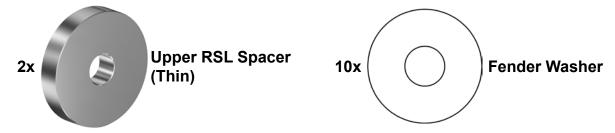

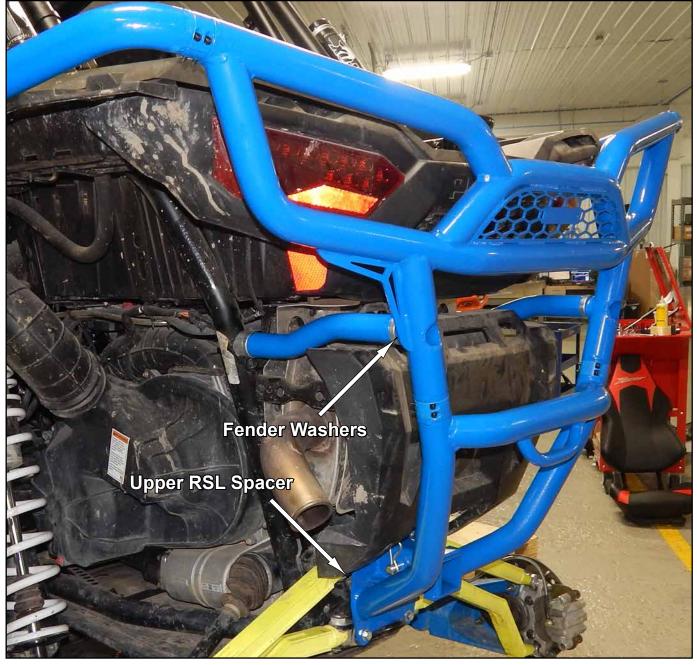

IN-RBG-P-RZR1K-001 10