1010 N Batavia St STE J Orange, CA 92867 Phone: 888-543-6302

www.ftecu.com / sales@ftecu.com

Installation Guide: 2017+ Honda CBR1000 Bike Side Harness

- 1. Remove the seat on the bike to expose the diagnostic service tool connector. (Fig.1)
- 2. Plug in your bike side harness to the male end of the diagnostic service tool.
- 3. <u>IMPORTANT:</u> Read out the ECU before flashing. Once read out file is saved, flash the ECU. After the first full flash you want to flash the ECU one more time with the same file and no changes. Once the second flash is done you are free to make changes.
- 4. Once done flashing, unplug the bike side harness and put the seat back on.

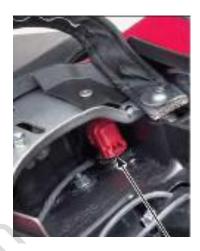


Fig.1 Locate Connector