

997.2 PDK TURBO INSTALLATION MANUAL




一、REMOTE CONTROL SYSTEM FOR YOUR REFERENCE

1. Yellow: TPS voltage signal 0-5v
2. Red: key on switch
3. Brown: GND
4. One-way valve
5. Vacuum Electric valve
6. Vacuum Canister






二、SEARCH KEY OIV POWER⊕、GND⊖ AND TPS VOLTAGE SIGNAL 0~5V。

1、YOU CAN FIND KEY OIV POWER AND ELECTRONIC ACCELERATOR AROUND GAS PEDAL, THEN PUT YELLOW CABLE WITH GREEN/YELLOW CABLE SIDE BY SIDE.

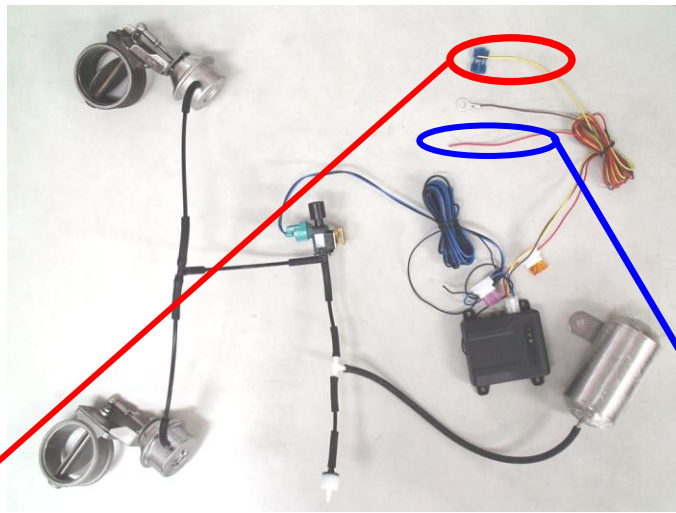
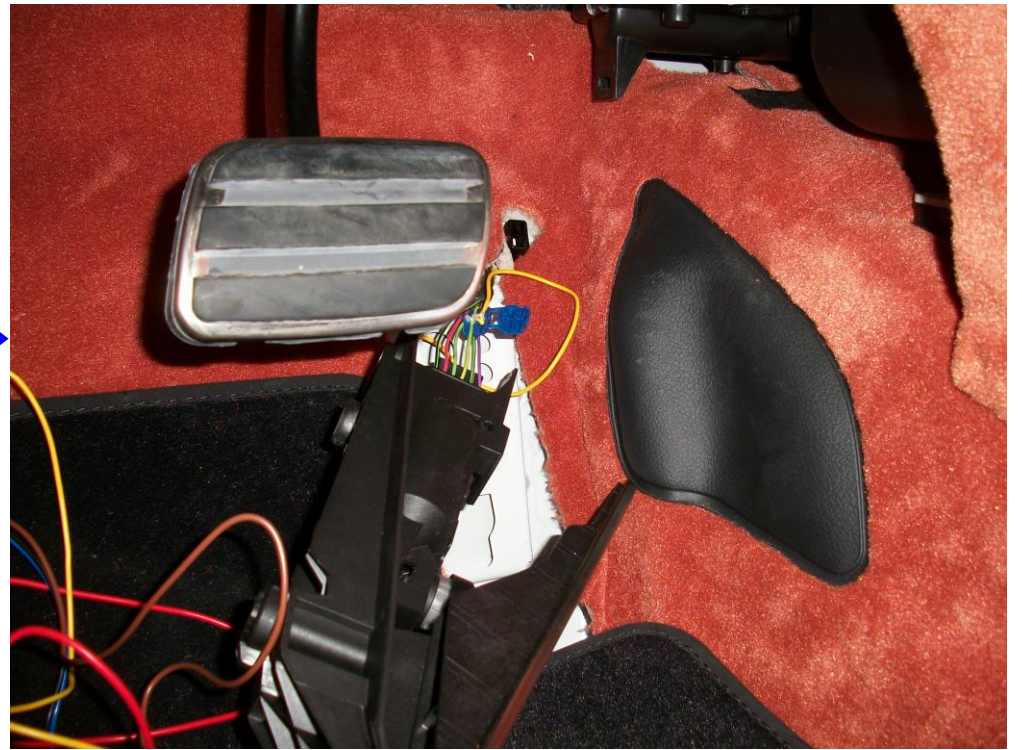
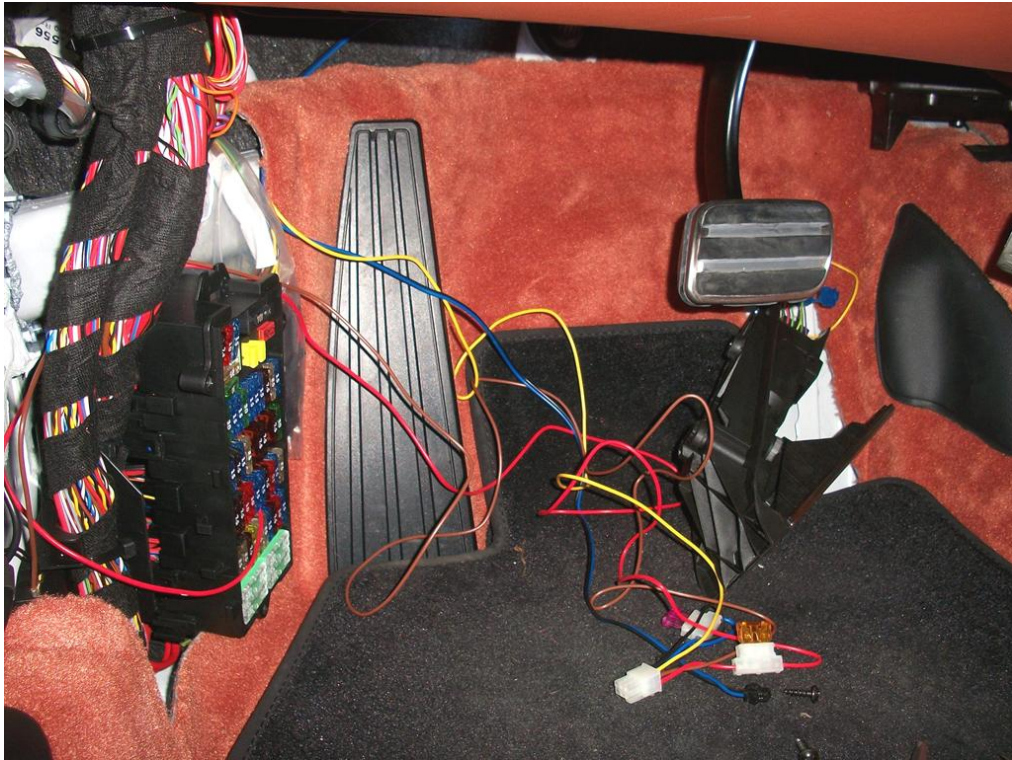


OPEN KEY OIV POWER AND
PLUG IN RED CABLE LIKE THE
SITE PHOTO SHOW.

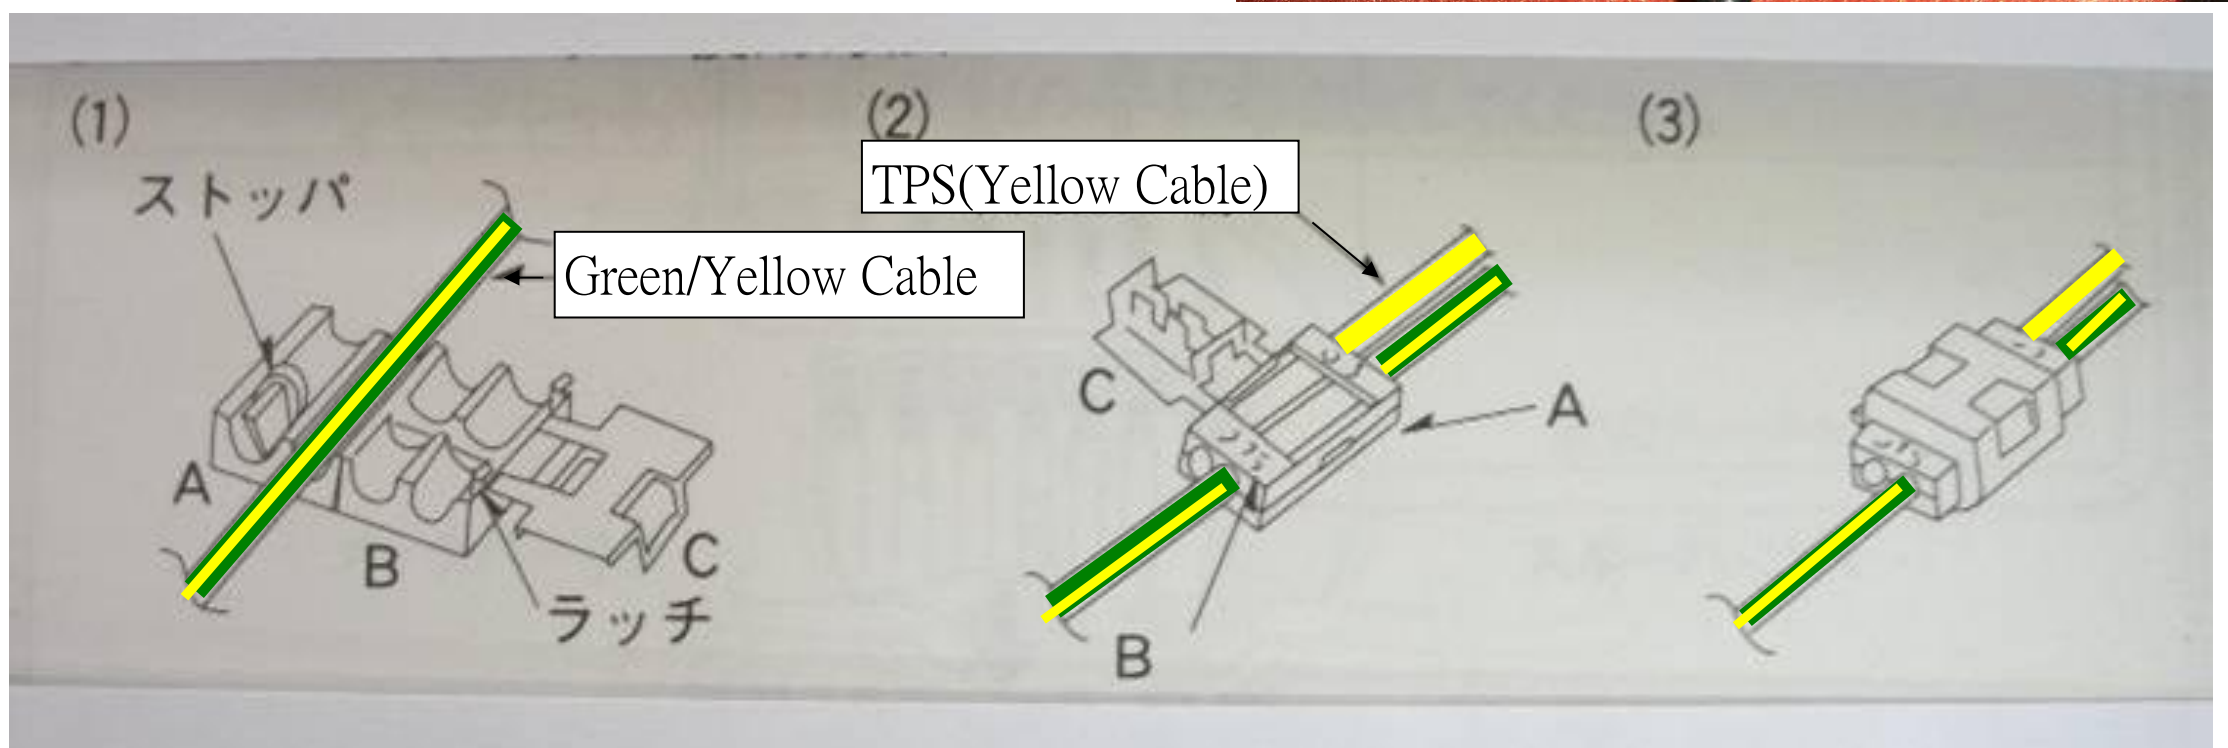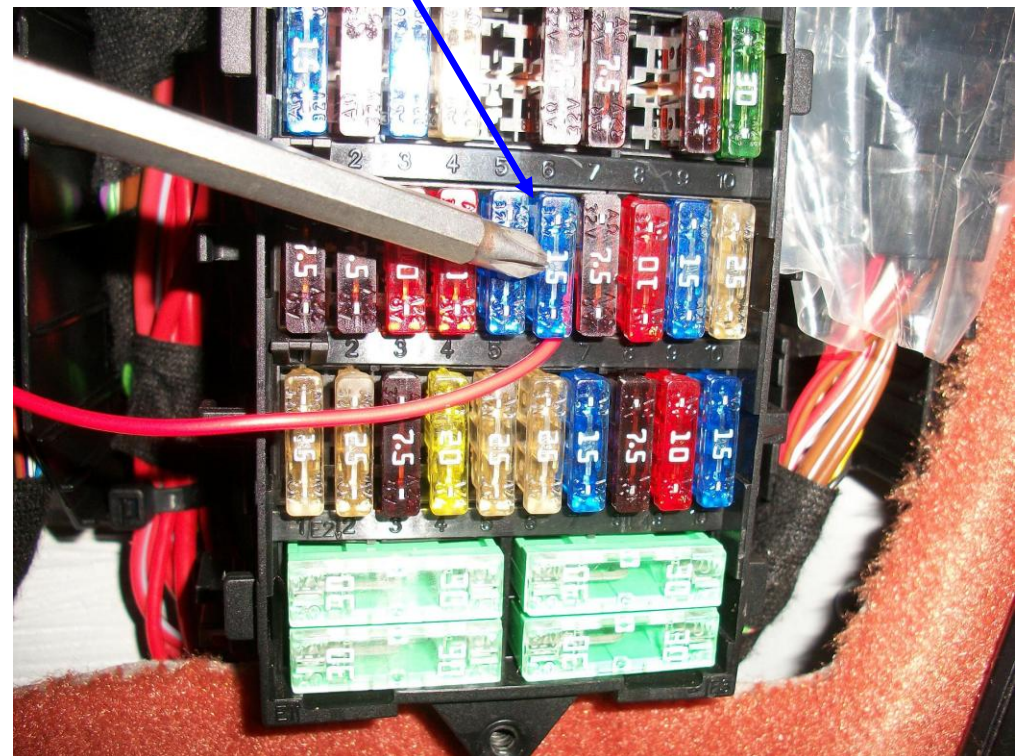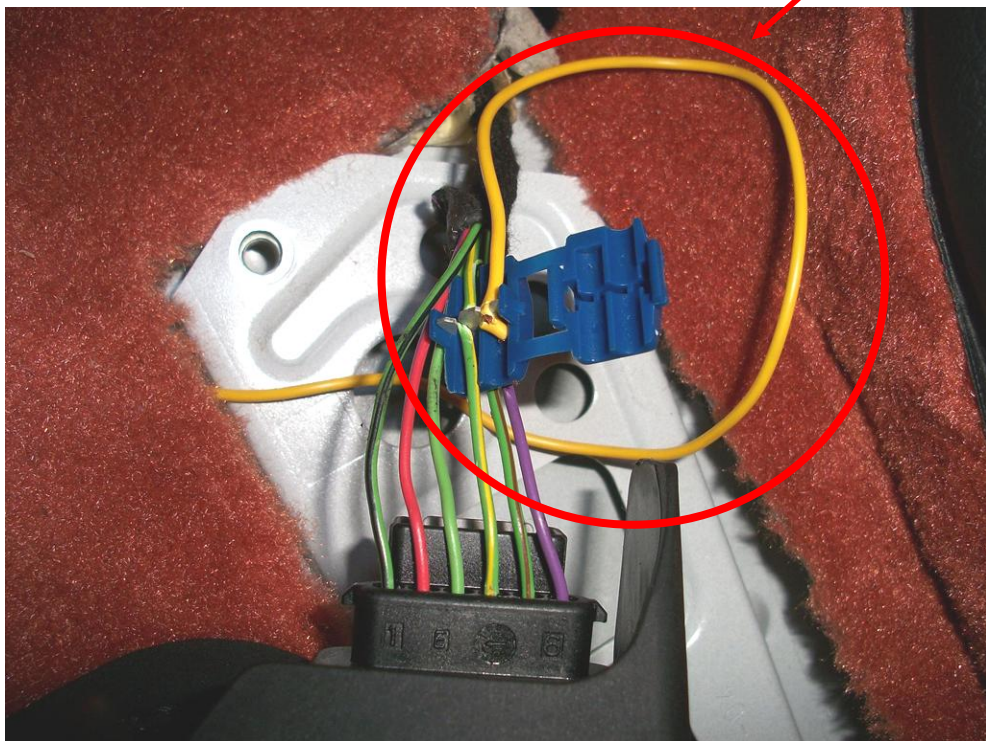





2、GND⊖ : HANG ON GND



TILL NOW YOU ARE COMPLETED THE FIRST HALF OF INSTALLATION WORK.

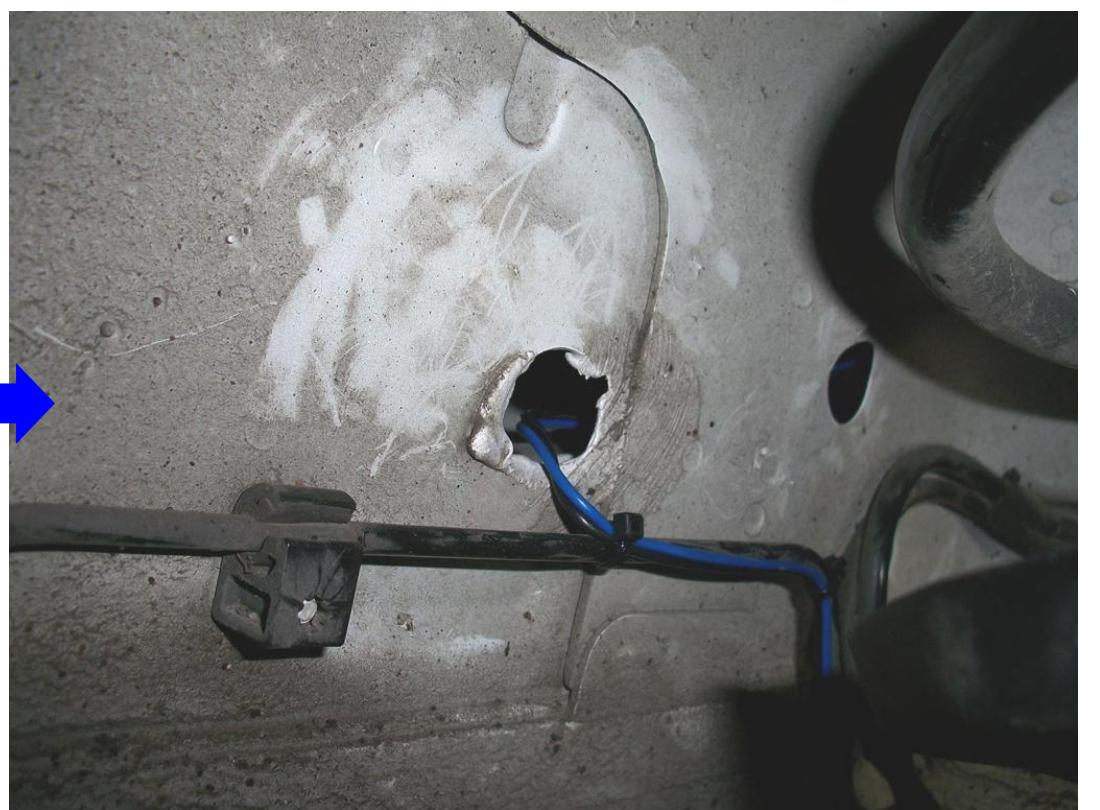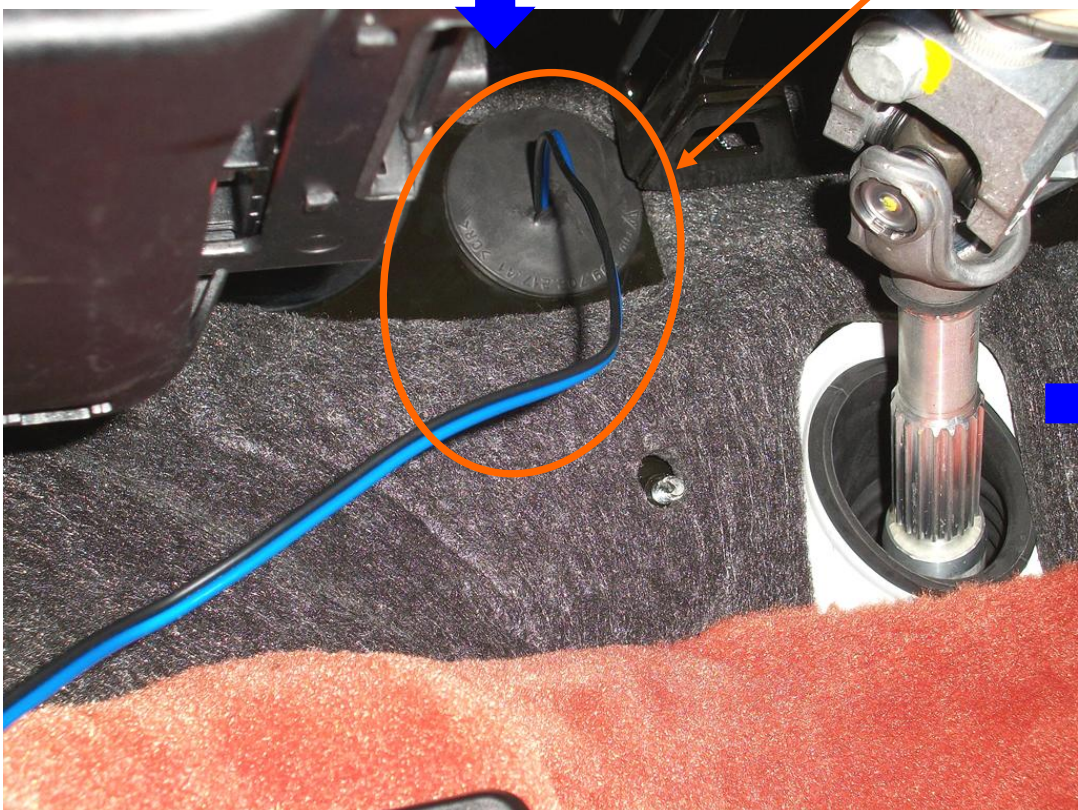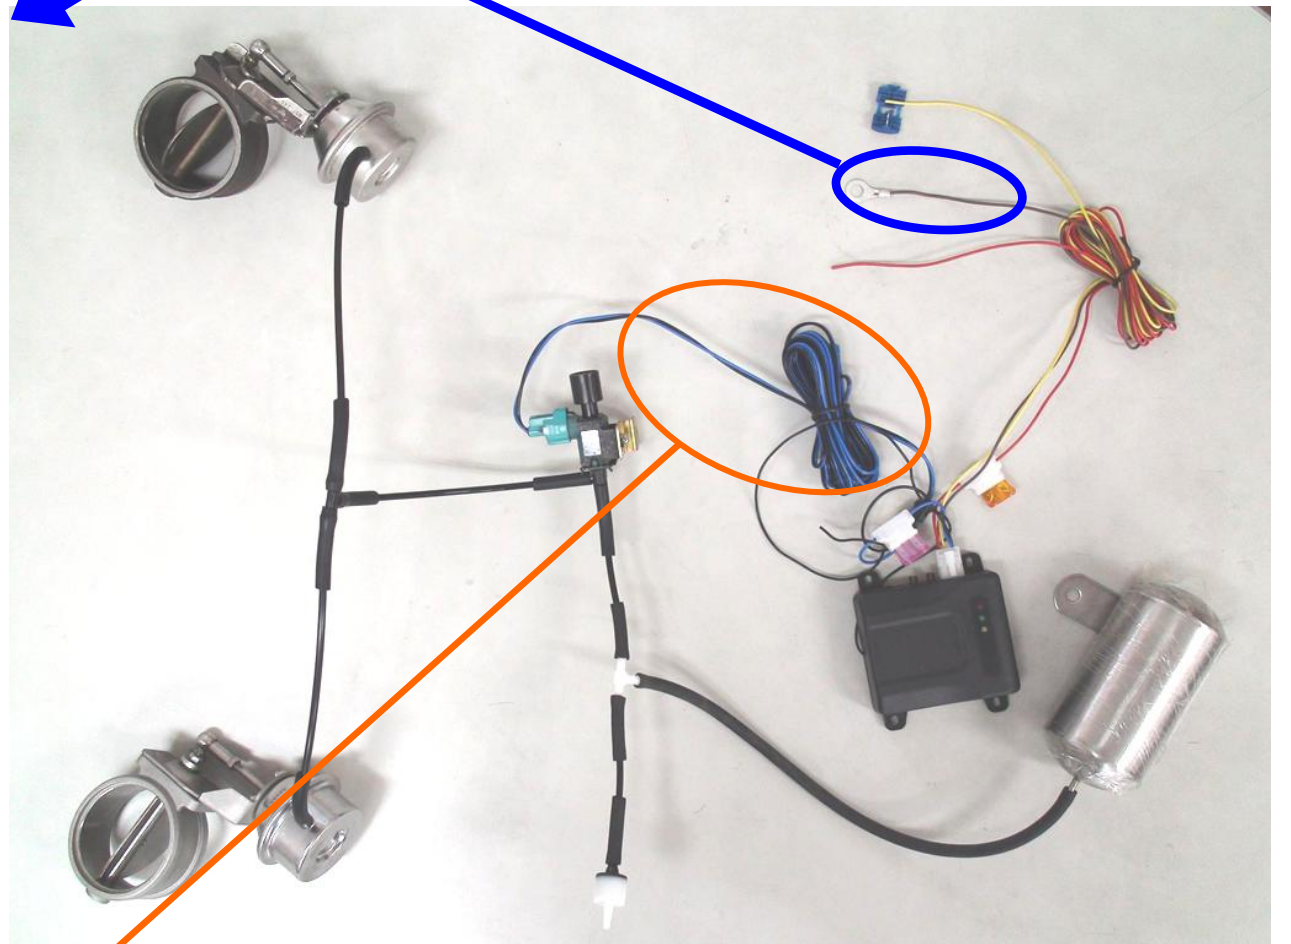

THE PLACE IS LEFT FRONT WHEEL BACK.

三、CONNECT ELECTRIC VALVE、ONE WAY VALVE AND VACUUM CANISTER

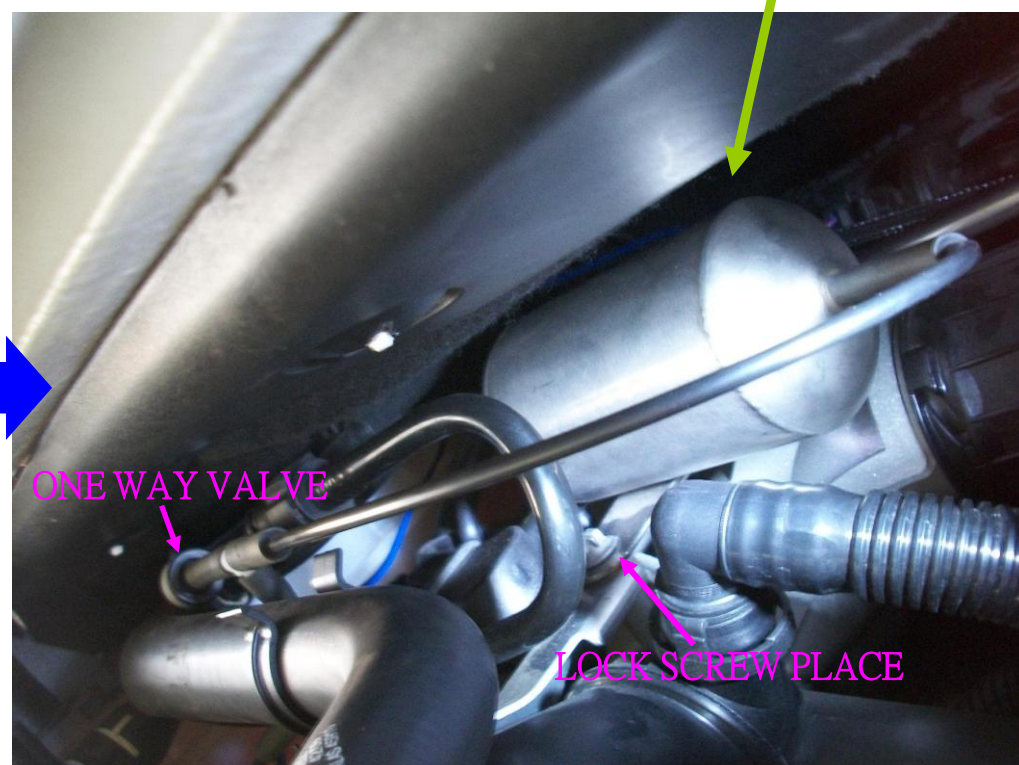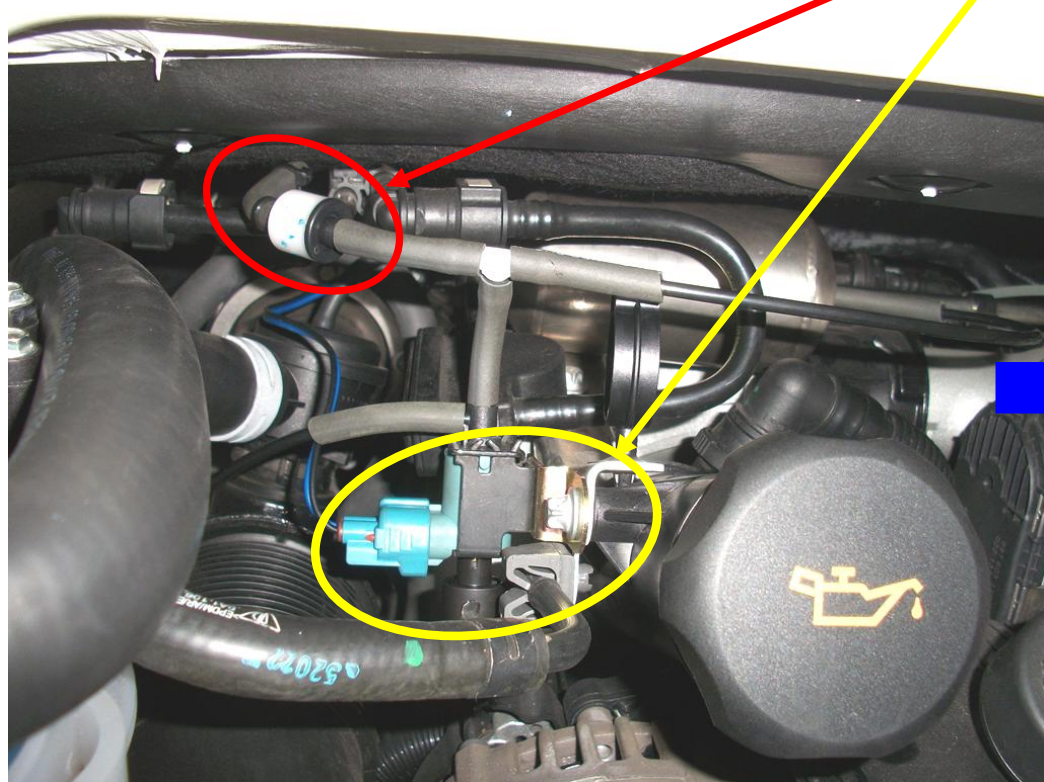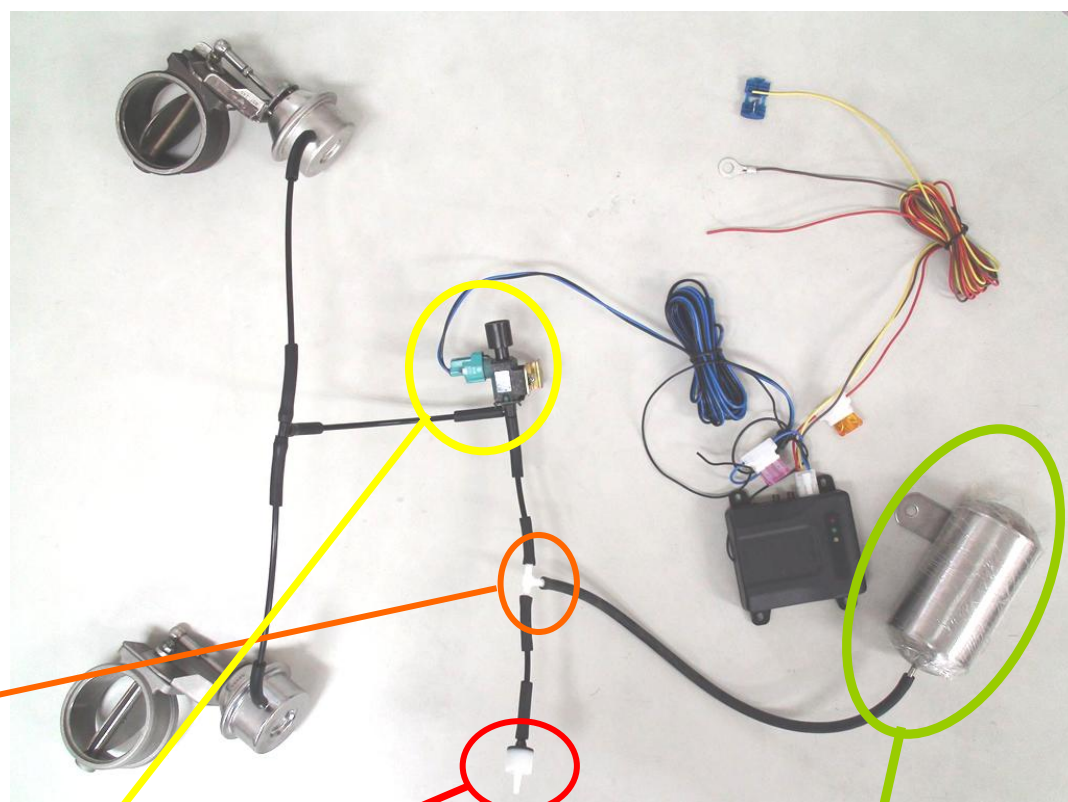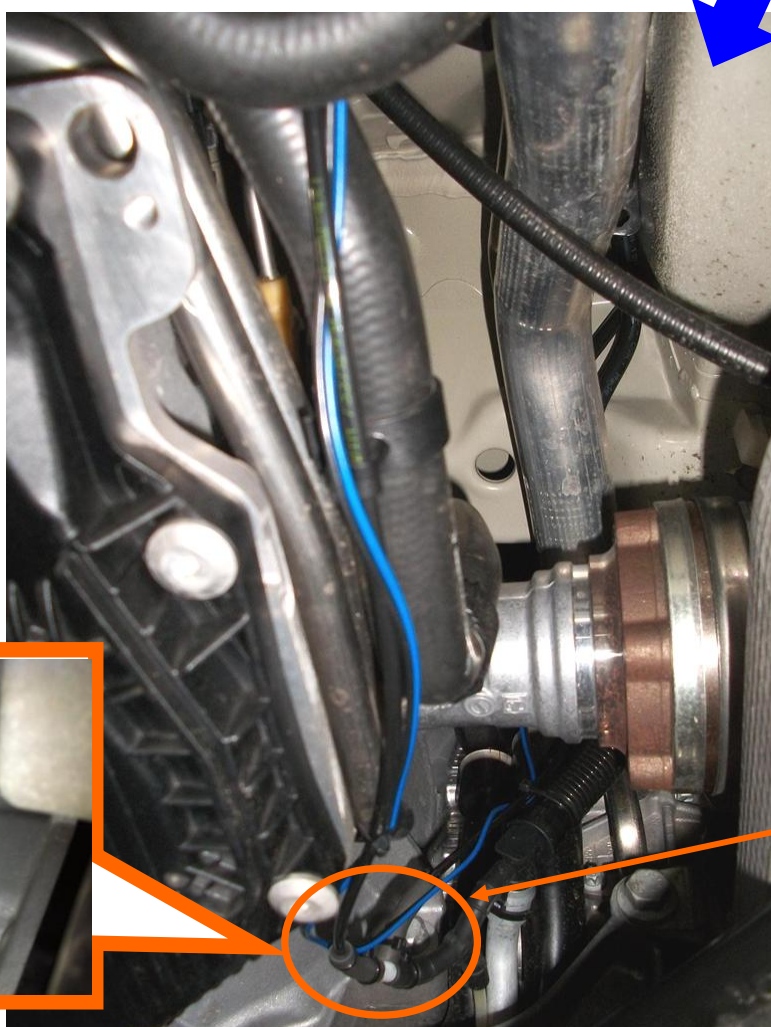

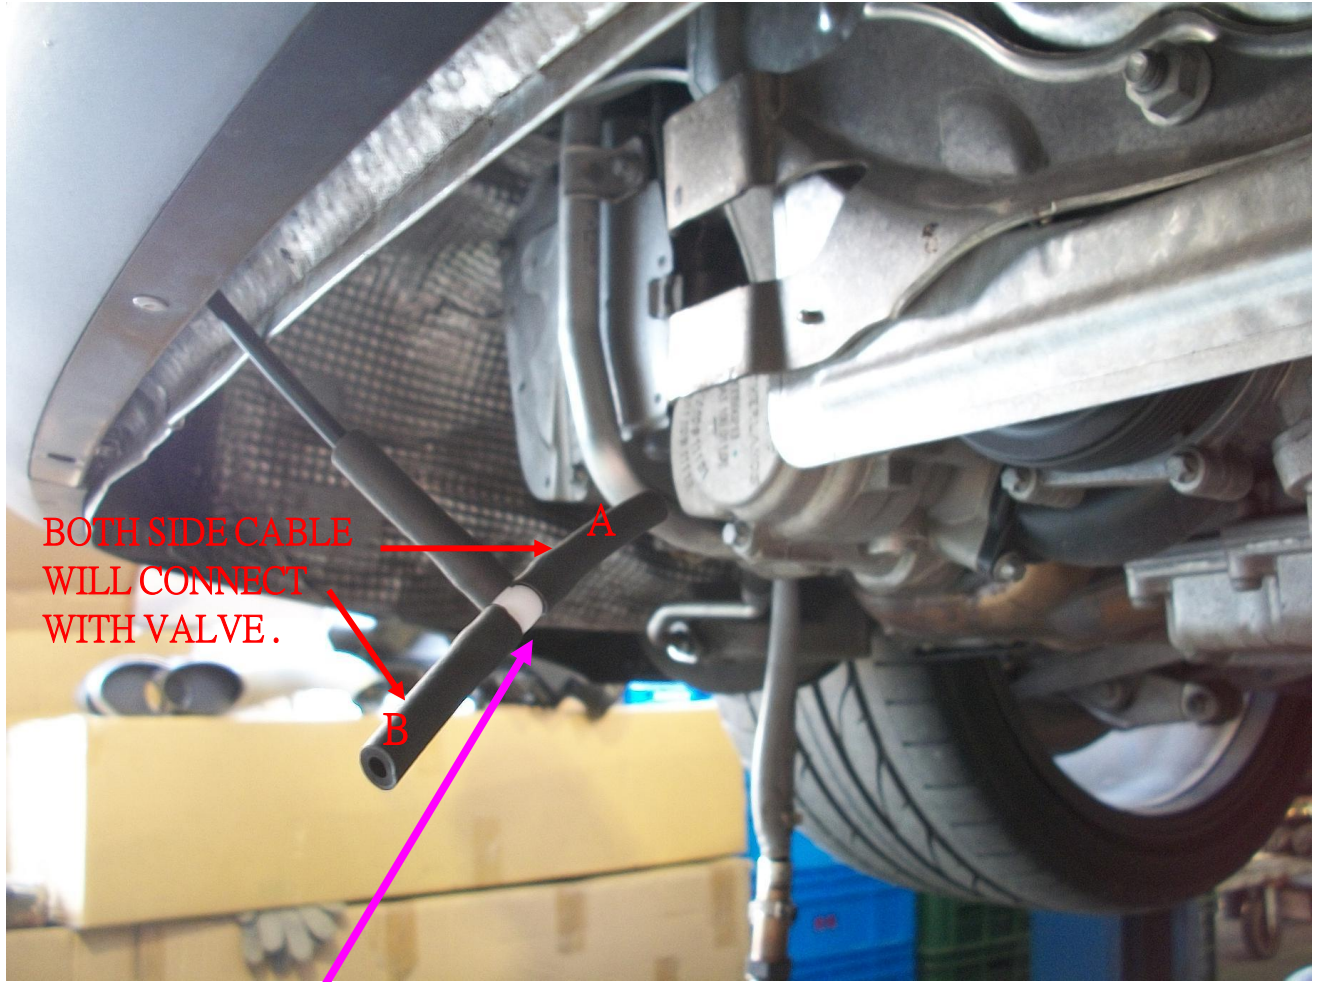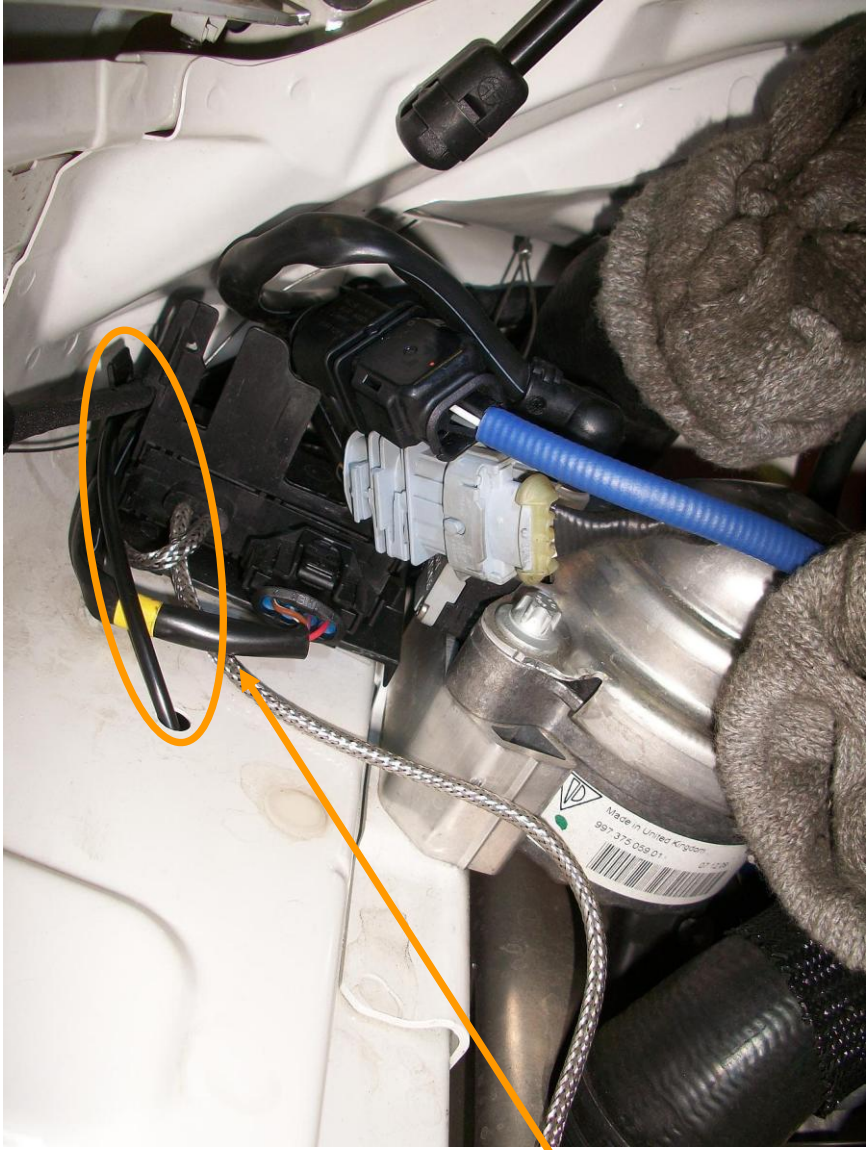

BOTH SIDE CABLE
WILL CONNECT
WITH VALVE.

WHEN YOU PUT VALVETRONIC MUFFLER IN AND
CONNECT WITH VACUUM TUBE (A · B), YOU ARE
REALLY COMPLETED INSTALLATION.

