



# MILLTEK SPORT // EXHAUST FITTING MANUAL



# Milltek Sport //

# Exhaust Fitting Manual

---



## BEFORE YOU START

- Check all the components against the packing list.
- For safety purposes and ease of installation, wherever possible take your vehicle to a qualified installer with a vehicle lift.
- If carrying out a home-installation, park your vehicle on a level surface and allow time for the vehicle and exhaust to cool down.
- Remember to always use jackstands to support the vehicle when working underneath.
- Wear protective clothing, including eye shields.
- Disconnect the battery if working near electrical connections.




## REMOVING THE STOCK SYSTEM

- Spray all bolts, joints and mounts with releasing fluid; allow to penetrate for about an hour.
- Release all connectors or clamps on the system and then start to dismantle the system from the rear forwards. Some stock systems are installed in one piece by the car manufacturer before the suspension or rear axle are installed, these systems will need to be cut to be removed.
- Stock systems are heavy, so make sure that you have help or can adequately support the system when it is released.
- Sometimes removing the rubber hangers can be difficult, removing the bracket from the body may be a better solution.

Continued...

# INSTALLING THE MILLTEK SYSTEM

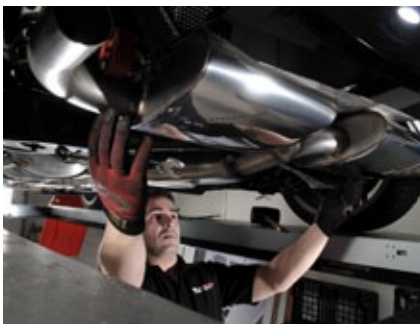

- Remove all protective packaging and trial fit the units together on the ground, make sure that each joint has a clamp and that the rubber hangers are transferred from the stock system, replace any worn or damaged mounts.
- Smear a small amount of hi-temperature silicon sealant inside each slotted joint or flange face, this will help prevent leaks on start-up and prevent the pipes seizing together.
- Install the system, front to back without clamping any joints.

- Position the system so that the hangers are ideally inclined to the front of the car by 10-15mm, these hangers will then move into their correct position when the system is hot and expands.
- Make sure that there is adequate clearance around the system, remembering that the system will expand by up to 25mm when hot.

- When the system is in the optimum position, tighten up the clamps from the front to the back, adjusting the system as necessary. Do not over tighten the clamps.



Continued over...



## RUNNING THE MILLTEK SYSTEM FOR THE FIRST TIME

- Wipe off all oil, grease and fingerprints from your Milltek system.
- Make sure that all covers, heat shields and brackets have been replaced.
- Reconnect the battery if necessary.
- Do not start the engine in an enclosed space, adequate ventilation is always required.
- Start the vehicle and allow to run at tick over until the system is warmed up.
- Check the system for leaks; it's not unusual for condensation to find its way out of the joints in the warm-up phase.
- Take your vehicle for a test drive and allow the vehicle to reach optimum running temperatures. After test drive; re-check all the joints and clearances whilst the exhaust is still hot, re-adjust if necessary.

### WARNING!

Please note that after test driving the vehicle, the exhaust components will be hot, use gloves and take extra care.



DISTRIBUTION AND SALES CENTRE  
Unit 8, Victoria Way, Pride Park  
Derby DE24 8AN ENGLAND

t: +44 (0)1332 227280  
f: +44 (0)1332 227289  
e: info@millteksport.com