



07-08 SUZUKI GSXR1000

www.werkesusa.com

(800)736-2114

<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>


REMOVE: Stock exhaust canisters (1-bolt and 1-clamp on each side). *NOTE* You will need to remove allen bolt from belly pan on right side to access the clamp FIG (A).

REMOVE: Lower exhaust collector. Should look like FIG (A) at this point.

INSTALL: WerkesUSA canister, use supplied clamp, 8mm Bolt and Washer.

VERIFY: All hardware and clamp are secured tightly.

CLEAN: With WD-40 or similar before starting.

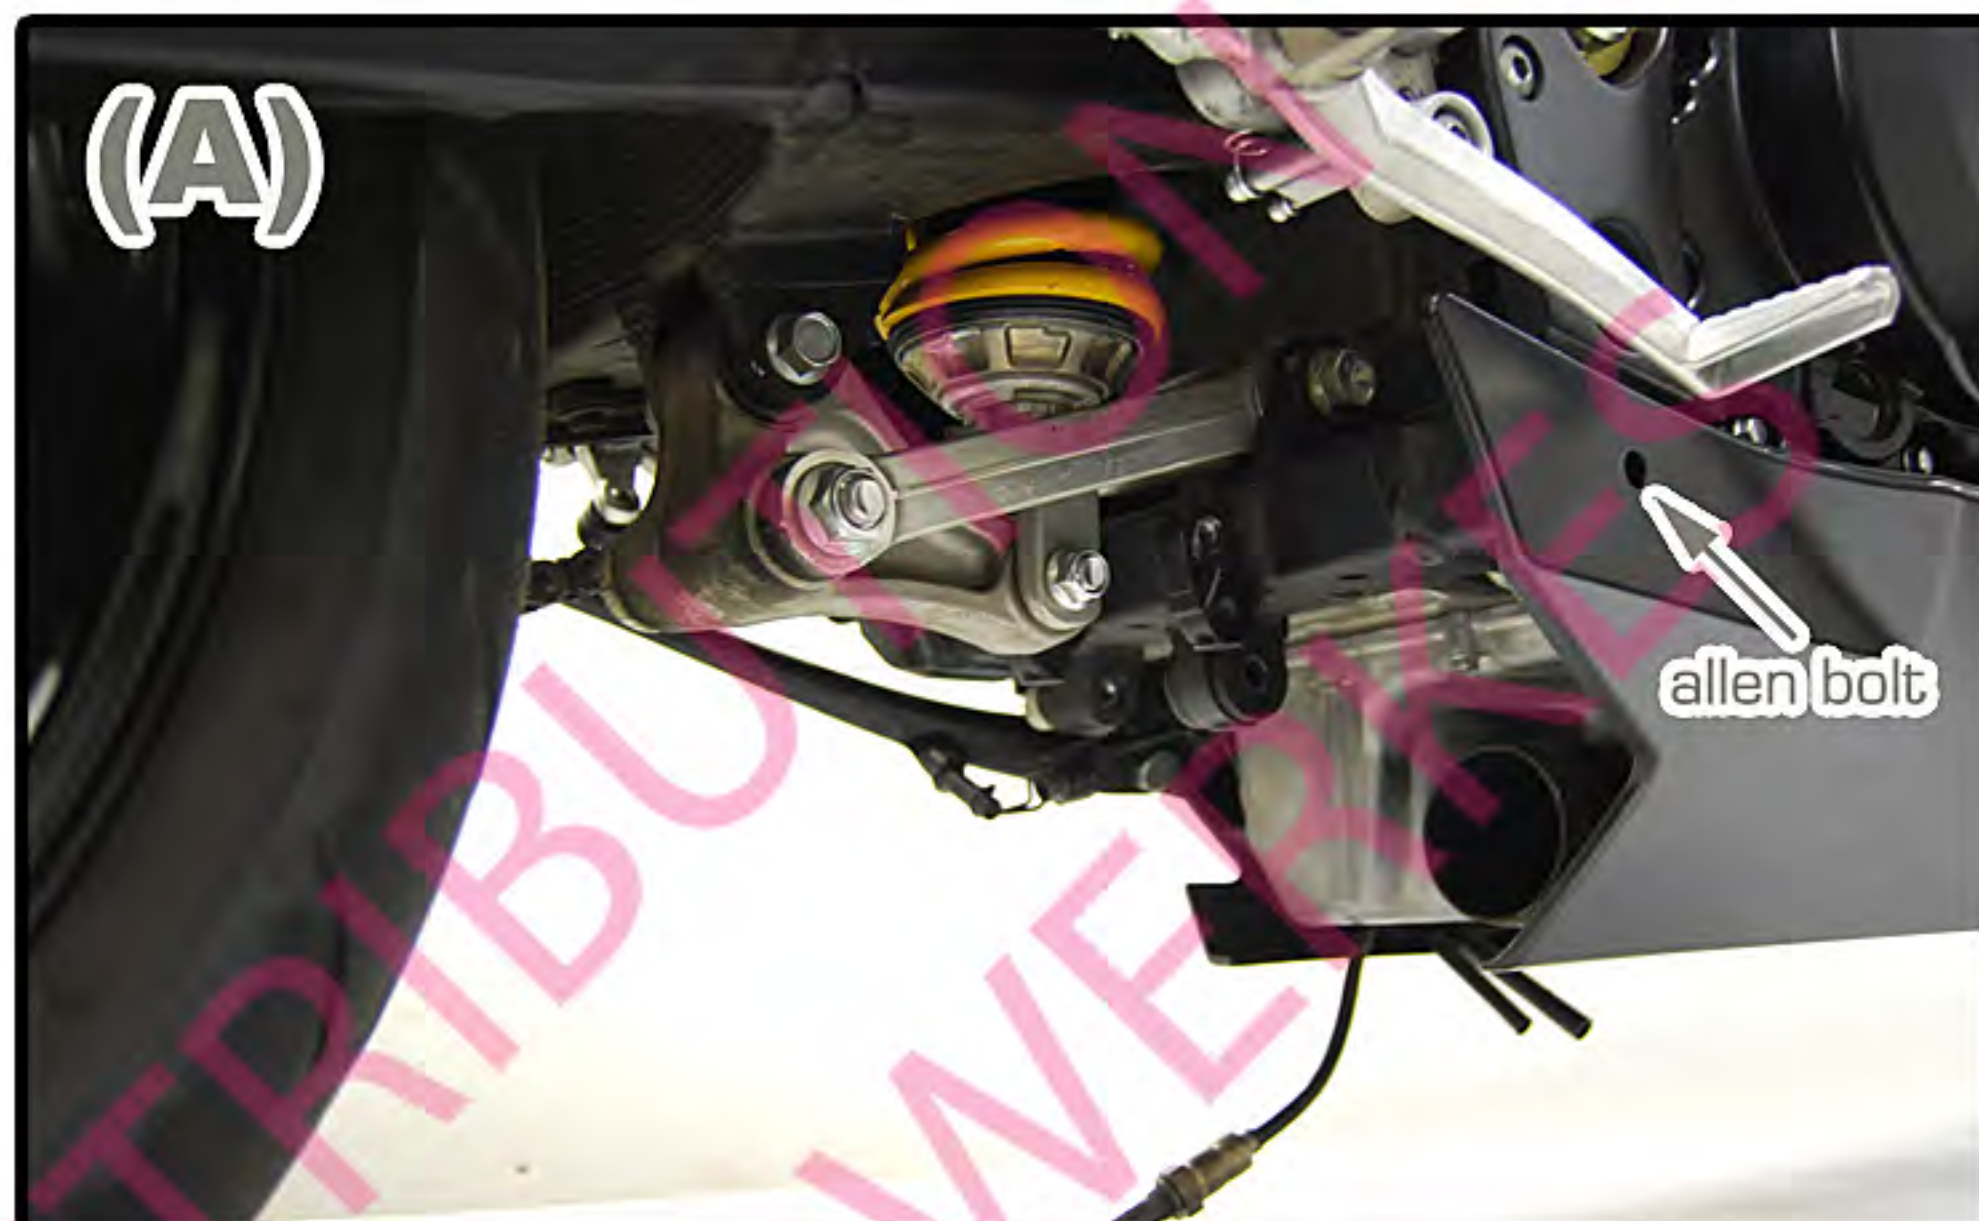

****IMPORTANT**** To insure uniform coloring thoroughly clean with WD-40 or like product before starting motorcycle ****IMPORTANT****

PARTS LIST:

- 1- WerkesUSA Canister
- 1- 2.5" Stainless Steel Clamp
- 1- 8x16 Bolt
- 1- Washer



The purchaser releases Competition Werkes inc from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident, and may also render the vehicle illegal for use on public roads.