





TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

## Trail Armor Kawasaki Teryx KRX 4 Full Skids TA012FULLSKID-KAW-KRX4

### Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. All Trail Armor products are designed, engineered, and fit to new vehicles and their specifications. Damage, modifications, and extreme wear may cause and require modifications to the product and/or your vehicle to insure proper fitment.

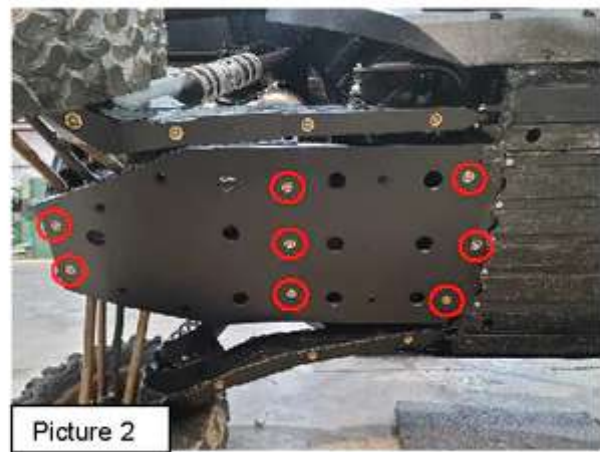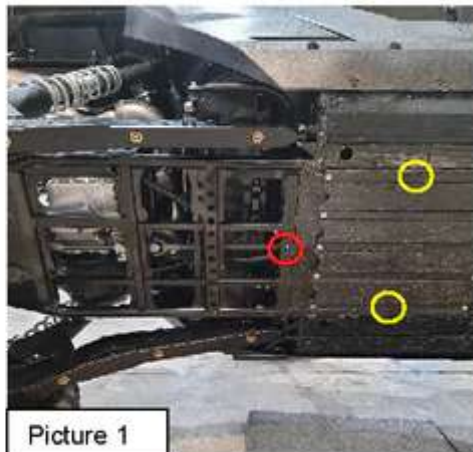

- A. Remove OEM hardware and plastic skids and discard. Leave all metal plates intact. Remove (2) OEM bolts shown in yellow from the rear metal plate in Picture 1.
- B. Locate the small rectangular spacer from the Trail Armor skid set. Also, locate (1) supplied M6-1.0 x 20 mm. bolt. Holding the spacer into position just behind the metal floor pan, insert the 20 mm. bolt through the center recessed hole into the frame rail. See Picture 1. Tighten securely.



TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

- C. Locate Panel D of the Trail Armor skid set. Also, locate (8) supplied M6-1.0 x 25 mm. bolts and (8) supplied bowl washers. Holding Panel D into position, insert (1) screw and washer into each of the (8) holes as shown in Picture 2. Loosely tighten.
- D. Locate Panel C of the skid set. Also locate (1) supplied M6-1.0 x 25 mm bolt and (1) supplied bowl washer. Slide Panel C underneath the center washer of Panel D. Insert (1) 25 mm bolt and washer at the front center of Panel C. See Picture 3. Loosely tighten.
- E. Locate Panel B of the skid set. Also, locate (1) supplied M6-1.0 x 25 mm. bolt and (1) supplied bowl washer. Slide Panel B underneath the center washer of Panel C. Insert (1) 25 mm. bolt and washer at the front center of panel B. See Picture 4. Loosely tighten.
- F. Locate Panel A of the skid set. Also, locate (2) supplied M6-1.0 x 25 mm. bolts, (4) supplied #14 x 1" TEK self-drilling screws, and (6) supplied bowl washers. Insert the (2) 25 mm. bolts and (2) bowl washers into the rear (2) holes of Panel A. Insert the (4) 1" TEK screws and (4) bowl washers into the front (4) remaining holes. See Picture 5. Align all panels and tighten securely. **DO NOT OVERTIGHTEN!**






TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700


# Installation Instructions

G. Locate and remove (5) OEM factory Phillips head screws in the side rocker panel. See Picture 6.

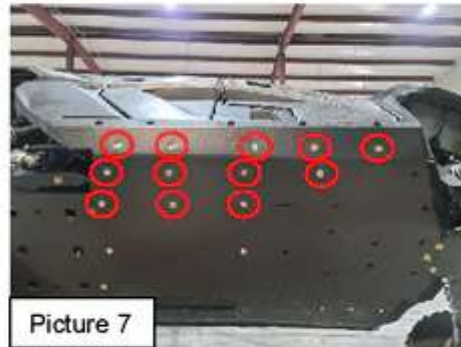

H. Locate Panel E of the skid set. Also, locate (12) supplied M6-1.0 x 25 mm. bolts and (12) supplied bowl washers. Holding Panel E into position, insert (12) 25 mm. bolts and washers as shown in Picture 7.

I. Locate (3) supplied #14 x 1-1/4" TEK self-drilling screws and (3) supplied bowl washers. Insert (1) 1-1/4" TEK screws and washers into the remaining holes of Panel E. See Picture 8. Repeat steps G thru I for the opposite side. See Picture 9.

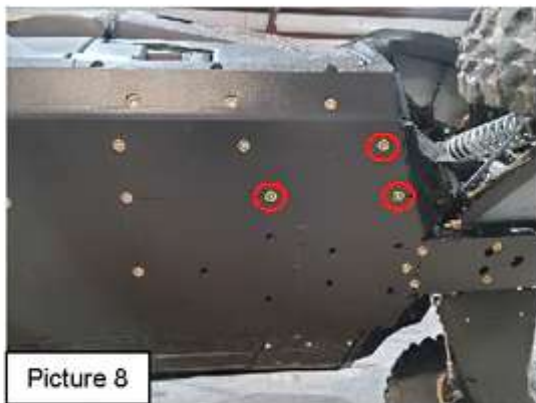



TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

- J. Locate (7) supplied #14 x 1" TEK self-drilling screws and (7) supplied bowl washers. Insert (1) 1" screw and bowl washer into each of the remaining holes of Panel B. See Picture 10.
- K. Locate (6) supplied #14 x 1" TEK self-drilling screws and (6) supplied bowl washers. Insert (1) 1" screw and bowl washer into each of the remaining holes of Panel D. See Picture 11. See Picture 12 for Final Install.

