

PRO ARMOR

EVERY RIDE HAS A STORY



POLARIS XP1000

FRONT A-ARM ARMOR W/ SUPPORT GUARDS (P141020)


INSTALLATION INSTRUCTIONS

WARNING

-- Make sure to read the entire instructions carefully before installation to prevent injury to yourself or even damage to your UTV.

PARTS LIST:

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	P141020-06	SHORT MOUNTING BRACKET ASSEMBLY	2
2	P141020-04	LONG MOUNTING BRACKET ASSEMBLY	4
3	P141020HDW	HARDWARE KIT	1
4	P141020-07	PASSENGER SIDE PRE-PACKAGE ASSEMBLY	1
5	P141020-08	DRIVER SIDE PRE-PACKAGE ASSEMBLY	1

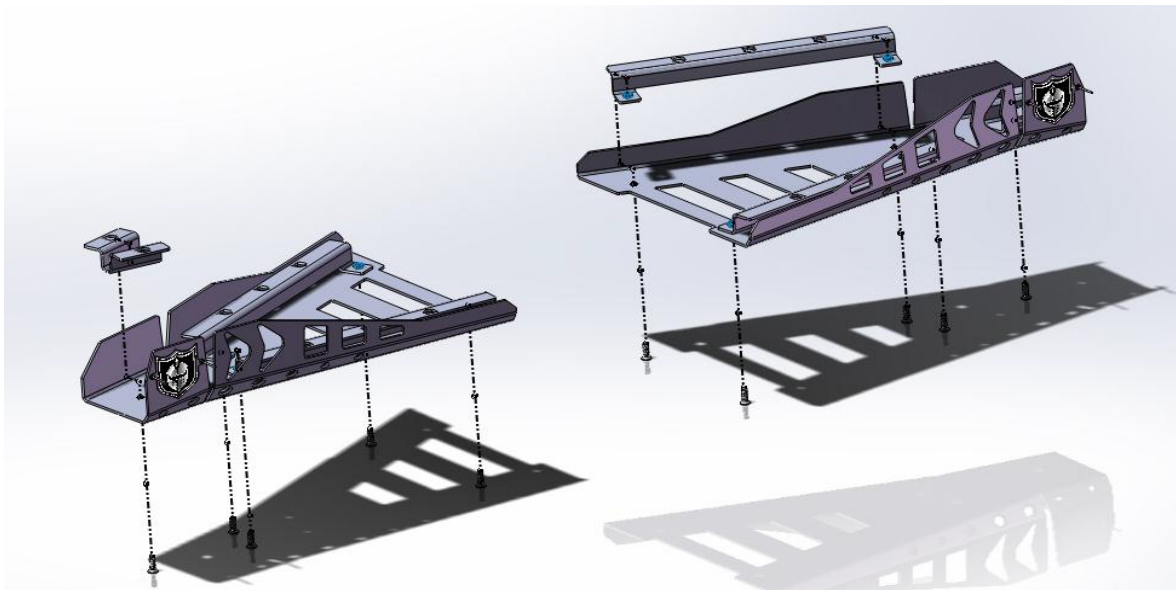


[For further information on installation instructions and warnings please visit our website WWW.PROARMOR.COM or contact customer service at 1-888-31ARMOR.]

HARDWARE LIST:

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	HDWB0118	BOLT, M6 X 1.00 X 20MM FLAT HEAD BOLT	10

INSTALLATION:

1. Pre-install the two (2) Long Mounting Brackets to the guards loosely, before setting into place. This will aid in keeping the guard in place while you install the 2nd long bracket to the guard. Position the left A-Arm Guard under the vehicles left front A-Arm using both long brackets first.
2. After both long brackets are installed, use an M6 bolt to secure the short mounting bracket to the outside of the a-arm. Once, all mounting brackets are loosely installed you can position the guard, so the guard runs parallel with the a-arm tubes and even clearance throughout.
3. Repeat steps for opposite side A-Arm Guard.
4. See figure below for visual reference.

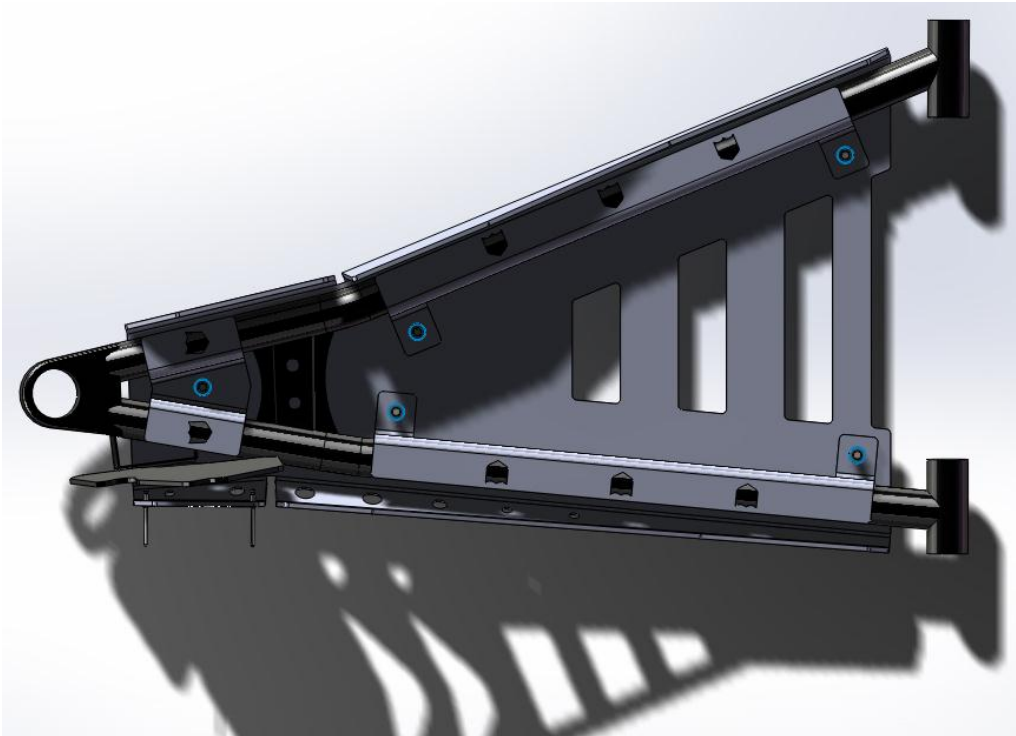

[For further information on installation instructions and warnings please visit our website WWW.PROARMOR.COM or contact customer service at 1-888-31-ARMOR.]