



## PRO XP FRONT DOOR KNEE PADS (P199Y320)


Note: Door bags can be installed with door mounted or unmounted to vehicle.



Run two door bag straps through door slots at locations shown. Then back up to door bag velcro, securing door bag to door.



Using the Provided bolt place door bag in place and secure the door bag to front zipper door lining (1- bolt for each, inside zipper compartments) as shown. Repeat for opposite door.

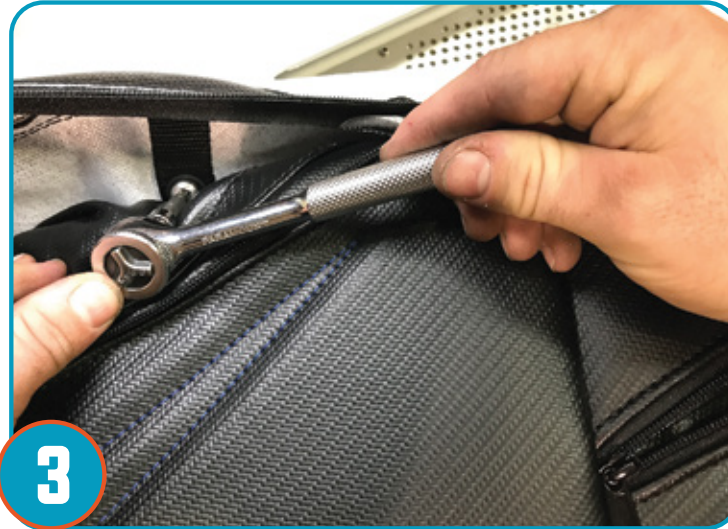

Using the Provided bolt secure the door bag to door lining to main zipper compartment as shown. Repeat for opposite door.



- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
  - **Always** wear and use proper safety equipment when using any Pro Armor product.
  - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
  - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

### **WARNING**