




Generic Instructions For Tape Mount Accessories

1. Test fit item to the vehicle before removing plastic liner from mounting tape. This will aid in aligning the item before adhesion.


2. Clean bonding surface with an untreated, lint-free cloth and isopropyl alcohol (rubbing alcohol).

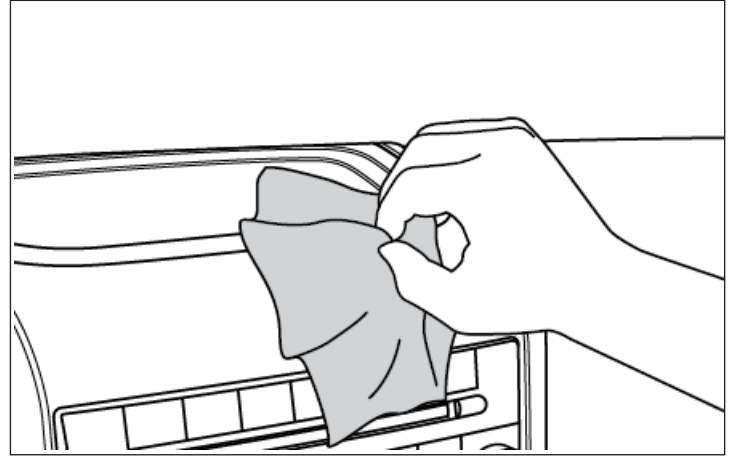

3. Remove only enough plastic liner to be easily gripped when item is installed.

Note: The plastic liner of the shorter tape sections may need to be fully removed before installing.

4. Install item in proper mounting position while keeping partially removed liner ends accessible.

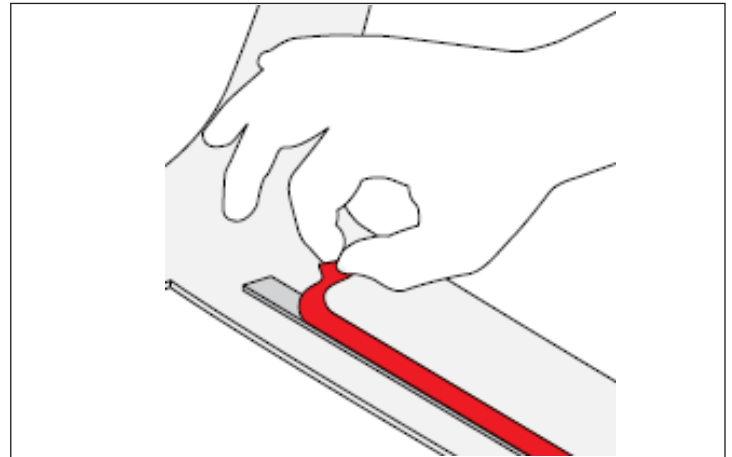

5. Firmly hold item in proper mounting position while pulling the exposed plastic liner to completely remove. Maintain pressure on installed item for 60 seconds to ensure proper contact. Full adhesion occurs within 24 hours of application.

