




# INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-32084-B/P

MAKE: RAM  
 MODEL: TRX  
 YEAR: 2021-2022  
 ENGINE: V8-6.2L (sc)

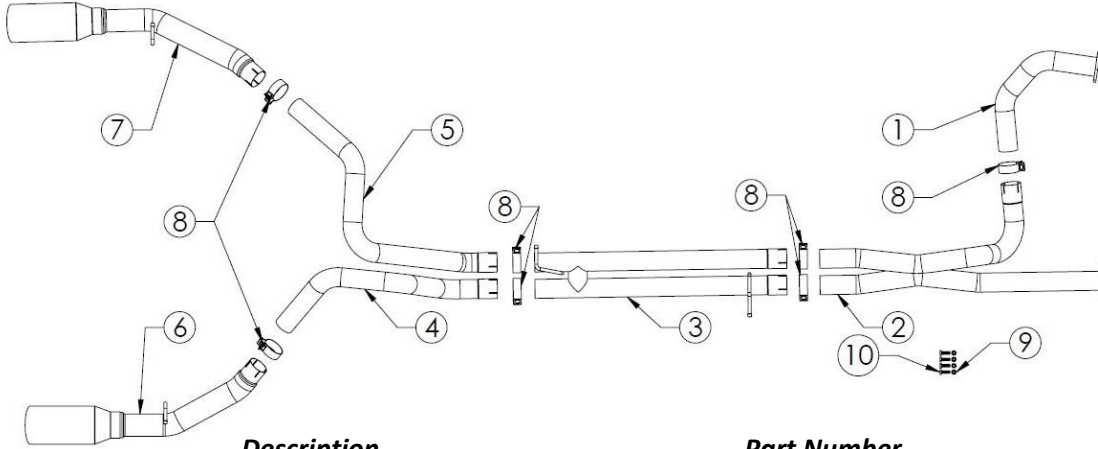

Item	Description	Part Number	Quantity
1	Front Pipe	05-245186	1
2	X-Pipe	05-245192	1
3	H-Pipe	05-245187	1
4	Right Over-Axle	05-245189	1
5	Left Over-Axle	05-245188	1
6	Right Tail Pipe (Polished Tip)	05-245191	1
6	Right Tail Pipe (Black Tip)	05-245191B	1
7	Left Tail Pipe (Polished Tip)	05-245190	1
7	Left Tail Pipe (Black Tip)	05-245190B	1
8	Clamp, Band: 3"	05-41055	7
9	Nut, M10 x 1.25	03-50400	4
10	Bolt, M10 x 1.25 x 35mm	03-50401	4

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.



## INSTALLATION INSTRUCTIONS

Cat-Back Exhaust

49-32084-B/P

**MAKE:** RAM  
**MODEL:** TRX  
**YEAR:** 2021-2022  
**ENGINE:** V8-6.2L (sc)

---

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. To remove the OE exhaust without cutting it will be necessary to remove the spare tire and heat shield.
6. Loosen the clamps securing the tail pipes to the exhaust and remove the tail pipes and tips.
7. Loosen the two clamps securing the OE muffler assembly to the OE X-Pipe and remove the mufflers.
8. Remove the Four nuts securing the OE exhaust system to the catalytic converters.
9. Remove the X-pipe.
10. Slide a clamp onto the front of the aFe POWER X-Pipe and install the front pipe into the X-Pipe
11. Using the hardware supplied and the OE gaskets, secure the X-Pipe front pipe combo onto the catalytic converters.
12. Secure the H-Pipe to the X-Pipe with the supplied clamps.
13. Install the H-Pipe hangers into the OE isolators.
14. Install the Over axle tubes with the supplied clamps. Do not fully tighten, leave loose enough to allow for adjustment.
15. Install the Tailpipe/Tip assemblies using the provided clamps.
16. Adjust System for alignment, and tighten all clamps.
17. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
18. Start from the front of the aFe POWER exhaust system and evenly tighten all clamps and fasteners.
19. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
20. Remove vehicle from jacks stands.
21. It is recommended to re-tighten all clamps and hardware after 50-100 miles.