




## INSTALLATION INSTRUCTIONS

### Universal Fit 3" Resonator Delete Pipe 304 Stainless Steel 49M10010

**CAUTION:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation. aFe recommends professional installation on our products.

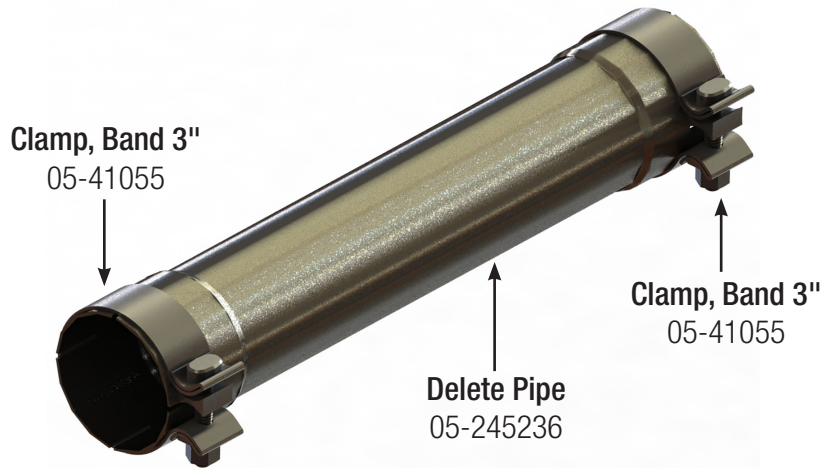

**Step 1.** (Read Instructions prior to installation) for faster removal and installation of exhaust a trained professional is recommended for this procedure.

**Step 2.** Secure stock exhaust with jack/stands.

**Step 3.** Loosen both band clamps on the resonator pipe.

**Step 4.** Remove the exhaust behind resonator, remove resonator.

**Step 5.** Using the (x1) supplied 3.0" band clamp, install the resonator delete pipe into the front of exhaust.

**Step 6.** Using the (x1) supplied 3.0" band clamp, install the remainder of exhaust behind resonator delete pipe.

**Step 7.** Align exhaust and tighten clamps.

**Step 8.** Start the vehicle and check for any leaks.

**Step 9.** Double check all work and ensure everything is tight Congratulations, your system is now complete and fully Installed! It is recommended to re-tighten all clamps and bolts after 50-100 miles.

**Note: For custom applications, the existing exhaust may need to be cut.**