

Polaris 850 All RMK's Complete Clutch kit 0-3000ft Boondocking Kit (123-145) FOR STRAIGHLTINE PERFORMANCE PIPE YOU MUST RUN (123-156)

Parts included in Clutch Kit:

Operating RPM:

1-Primary Spring 123-101 (silver)

3-Primary Clutch Weights 125-137 (64-80g)

1-Secondary Spring 125-129 (black/white)

1-TSS-04 Helix 125-132

1-125-135 Weight Adjustment Kit

6- 125-133 Extra Tungsten Washers

Operating RPM – 7950-8200 Stock or Straightline Pipe

Settings:

Helix Setting - Side A

Clutch weight starting point:

Base Hole – 6.5g Total

2-Tungsten washers

1 - Small Washer

1 – Long Bolt

Center Hole – 6.1g Total

2 – Tungsten Washers


1 – Long Bolt

Tip Hole – 2.4g Total Weight

 $2-\ Steel\ Washers$

1 – Short Bolt

<u>See Clutch Weight Box for overview on</u> weights/washers/bolts and tungsten,

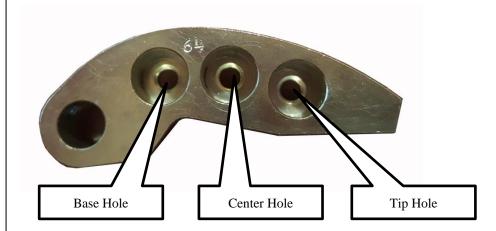

Remove the primary clutch and install the weights and primary spring. Remove secondary clutch and install new helix in proper setting, with spring. Inspect all internal clutch components for wear. If excesses wear is prevalent replace needed items.

Check out Straightline @ www.straightlineperformance.com

Tech questions can be handled via e-mail at tech@straightlineperformance.com





